


QUICK INSTALLATION GUIDE

H2TU-C-388 LIST 3E LINE UNIT

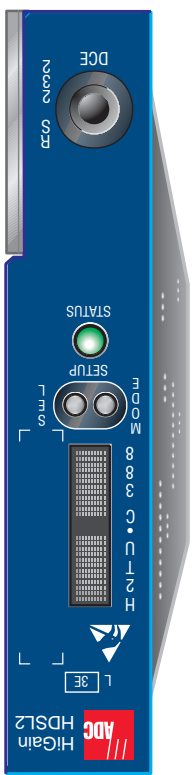

February 28, 2001
1203511



Product: 150-2406-35
CLEI: VAC1KDE
Document: LTPH-Q1-1002-02, Issue 2



Technical Assistance
800.638.0031
714.730.3222
Fax: 714.832.9924
Tel: 714.832.9922
Tustin, CA 92780-7013
14402 Franklin Avenue
ADC DSL Systems, Inc.

©Copyright 2001 ADC DSL Systems, Inc. All rights reserved. Information contained in this document is company private to ADC DSL Systems, Inc., and shall not be modified, used, copied, reproduced or disclosed in whole or in part without the written consent of ADC.

Copyright Information

ADC and Sonpex are registered trademarks of ADC Telecommunications, Inc. HiGain is a registered trademark of PatGain Technologies, Inc. Other product names mentioned in this installation guide are used for identification purposes only and may be trademarks or registered trademarks of their respective companies.

Trademark Information

- Equipment standard, UL-1950/CSA-C22.2 No. 950-95: Safety of Information Technology Equipment
- GR 1089-CORE - Electromagnetic Compatibility and Electrical Safety
- GR 63-CORE - Network Equipment-Building System (NEBS) Requirements

This equipment has been tested and verified to comply with the applicable sections of the following standards:

Standards Compliance

All wiring external to the products should follow the provisions of the current edition of the National Electrical Code.

Any changes or modifications made to this device that are not expressly approved by ADC DSL Systems, Inc. voids the user's warranty.

Modifications

Product warranty is determined by your service agreement. Contact your sales representative or Customer Service for details.

Limited Warranty

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Class A Compliance

H2TU-C-388 LIST 3E

The H2TU-C-388 List 3E is the Central Office (CO) side of a T1 Transmission system. When an H2TU-C is used in conjunction with a HiGain High-bit-rate Digital Subscriber Unit 2 (HDSL2) remote unit (H2TU-R), the system provides 1.552 Mbps transmission on one unconditioned copper pair over the full Carrier Service Area (CSA) range. The CSA includes loops up to 12,000 feet of 24 AWG or 9,000 feet of 26 AWG wire, including bridged taps.

FEATURES

- Front-panel status LED, craft port, and four-character status display
- Bit Error Rate (BER) alarm option
- Grounded loop detection
- Ultra-low wander
- Loss of Signal (LOS)/Alarm Indication Signal (AIS) payload alarm option
- Maintenance screens for inventory, provisioning, troubleshooting, and performance monitoring
- Digital Data Service (DDS) latching loopback option
- Payload (PL) or HiGain (HG) loopback source identification
- Bipolar Violation Transparency (BPVT) option
- Report menu option for downloading status and performance monitoring data to a file
- Performance Report Messaging (SPRM and NPRM)
- Supports the inband 100 loopdown and 100000 loopup commands when the SmartJack (SMJK) loopback option is enabled
- Sources sealing current when connected to an H2TU-R-402 List 5E or higher

SPECIFICATIONS

Operating Temperature	-40 °F to +149 °F (-40 °C to +65 °C)
Operating Humidity	5% to 95% non-condensing
HDSL2 Span Voltage	0, -185 Vdc
Mounting	Double Dual Module Plus (DDM+) high-density
HDSL2 Line Rate	1.552 Mbps Overlapped Pulse Amplitude Modulation Transmission with Interlocking Spectra (OPTIS)
HDSL2 Output	+16.8 dBm ±0.5 dB, 135 Ω (0-450 KHz at CO side) +16.5 dBm ±0.5 dB, 135 Ω (0-350 KHz at remote side)
Maximum Loop Attenuation	35 dB at 196 KHz, 135 Ω
DSX-1 Line Rate	1.544 Mbps ±200 bps
DSX-1 Line Format	Alternate Mark Inversion (AMI) or Bipolar with 8-Zero Substitution (B8ZS)
DSX-1 Frame Format	Extended SuperFrame (ESF), SuperFrame (SF), or Unframed (UNFR)
DSX-1 Pulse Output	6 V ^{pk-pk} , pre-equalized for 0 to 655 feet of ABAM cable
DSX-1 Input Level	+1.5 to -7.5 dB DSX

1 INSTALLATION

Raise the H2TU-C-388 front panel and slide the unit into the CO shelf card slot. Lower and push on the H2TU-C-388 front panel to secure the unit in the shelf.

2 POWER-UP SEQUENCE

When the H2TU-C powers up, the four-character display illuminates and reports status messages.

If the H2TU-C is unable to communicate with the H2TU-R, it displays various alarm and status messages.

If the H2TU-C is able to communicate with the H2TU-R, the following occurs:


- 1 The Status LED flashes red while acquiring the H2TU-R and turns a steady green when the system is operating with no alarms. (The DS1 signal must be present.)
- 2 The four-character display reports margin (SNR) readings (should be ≥ 6 dB) and loop attenuation (should be <35 dB @ 196 KHz).
- 3 After the system powers up, alarm conditions that exist are reported on the display. (The H2TU-C reports alarms if no DS1 signal is applied.)

3 PROVISIONING

After installing the H2TU-C, perform these basic provisioning tasks by accessing the HiGain HDSL2 logon screen. Refer to the onscreen Help menu for navigational aids.


- 1 Connect a maintenance terminal to the craft port (see front-panel illustration inside), then press **CTRL** + **R** to refresh the logon screen, if necessary.
- 2 Select the Config menu, **Date and Time**, then type the date and time.
- 3 Select the Inventory menu, then type in the unit ID numbers.
- 4 Change the settings of any system parameters, if necessary, by selecting the Config menu, **Standard Options** or **ADC Options**. (Configuration options can also be set from the front panel using the MODE and SEL buttons. See the "Front-Panel Configuration Options Using MODE and SEL" table inside).
- 5 Once the H2TU-C is successfully installed and provisioned, access the Performance or Event Log menu to clear the Performance, Alarm History, or Event Log screens, or use Master Clear in the Config menu.



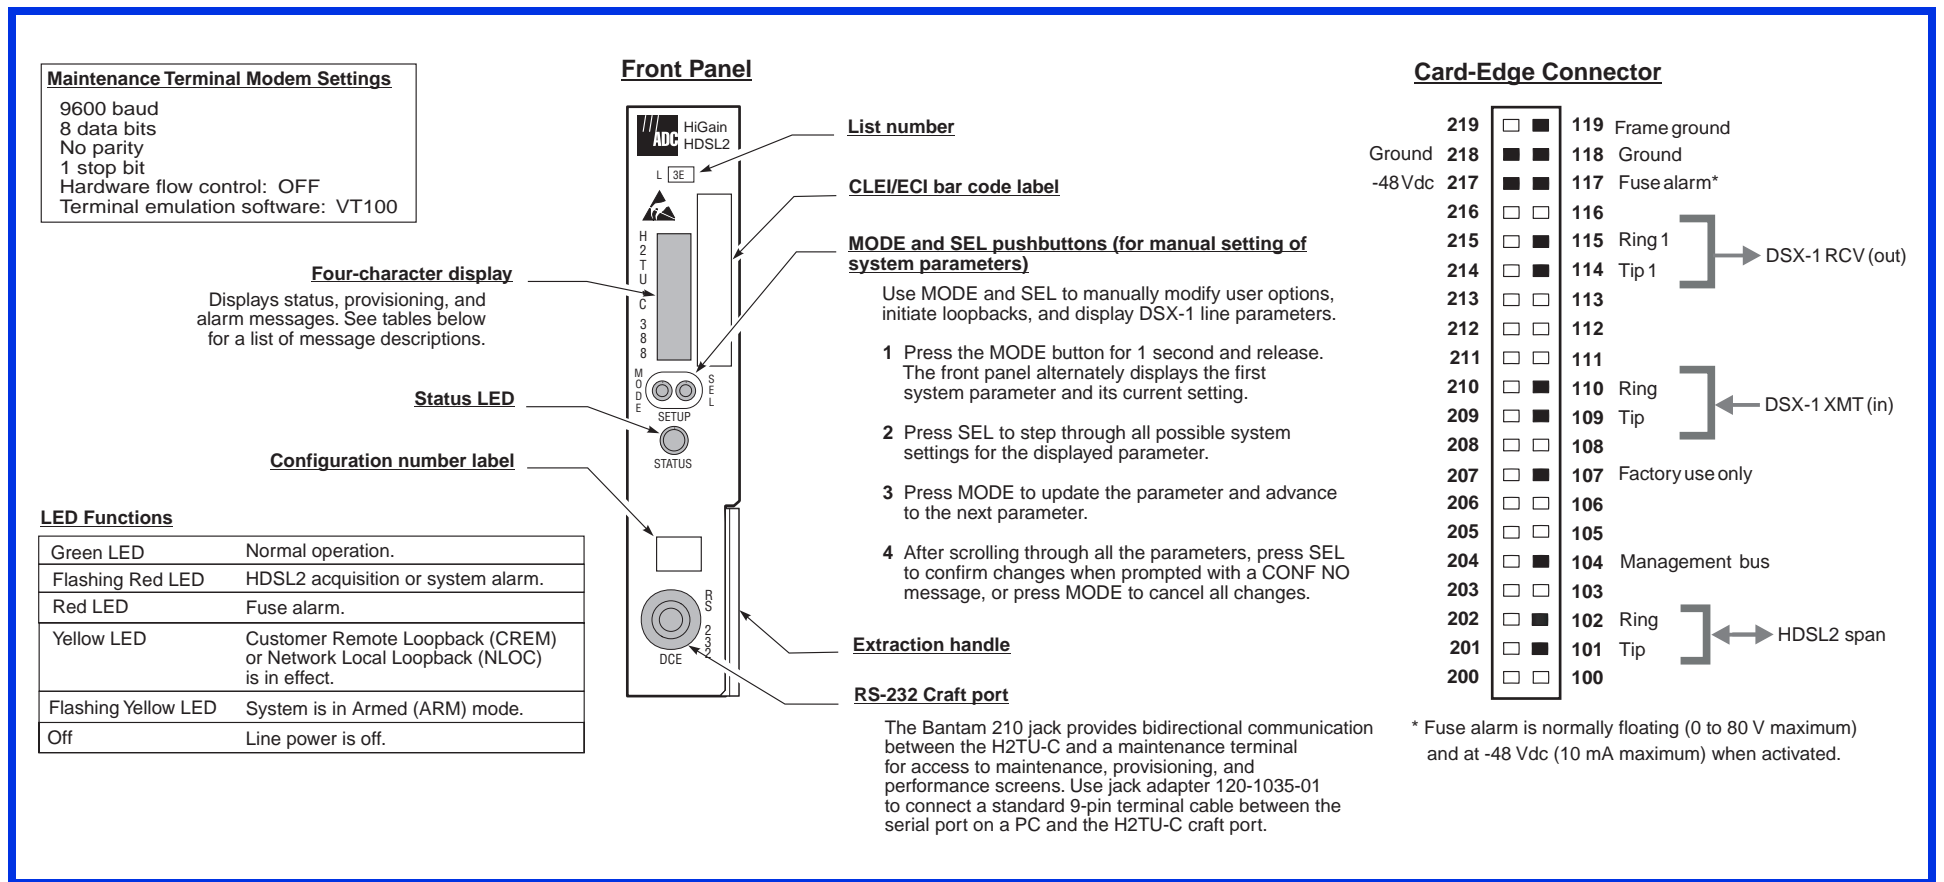

4 LOOPBACK TESTING

Initiate loopback testing from the HiGain HDSL2 Monitor screen or use the MODE and SEL buttons. The inband codes below can also be sent by a test set.

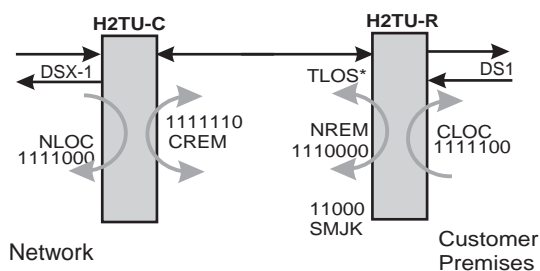

* When enabled, TLOS is an automatic loopback that occurs with a LOS at the remote DS1 input.

GNLB Loopback Commands

Loopback	Inband Code	Description
NLOC	1111000	DSX-1 signal is looped back to the network at the H2TU-C.
NREM	1110000	DSX-1 signal is looped back to the network at the H2TU-R.
SMJK	11000	DSX-1 signal is looped back to the network at the H2TU-R SmartJack module.
CREM	1111110	DS1 signal from customer is looped back to the customer at the H2TU-C.
CLOC	1111100	DS1 signal from customer is looped back to the customer at the H2TU-R.
Loopdown	11100	Deactivates any of the above loopbacks.

For more information about the maintenance screens, refer to the H2TU-C-388 List 3E technical practice, document number LTPH-TP-1001-xx. Contact Customer Service to obtain a copy of the practice.

Front-Panel Alarm Messages ^(a)

Message	Description
PWR FEED SHRT ^(b)	A short between the Tip and Ring of the HDSL2 pair.
PWR FEED GND ^(b)	The HDSL2 loop is grounded.
PWR FEED OPEN ^(b)	A line-power open condition.
SPN _n -LOSW	The HDSL2 loop has lost synchronization. The span closest to the network has highest priority.
LLOS	No signal is detected at the DSX-1 input to the H2TU-C-388.
RLOS	No signal is detected at the DS1 input to the H2TU-R.
LAIS	Local Alarm Indication Signal.
RAIS	Remote Alarm Indication Signal.
TRCI	An RAI alarm (yellow LED) from the CPE with an error-free signal from the line unit or network.
RRAI	An RAI alarm (yellow LED) from the Customer Premises Equipment (CPE) with errors from the line unit or network.
xxx-DBER	A system DS1 Bit Error Rate (BER) alarm. (xxx denotes either TUC or TUR.)
PRMF	H2TU-R Performance Report Messaging BER threshold exceeded at far end.
PRMN	H2TU-R Performance Report Messaging BER threshold exceeded at near end.
xxx-HBER	A system HDSL2 Block Error Rate (BER) alarm. (xxx denotes either TUC or TUR.)
xxx-MAL	The margin on the HDSL2 loop has dropped below the threshold setting. (xxx denotes either TUC or TUR.)
xxx-LA	The attenuation on the HDSL2 loop has exceeded the maximum threshold value. (xxx denotes either TUC or TUR.)

(a) Front-panel alarm messages are listed in order of priority. ALRM displays prior to any alarm message. Pressing the SEL button initiates an Alarm Cutoff (ACO) message.
(b) Message displays repeatedly as long as the alarm condition exists and is not included in the priority order.

Front-Panel Diagnostic Messages

Display Code	Description (normal operating messages in bold)
A=xx	The loop attenuation of the longest (maximum loss) span, measured in dB.
ACQ	The multiplexers of the H2TU-C-388 and H2TU-R are trying to establish synchronization.
A _n L	The multiplexers of the two devices on Span <i>n</i> are trying to establish synchronization with each other, where <i>n</i> is the number of the span.
ARM	Armed to respond to Intelligent Repeater Loop (ILR) codes.
BAD RT?	The H2TU-C is not receiving a response from the H2TU-R.
FERR	A framing bit error occurred at H2TU-C DSX-1 input.
FLDL	Flash download of firmware updates. (Contact Customer Service for update procedures.)
HES	H2TU-C HDSL2 loop cyclical redundancy check (CRC) error.
LBPV	A local bipolar violation has been received at the DSX-1 input to the H2TU-C.
M=xx	Indicates the power of the received HDSL2 signal relative to noise (S/N with respect to 21.5 dB). Any value of 6 dB or greater is adequate for reliable system operation.
MNGD	The H2TU-C is under control of the HMU-319 network management unit.
PWR FEED ON	Indicates that the HDSL2 loop is not grounded or shorted.
PWR FEED OFF	HDSL2 span power is turned off.
SIG	The transceivers of the H2TU-C and H2TU-R are trying to establish contact with each other on Span 1 of the HDSL2 loop.
S _n L	The transceivers of the two devices on Span <i>n</i> are trying to establish contact with each other, where <i>n</i> is the number of the span.

Front-Panel Configuration Options Using MODE and SEL

Display Code	Description (default values in bold)
EQL	Sets the DSX-1 Equalizer to: 0 (0 to 132 ft.), 133 (133 to 265 ft.), 266 (266 to 398 ft.), 399 (399 to 532 ft.), 533 (533 to 655 ft.).
RLBO	Sets the H2TU-R line buildout to 0 dB, -7.5 dB , or -15 dB.
LPBK	Enables (ENA) or disables (DIS) SmartJack loopback commands.
FT1	Enables (ENA) or disables (DIS) system response to DDS latching loopback commands for fractional T1 applications.
SPLB xxxx	Configures the system for generic (GNLB) or special inband loopback commands (A2LB, A3LB, A4LB).
PWRF	OFF = disables HDSL2 powering. ON = HDSL2 line voltage is -185 Vdc maximum.
HBER	1E-6 or 1E-7 = alarm activates when the HDSL2 BER alarm threshold exceeds 10 ⁻⁶ or 10 ⁻⁷ . NONE = prevents generation of a system alarm due to BER.
DBER	Enables (ENA) or disables (DIS) fixed 24-hour DSX-1 BER alarm threshold.
LBTO	Loopback timeout = NONE , 20, 60, 120 minutes.
DS1	DSX-1 line code = B8ZS or AMI.
CONV	H2TU-R frame format conversion = OFF (framing determined by the DS1 frame formatting option), ACON (autodetection of framing and potential frame conversion at the H2TU-R), or FCON (autodetection of framing and forced frame format conversion at the H2TU-R).
FRMG	DS1 frame formatting = AUTO (auto framing mode) or UNFR (unframed mode).
ALMP	Enables system to output an alarm pattern: AIS or LOS.
BPVT	Enables (ENA) or disables (DIS) Bipolar Violation Transparency.
NLBP	Enables the H2TU-R to transmit either AIS or LOS towards the CI for any network loopback.
TLOS	Enables (ENA) or disables (DIS) a logic loopback at the H2TU-R when an LOS occurs at its DS1 input.
RTPV	Enables (ENA) or disables (DIS) remote provisioning.
PRM	OFF = no enhanced Performance Report Messaging; SPRM = Supplemental PRM; NPRM = Network PRM; S + N = SPRM + NPRM.
NAIS	If ALMP is set to AIS, this option specifies which pattern is sent to the network when a remote LOS or AIS occurs. CI = AIS-CI sent to the network; AIS = AIS sent to the network.
ROVR	Enables (ENA) or disables (DIS) conversion of an ESF DS1 payload from the network with an embedded RAI pattern to an SF-RAI pattern towards the CI at the H2TU-R. CONV option must be set to FCON or ACON.
RACI	Enables (ENA) or disables (DIS) conversion of a DS1 SF-RAI signal received by the H2TU-R to an SF-RAI-CI signal towards the network.

Front-Panel System Information Messages (Scroll Mode) ^(a)

Code	Description
CODE xxxx	Line code setting (AMI or B8ZS).
FRM xxxx	Frame pattern received from the DSX-1 (SF, ESF, UNFR).
LATT xx	Loop attenuation threshold (0 to 40 dB). Default is 32.
LIST xx	List number of the H2TU-C-388.
MARG xx	Margin threshold (0 to 15 dB). Default is 5.
VER x.xx	Software version number.

(a) To scroll through system information messages, press the MODE button for 3 or more seconds.



To comply with the interbuilding wiring requirements of GR-1089 CORE, Section 4.5.9, the shields of the ABAM-type cables that connect the H2TU-C-388 List 3E DSX-1 output ports to the cross-connect panel must be grounded at both ends.