


# QUICK INSTALLATION

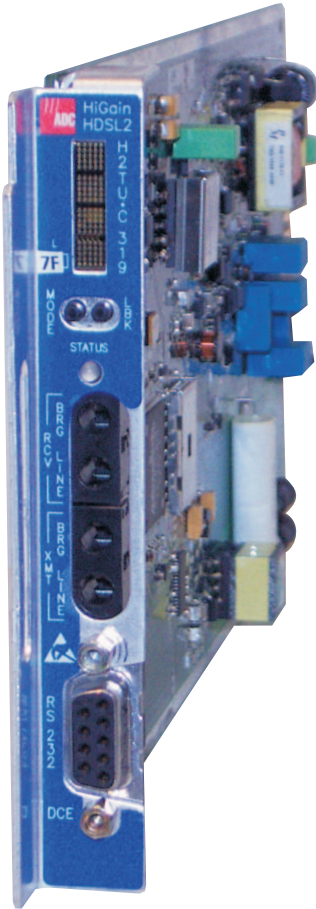

## HiGain® H2TU-C-319 LIST 7F LINE UNIT

---

# THE H2TU-C-319 LIST 7F

The H2TU-C-319 List 7F line unit is the Central Office (CO) side of a T1 transmission system. The H2TU-C, when used with an H2TU-R remote unit, transmits a 1.544 Mbps payload on one unconditioned copper pair over the full Carrier Service Area (CSA) range. The H2TU-C-319 List 7F is designed to mount in 3192 mechanics shelves.

## FEATURES

- 
- Front-panel features:** status LED, craft port for maintenance screen access, MODE and LBK pushbuttons for displaying system parameters and activating loopback commands (including dual loopbacks), DSX-1 access jacks, and a four-character status display
- HDSL2 transmission features:**
- Enhanced lightning protection
  - Full-duplex transmission on one copper pair
  - Supports automatic protection switching (APS)
  - Grounded loop detection on HDSL2 span
  - Remote provisioning and PM data retrieval through TL1 FDL or 11-bit inband commands
  - Power Back Off (PBOB and PBOC) for configuring HDSL2 transmit power levels to reduce crosstalk
  - Report menu option for downloading status and performance data
  - Non-volatile storage of performance monitoring parameters
  - Customer disconnect indication alarms (AIS-CI and RAI-CI alarm patterns)
  - Payload retrieval of margin and pulse attenuation parameters (DBDB)
  - Performance Report Messaging (SPRM, NPRM, AUTO, and OFF)
- Maintenance screens** for inventory, provisioning, performance monitoring, and troubleshooting, including:
- Loop attenuation and insertion loss reporting
- 

## SPECIFICATIONS

---

<b>Operating Temperature</b>	-40°F to +149°F (-40°C to +65°C)
<b>Operating Humidity</b>	5% to 95% non-condensing
<b>HDSL2 Span Voltage</b>	0 or -180 Vdc ±5 Vdc
<b>CO Supply</b>	-48 Vdc nominal (-42.5 Vdc to -56.5 Vdc)
<b>Mounting</b>	3192 mechanics shelves
<b>HDSL2 Line Rate</b>	1.552 Mbps Overlapped Pulse Amplitude Modulation Transmission with Interlocking Spectra (OPTIS)
<b>HDSL2 Output</b>	+16.8 dBm ±0.5 dBm, 135Ω at CO side +16.5 dBm ±0.5 dBm, 135Ω at remote side
<b>Maximum Insertion Loss</b>	35 dB @ 196 kHz
<b>Maximum Loop Attenuation</b>	28 dB
<b>DSX-1 Line Rate</b>	1.544 Mbps ±200 bps
<b>DSX-1 Line Format</b>	Alternate Mark Inversion (AMI) or Bipolar with 8-Zero Substitution (B8ZS)
<b>DSX-1 Frame Format</b>	Extended SuperFrame (ESF), SuperFrame (SF), Unframed (UNFR), or AUTO
<b>DSX-1 Pulse Output</b>	6 V <sup>pk-pk</sup> , pre-equalized for 0 to 655 feet of ABAM cable
<b>DSX-1 Input Level</b>	+1.5 dB to -7.5 dB DSX

---

---

# 1 INSTALLATION

Align the H2TU-C with the shelf card-slot guides and slide the unit in. Push on the H2TU-C front panel to snap the unit into place.

## 2 POWER-UP SEQUENCE

When the H2TU-C powers up, the four-character display illuminates and displays status messages.

If the H2TU-C is unable to communicate with the H2TU-R, it displays various alarm and status messages. If the H2TU-C is able to communicate with the H2TU-R, the following occurs:

- The Status LED flashes red while acquiring the H2TU-R and then turns a steady green when the entire system is operating with no alarms. (The DS1 signal must be present.)
- The front-panel display reports signal-to-noise ratio (SNR) margin readings (should be  $\geq 6$  dB) and loop attenuation (should be  $\leq 28$  dB).
- After the system powers up, alarm conditions that exist are reported on the display. (The H2TU-C reports alarms if no DS1 signal is applied.)

## 3 PROVISIONING

Perform these basic provisioning tasks:

- 1 Connect a maintenance terminal to the craft port (see front-panel illustration inside) and log on. Press **CTRL** + **R** to refresh the logon screen, if necessary.


Refer to the onscreen Help menu for navigational aids or use the **SPACEBAR** (to cycle through selections), **ENTER** (to activate the current setting or choice, or to display a menu), **ESC** or **F11** (to return to the parent menu), or directional arrow keys (to navigate to a menu or item).

- 2 Select **Config, Date and Time**, then type the date and time.
- 3 Select **Inventory**, then type the unit ID numbers.
- 4 Change the settings of any system parameters, if necessary, by selecting **Config**, then **Standard Options** or **ADC Options** (see Table 3 and Table 4 inside). (Configuration options and their current settings can be read from the front panel using the MODE pushbutton. See Table 2 inside.)
- 5 Once the H2TU-C is successfully installed and provisioned, access the Monitor, Performance, or Event Log menus to clear the Performance, Alarm History, or Event Log screens, or use Master Clear in the Config menu.

*Continued*



**Card-Edge Connector**

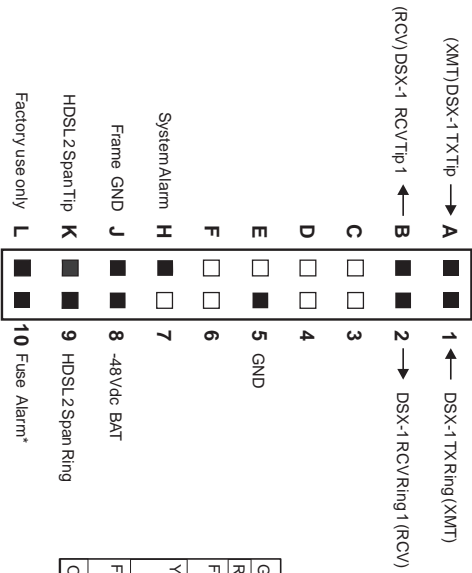

\* Fuse Alarm  
Normal = Floating (0 to -60 Vdc maximum)  
Activated = -48 Vdc, 10 mA maximum

**Four-character display**

Displays status, provisioning, and alarm messages. See table below for a list of message descriptions.

**List number**

**Status LED**

Green LED	Normal operation.
Red LED	Fuse alarm.
Flashing Red LED	HDLSL2 acquisition or system alarm.
Yellow LED	A Customer Remote (CREM) loopback or a Network Local (NLOC) loopback is in effect.
Flashing Yellow LED	System is in Armed (ARM) mode.
Off	Line power is off.


**Maintenance Terminal Modem Settings**

9600 baud  
8 data bits  
No parity  
1 stop bit  
Hardware flow control: OFF  
Terminal emulation: VT100

**Craft port**

To access all system maintenance, provisioning and performance screens, connect a standard 9-pin terminal cable between the serial port on a PC and the H2TU-C craft port.

**Front Panel**

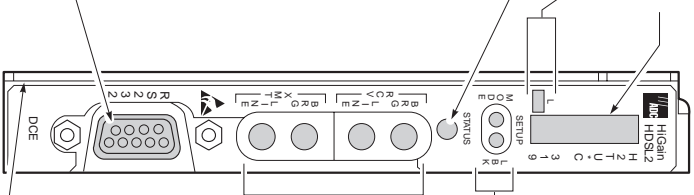

**MODE and LBK pushbutton options**

Use the MODE and LBK pushbuttons to review all system parameters, including user-configured settings, and to activate loopbacks.

**To display system parameters:** Press MODE for at least 3 seconds to place the front-panel display in scroll mode. When it has finished scrolling through all the system parameters, the display returns to its normal mode.

**To initiate a dual loopback:** Press LBK for more than 3 seconds to activate the NLOC and CREM loopbacks. If a loopback condition already exists, this will loopdown all existing loopbacks. Press LBK again for more than 3 seconds to reactivate the dual loopback.

**To initiate a manual loopback:**

- 1 Simultaneously press MODE and LBK for at least 3 seconds. The following message appears:  
MAN LPBK NLO?
- 2 Press LBK to activate the NLOC loopback or press MODE to advance to the next loopback (NREM, CLOC, CREM, COLB or RULB).

**To manually terminate a loopback,** simultaneously press MODE and LBK for 3 or more seconds.

**DSX-1 access jacks**

Connect standard test equipment.

BRG	Provides non-intrusive bridging jack access to (XMT) and from (RCV) the HDLSL2 span at the DSX-1 interface. Allows monitoring of the T1 payloads.
LINE	Provides splitting jack access to (XMT) and from (RCV) the HDLSL2 span at the DSX-1 interface.

**Extraction Handle**

(CLEI code and ECI bar code label on outside of handle)

**Table 1. Front-Panel Alarm Messages** <sup>(a)</sup>

<b>Message</b>	<b>Description</b>
PWR FEED SHRT <sup>(b)</sup>	A short between the Tip and Ring of the HDSL2 pair.
PWR FEED GND <sup>(b)</sup>	The HDSL2 loop is grounded.
PWR FEED OPEN <sup>(b)</sup>	A line-power open condition.
LOSW	The HDSL2 loop has lost synchronization.
LLOS	No signal is detected at the DSX-1 input to the H2TU-C.
RLOS	No signal is detected at the DS1 input to the H2TU-R.
LAIS <sup>(c)</sup>	Line Alarm Indication Signal.
RAIS <sup>(c)</sup>	Remote Alarm Indication Signal.
TRCI <sup>(c)</sup>	An RAI alarm (yellow) from the Customer Premises Equipment (CPE) with an error-free signal from the line unit or network.
RRAI <sup>(c)</sup>	An RAI alarm (yellow) from the CPE with errors from the line unit or network.
xxx-LOF <sup>(c)</sup>	DS1 frame error is detected in the selected frame format mode in FRMG option (xxx denotes either TUC or TUR).
xxx-DBER <sup>(c)</sup>	A system DS1 Bit Error Rate (BER) alarm. (xxx denotes either Transmission Unit Central Office [TUC] or Transmission Unit Remote End [TUR].)
PRMF <sup>(c)</sup>	H2TU-R Performance Report Messaging BER threshold exceeded at far end.
PRMN <sup>(c)</sup>	H2TU-R Performance Report Messaging BER threshold exceeded at near end.
xxx-HBER	A system HDSL2 Block Error Rate (BER) alarm. (xxx denotes either TUC or TUR.)
xxx-MAL	The margin on the HDSL2 loop has dropped below the threshold setting. (xxx denotes either TUC or TUR.)
xxx-LA	The attenuation on the HDSL2 loop has exceeded the maximum threshold value. (xxx denotes either TUC or TUR.)

(a) Front-panel alarm messages are listed in order of priority. ALRM displays prior to any alarm message. Pressing the LBK pushbutton initiates an Alarm Cutoff (ACO) message.

(b) Message displays repeatedly as long as the alarm condition exists, and is not included in the priority order.

(c) Does not activate the alarm relay access on pin H.

**Table 2. Front-Panel Read-Only Settings Using MODE<sup>(a)</sup>**

<b>Message</b>	<b>Function<sup>(b)</sup></b>
VER x.xx	Software version number of the H2TU-C.
LIST xx	List number of the H2TU-C.
FRM xxxx	Frame pattern received from the DSX-1 (SF, ESF, or UNFR).
CODE xxxx	Line code (AMI or <b>B8ZS</b> ).
LATT xx	Loop attenuation threshold setting ( <b>3B</b> ).
MARG xx	Margin threshold setting ( <b>4</b> ).
EQL	Sets the DSX-1 equalizer to: <b>0</b> (0 to 132 ft.), 133 (133 to 265 ft.), 266 (266 to 398 ft.), 399 (399 to 532 ft.), or 533 (533 to 655 ft.).
RLBO	H2TU-R line buildout to DS1 is set to <b>0 dB</b> , -7.5 dB, or -15 dB.
LPBK	Enables ( <b>ENA</b> ) or disables ( <b>DIS</b> ) SmartJack loopback commands.
SPLB xxxx	Configures system for generic ( <b>GNLB</b> ) or special inband loopback commands (A1LB, A2LB, A3LB, A4LB, or A5LB).
PWRF	OFF = disables line power; <b>ON</b> = -180 Vdc.
HBER	1E-6 or 1E-7 = indicates HDSL2 BER alarm threshold setting. <b>NONE</b> = no generation of a system alarm due to BER.
DBER	Enables ( <b>ENA</b> ) or disables ( <b>DIS</b> ) fixed 24-hour DSX-1 BER alarm threshold.
LBTO	Loopback timeout = NONE, 20 min, <b>60 min</b> , 120 min, 8-hour, or 24-hour.
ALM	Enables ( <b>ENA</b> ) or disables ( <b>DIS</b> ) alarm indications on pin H.
DS1	DSX-1 line code = <b>B8ZS</b> or AMI.
CONV	H2TU-R frame format conversion = OFF (framing determined by the DS1 FRMG option), <b>ACON</b> (autodetection of framing and potential frame conversion at the H2TU-R), or <b>FCON</b> (autodetection of framing and forced frame format conversion at the H2TU-R).
FRMG	DS1 frame formatting = AUTO (automatic framing), SF (SuperFrame), ESF (Extended SuperFrame), or <b>UNFR</b> (unframed).
RDA	Enables ( <b>ENA</b> ) or disables ( <b>DIS</b> ) alarm indications due to remote DS1 LOS at H2TU-R input.
ALMP	Enables system to output an alarm pattern: Alarm Indication Signal ( <b>AIS</b> ) or Loss of Signal (LOS).
BPVT	Enables ( <b>ENA</b> ) or disables ( <b>DIS</b> ) Bipolar Violation Transparency.
NLBP	Enables the H2TU-R to transmit either <b>AIS</b> or LOS towards CI for any network loopback.
TL0S	Enables ( <b>ENA</b> ) or disables ( <b>DIS</b> ) a logic loopback at the H2TU-R when an LOS occurs at its DS1 input.
PRM	OFF = no enhanced Performance Report Messaging; SPRM = Supplemental PRM; NPRM = Network PRM; <b>AUTO</b> = SPRM + NPRM.
NAIS	If ALMP is set to AIS, this option specifies which pattern is sent to the network when a remote LOS or AIS occurs. CI = AIS-CI sent to the network; <b>AIS</b> = AIS sent to the network.
ROVR	Enables ( <b>ENA</b> ) or disables ( <b>DIS</b> ) conversion of an ESF DS1 payload from the network with an embedded RAI pattern to an SF-RAI pattern towards the CI at the H2TU-R. CONV option must be set to FCON or ACON.
RACI	Enables ( <b>ENA</b> ) or disables ( <b>DIS</b> ) conversion of a DS1 SF-RAI signal received by the H2TU-R to an SF-RAI-CI signal towards the network.
PBON	Configures the power output levels of the H2TU-C network unit toward the customer to comply with Default ( <b>DEF</b> ) or Enhanced ( <b>ENH</b> ) templates.
PBOC	Configures the power output levels of the H2TU-R customer unit toward the network to comply with Default ( <b>DEF</b> ) or Enhanced ( <b>ENH</b> ) templates.

(a) Front-panel codes scroll in the order listed. The configured selections follow each code.

(b) Default values are in bold.


**Table 3. Front-Panel Diagnostic Messages**

Message <sup>(a)</sup>	Description
<b>A=xx</b>	The highest loop attenuation (loss of signal power) measured in dB.
ACQ	The H2TU-C and H2TU-R are trying to establish synchronization.
ARM	The H2TU-C is armed to respond to Intelligent Repeater Loop (ILR) codes.
BAD RT?	The H2TU-C is not receiving a response from the H2TU-R.
FERR	A framing bit error has occurred at H2TU-C DSX-1 input.
HES	H2TU-C HDSL2 loop cyclical redundancy check (CRC) error.
LBPV	A local bipolar violation has been received at the DSX-1 input to the H2TU-C.
<b>M=xx</b>	The power of the received HDSL2 signal relative to noise (S/N with respect to 21.5 dB).
PWR FEED OFF	HDSL2 span power is turned off.
PWR FEED ON	HDSL2 loop is not grounded or shorted.
SIG	The transceivers of the H2TU-C and H2TU-R are trying to establish contact with each other over the HDSL2 loop.

(a) Normal operating messages are in bold.

## 4 LOOPBACK TESTING

Initiate loopback testing from the maintenance menus. The inband codes shown below can be sent by a test set.

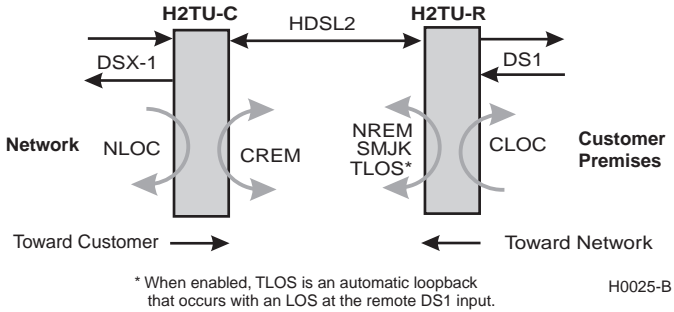

**Table 4. GNLB Loopback Commands**

Loopback	Inband Code	Description
NLOC	1111000	DSX-1 signal is looped back to the network at the H2TU-C.
NREM	1110000	DSX-1 signal is looped back to the network at the H2TU-R.
COLB <sup>(a)</sup>		DSX-1 signal is looped back to the network at the H2TU-C and signal from the customer is looped back to the customer at the H2TU-C.
RULB <sup>(a)</sup>		DSX-1 signal is looped back to the network at the H2TU-R and signal from the customer is looped back to the customer at the H2TU-R.
CREM	1111110	DS1 signal from customer is looped back to the customer at the H2TU-C.
CLOC	1111100	DS1 signal from customer is looped back to the customer at the H2TU-R.
SMJK	11000	DSX-1 signal is looped back to the network at the H2TU-R SmartJack module.
Loopdown	11100	Deactivates any of the above loopbacks.

(a) Dual loopbacks are only initiated from the MODE and LBK pushbuttons.



**To comply with the intrabuilding wiring requirements of GR-1089 CORE, Section 4.5.9, the shields of the ABAM-type cables that connect the line unit DSX-1 output ports to the cross-connect panel must be grounded at both ends.**



**Copies of this publication or the user manual (LTPH-UM-1213-xx) can be downloaded from the ADC website at [www.adc.com](http://www.adc.com). To order a hard copy, please contact your sales representative.**

## FCC Class A Compliance

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

## Limited Warranty

Product warranty is determined by your service agreement. Contact your sales representative or Customer Service for details.

## Modifications

Any changes or modifications made to this device that are not expressly approved by ADC DSL Systems, Inc. voids the user's warranty.

All wiring external to the products should follow the provisions of the current edition of the National Electrical Code.

## Standards Compliance

This equipment has been tested and verified to comply with the applicable sections of the following safety standards:

- GR 63-CORE - Network Equipment-Building System (NEBS) Requirements
- GR 1089-CORE - Electromagnetic Compatibility and Electrical Safety
- Binational standard, UL-60950/CSA C22.2 No. 60950-00 Third Edition: Safety of Information Technology Equipment.

## Trademark Information

ADC is a registered trademark of ADC Telecommunications, Inc. HiGain is a registered trademark of ADC DSL Systems, Inc. Other product names mentioned in this installation guide are used for identification purposes only and may be trademarks or registered trademarks of their respective companies.

## Copyright Information

© 2003 ADC DSL Systems, Inc. All rights reserved. Information contained in this document is company private to ADC DSL Systems, Inc., and shall not be modified, used, copied, reproduced or disclosed in whole or in part without the written consent of ADC.

## ADC DSL Systems, Inc.

14402 Franklin Avenue  
Tustin, CA 92780-7013  
Tel: 714.832.9922  
Fax: 714.832.9924

Product Catalog: H2TU-C-319-7F  
CLEI: VACJ5U3E  
Document: LTPH-QI-1217-01

## Technical Assistance

Tel: 800.366.3891 x73223  
Tel: 952.917.3223  
Fax: 952.917.3244  
Email: [wsd.support@adc.com](mailto:wsd.support@adc.com)



1256337  
April 8, 2003