


## QUICK INSTALLATION

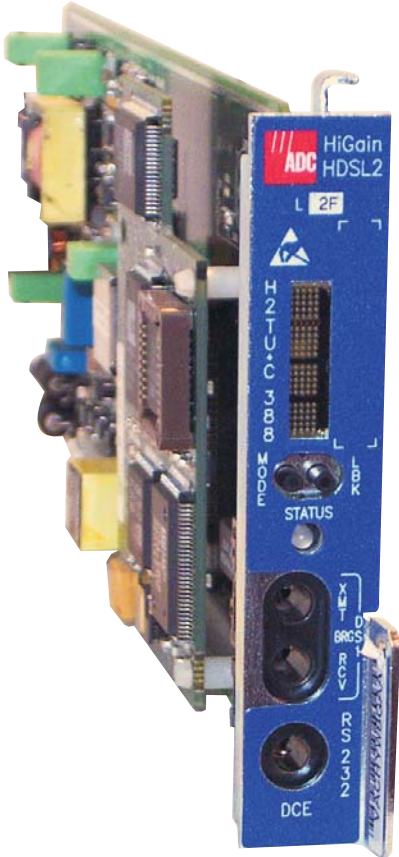

### H2TU-C-388 LIST 2F LINE UNIT

---

## H2TU-C-388 LIST 2F

The H2TU-C-388 List 2F functions as the central office end of a repeaterless T1 transmission system when connected to a HiGain HDSL2 remote unit (H2TU-R). Setting new standards for interoperability and efficiency, HiGain HDSL2 modules transmit a 1.554 Mbps T1 payload on one unconditioned copper pair over the full Carrier Service Area (CSA) range.

### FEATURES

- 
- Front-panel status LED, craft port, and four-character status display
  - Maintenance screens for inventory, provisioning, troubleshooting, and performance monitoring
  - Loss of Signal/Alarm Indication Signal (LOS/AIS) payload alarm option
  - Grounded loop detection
  - Report menu option for downloading status and performance monitoring data to a file
  - Ultra-low wander
  - Remote provisioning through TL1 FDL or 11-bit payload commands
  - Payload (PL) or HiGain (HG) loopback source identification
  - Bipolar Violation Transparency (BPVT) option
  - Performance Report Messaging (SPRM, NPRM, and AUTO)
  - BER alarm option
  - Power Back Off (PBON and PBOC) for configuring HDSL2 transmit power levels
  - Dual loopback commands
  - 16-bit HDSL2 status retrieval command (DBDB)
- 

### SPECIFICATIONS

---

<b>Operating Temperature</b>	-40°F to +149°F (-40°C to +65°C)
<b>Operating Humidity</b>	5% to 95% non-condensing
<b>HDSL2 Span Voltage</b>	0 or -180 Vdc $\pm$ 5 Vdc
<b>Mounting</b>	DDM+ high-density shelf
<b>HDSL2 Line Rate</b>	1.552 Mbps Overlapped Pulse Amplitude Modulation Transmission with Interlocking Spectra (OPTIS)
<b>HDSL2 Output</b>	+16.8 dBm $\pm$ 0.5 dBm, 135 $\Omega$ at CO side +16.5 dBm $\pm$ 0.5 dBm, 135 $\Omega$ at remote side
<b>Maximum Insertion Loss</b>	35 dB at 196 KHz
<b>Maximum Loop Attenuation</b>	28 dB
<b>DSX-1 Line Rate</b>	1.544 Mbps $\pm$ 200 bps
<b>DSX-1 Line Format</b>	Alternate Mark Inversion (AMI) or Bipolar with 8-Zero Substitution (B8ZS)
<b>DSX-1 Frame Format</b>	Extended SuperFrame (ESF), SuperFrame (SF), or Unframed (UNFR)
<b>DSX-1 Pulse Output</b>	6 V <sub>pk-pk</sub> , pre-equalized for 0 to 655 feet of ABAM cable
<b>DSX-1 Input Level</b>	+1.5 to -7.5 dB DSX

---

---

# 1 INSTALLATION

Raise the H2TU-C front panel and slide the unit into the CO shelf card slot. Lower and push on the H2TU-C front panel to secure the unit in the shelf.

## 2 POWER-UP SEQUENCE

When the H2TU-C powers up, the four-character display illuminates and reports status messages.

If the H2TU-C is not communicating with the H2TU-R, it displays various alarm and status messages. If the H2TU-C is communicating with the H2TU-R, the following occurs:

- 1 The Status LED flashes red while acquiring the H2TU-R and turns a steady green when the entire system is operating with no alarms. (The DS1 signal must be present.)
- 2 The front-panel display reports signal-to-noise (SNR) margin readings (should be  $\geq 6$  dB) and loop attenuation (should be  $\leq 28$  dB).
- 3 After the system powers up, alarm conditions that exist are reported on the display. (The H2TU-C reports alarms if no DS1 signal is applied.)

## 3 PROVISIONING

After installing the H2TU-C, perform these basic provisioning tasks by accessing the logon screen. Refer to the onscreen Help menu for navigational aids or use the **SPACEBAR** (to cycle through selections), **ENTER** (to activate the current setting, choice, or to display a menu), **ESC** or **F11** (to return to the parent menu), or directional arrow keys (to navigate to a menu or item).

- 1 Connect a maintenance terminal to the craft port (see front-panel illustration inside), then press **CTRL + R** to refresh the logon screen, if necessary.
- 2 Select the Config menu, **Date and Time**, then type the date and time.
- 3 Select the Inventory menu, then type in the unit ID numbers.
- 4 Change the settings of any system parameters, if necessary, by selecting the Config menu, **Standard Options** or **ADC Options**.
- 5 Once the H2TU-C is successfully installed and provisioned, access the Performance or Event Log menu to clear the Performance, Alarm History, or Event Log screens, or use Master Clear in the Config menu. This ensures useful data.

*Continued*




## Card-Edge Connector

219	<input type="checkbox"/>	119	Frame GND
218	<input checked="" type="checkbox"/>	118	GND
-48 Vdc	<input checked="" type="checkbox"/>	117	Fusealarm*
216	<input type="checkbox"/>	116	
215	<input checked="" type="checkbox"/>	115	Ring1
214	<input type="checkbox"/>	114	Tip1
213	<input type="checkbox"/>	113	
212	<input type="checkbox"/>	112	
211	<input type="checkbox"/>	111	
210	<input checked="" type="checkbox"/>	110	Ring
209	<input checked="" type="checkbox"/>	109	Tip
208	<input type="checkbox"/>	108	
207	<input checked="" type="checkbox"/>	107	Factory burn-in
206	<input type="checkbox"/>	106	
205	<input type="checkbox"/>	105	
204	<input type="checkbox"/>	104	Management bus
203	<input type="checkbox"/>	103	
202	<input checked="" type="checkbox"/>	102	Ring
201	<input checked="" type="checkbox"/>	101	Tip
200	<input type="checkbox"/>	100	

\* Fuse alarm is normally floating (0 to 80 V max.) and at -48 V (10 mA max.) when activated.

## Front Panel

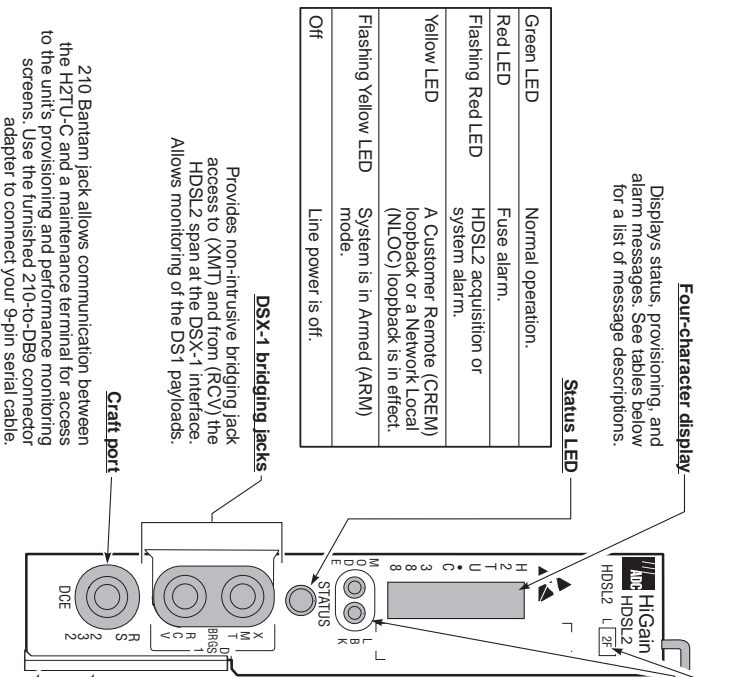

Displays status, provisioning, and alarm messages. See tables below for a list of message descriptions.

### Status LED

### DSX-1 bridging jacks

Provides non-intuitive bridging jack access to (XMT) and from (RCV) the HDSL2 span at the DSX-1 interface. Allows monitoring of the DS1 payloads.

### Craft port

210 Bantam jack allows communication between the H2TU-C and a maintenance terminal for access to the unit's provisioning and performance monitoring screens. Use the furnished 210-to-DB9 connector adapter to connect your 9-pin serial cable.

### List number

### Mode and LBK pushbutton options

Use MODE and LBK buttons to review all system parameters, including user-configured settings, and to activate loopbacks.

**To display system parameters:** Press the MODE button for at least 3 seconds to place the front-panel display in scroll mode. When it has finished scrolling through all the system parameters, the display returns to its normal mode.

**To initiate a dual loopback:** Press the LBK button for more than 3 seconds to activate both the NLOC and CREM loopbacks. If a loopback condition already exists, this will loopdown all existing loopbacks. Press the LBK button again for more than 3 seconds to reactivate the dual loopback.

### To initiate a manual loopback:

- 1 Press both the MODE and LBK buttons for at least 3 seconds. The following message appears:

MAN LPBK NLOC?

- 2 Press the LBK button to activate the NLOC loopback or press the MODE button to select the next available loopback.


**To manually terminate a loopback,** press both the MODE and LBK buttons for 3 or more seconds

### Maintenance Terminal Modern Settings

- 9600 baud
- 8 data bits
- No parity
- 1 stop bit
- Hardware flow control: OFF
- H2TU-C-388 from its slot.
- Terminal emulation software: VT100

# 4 LOOPBACK TESTING

Initiate loopback testing from the maintenance terminal screen or use the MODE and LBK pushbuttons. The inband codes below (except COLB, and RULB) can be sent by a test set.

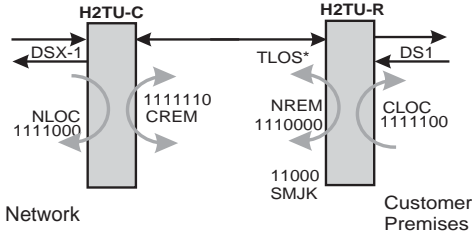

\* When enabled, TLOS is an automatic loopback that occurs with an LOS at the remote DS1 input.

## GNLB Loopback Commands

Loopback	Inband Code	Description
NLOC	1111000	DSX-1 signal is looped back to the network at the H2TU-C.
NREM	1110000	DSX-1 signal is looped back to the network at the H2TU-R.
COLB <sup>(a)</sup>		DSX-1 signal is looped back to the network at the H2TU-C and signal from the customer is looped back to the customer at the H2TU-C.
RULB <sup>(a)</sup>		DSX-1 signal is looped back to the network at the H2TU-R and signal from the customer is looped back to the customer at the H2TU-R.
CREM	1111110	DS1 signal from customer is looped back to the customer at the H2TU-C.
CLOC	1111100	DS1 signal from customer is looped back to the customer at the H2TU-R.
SMJK	11000	DSX-1 signal is looped back to the network at the H2TU-R SmartJack module.
Loopdown	11100	Deactivates any of the above loopbacks.

(a) Dual loopbacks are only initiated from the MODE and LBK pushbuttons.

Copies of this publication or the user manual (LTPH-UM-1092-xx) can be downloaded from the ADC website at [www.adc.com](http://www.adc.com). To order a hard copy, please contact your sales representative.

## Front-Panel Alarm Messages<sup>(a)</sup>

Message	Description (listed in priority order)
PWR FEED SHRT <sup>(b)</sup>	A short between the Tip and Ring of the HDSL2 pair.
PWR FEED GND <sup>(b)</sup>	The HDSL2 loop is grounded.
PWR FEED OPEN <sup>(b)</sup>	A line-power open condition.
LOSW	The HDSL2 loop has lost synchronization.
LLOS	No signal is detected at the DSX-1 input to the H2TU-C.
RLOS	No signal is detected at the DS1 input to the H2TU-R.
LAIS	Line Alarm Indication Signal.
RAIS	Remote Alarm Indication Signal.
TRCI	An RAI alarm (yellow) from the CPE with an error-free signal from the line unit or network.
RRAI	An RAI alarm (yellow) from the Customer Premises Equipment (CPE) with errors from the line unit or network.
xxx-DBER	A system DS1 Bit Error Rate (BER) alarm. (xxx denotes either TUC or TUR.)
PRMF	H2TU-R Performance Report Messaging BER threshold exceeded at far end.
PRMN	H2TU-R Performance Report Messaging BER threshold exceeded at near end.
xxx-HBER	A system HDSL2 Block Error Rate (BER) alarm. (xxx denotes either TUC or TUR.)
xxx-MAL	The margin on the HDSL2 loop has dropped below the threshold setting. (xxx denotes either TUC or TUR.)
xxx-LA	The attenuation on the HDSL2 loop has exceeded the maximum threshold value. (xxx denotes either TUC or TUR.)

(a) Front-panel alarm messages are listed in order of priority. ALRM displays prior to any alarm message. Pressing the LBK pushbutton initiates an Alarm Cutoff (ACO) message.

(b) Message displays repeatedly as long as the alarm condition exists, and is not included in the priority order.



**To comply with the intrabuilding wiring requirements of GR-1089 CORE, Section 4.5.9, the shields of the ABAM-type cables that connect the H2TU-C-388 List 2F DSX-1 output ports to the cross-connect panel must be grounded at both ends.**

## Front-Panel Diagnostic Messages

Message	Description (normal operating messages in bold)
<b>A=xx</b>	The loop attenuation of the longest (maximum loss) span, measured in dB.
ACQ	The multiplexers of the H2TU-C and H2TU-R are trying to establish synchronization.
ARM	Armed to respond to Intelligent Repeater Loop (ILR) codes.
BAD RT?	The H2TU-C is not receiving a response from the H2TU-R.
FERR	A framing bit error occurred at H2TU-C DSX-1 input.
HES	H2TU-C HDSL2 loop cyclical redundancy check (CRC) error.
LBPV	A local bipolar violation has been received at the DSX-1 input to the H2TU-C.
<b>M=xx</b>	Indicates the power of the received HDSL2 signal relative to noise (S/N with respect to 21.5 dB). Any value of 6 dB or greater is adequate for reliable system operation.
MNGD	The H2TU-C is under control of the HMU-319 network management unit.
PWR FEED OFF	HDSL2 span power is turned off.
PWR FEED ON	Indicates that the HDSL2 loop is not grounded or shorted.
SIG	The transceivers of the H2TU-C and H2TU-R are trying to establish contact with each other on Span 1 of the HDSL2 loop.

## Front-Panel Read-Only Settings Using MODE<sup>(a)</sup>

Message	Description (default selections in bold)
VER x.xx	Software version number of the H2TU-C-388.
LIST xx	List number of the H2TU-C-388.
FRM xxxx	Frame pattern received from the DSX-1 (SF, ESF, or UNFR).
CODE xxxx	Line code (AMI or <b>B8ZS</b> ).
LATT xx	Loop Attenuation threshold setting ( <b>38 dB</b> ).
MARG xx	Margin threshold setting ( <b>4 dB</b> ).
EQL	Indicates DSX-1 Equalizer setting: <b>0</b> (0 to 132 ft.), 133 (133 to 265 ft.), 266 (266 to 398 ft.), 399 (399 to 532 ft.), or 533 (533 to 655 ft.).
RLBO	Indicates H2TU-R line buildout setting: <b>0 dB</b> , -7.5 dB, or -15 dB.
LPBK	SmartJack loopback commands enabled ( <b>ENA</b> ) or disabled ( <b>DIS</b> ).
SPLB xxxx	System configured for generic ( <b>GNLB</b> ) or special inband loopback commands (A1LB, A2LB, A3LB, A4LB, or A5LB).
PWRF	HDSL2 line power disabled (OFF) or -180 Vdc ( <b>ON</b> ).
HBER	1E-6 or 1E-7 = indicates HDSL2 BER alarm threshold setting. <b>NONE</b> = no generation of a system alarm due to BER.
DBER	24-hour DSX-1 BER alarm threshold enabled (ENA) or disabled ( <b>DIS</b> ).
LBTO	Loopback timeout = NONE, 20, <b>60</b> , 120 minutes, 8-hour, or 24-hour.
DS1	DSX-1 line code = Bipolar with 8-Zero Substitution ( <b>B8ZS</b> ), Alternate Mark Inversion (AMI).
CONV	H2TU-R frame format conversion = OFF (framing determined by the DS1 FRMG option), <b>ACON</b> (autodetection of framing and potential frame conversion at the H2TU-R), or FCON (autodetection of framing and forced frame format conversion at the H2TU-R).
FRMG	DS1 frame formatting = AUTO (auto framing mode) or <b>UNFR</b> (unframed mode),
RDA	Alarm indications due to remote DS1 LOS at H2TU-R input are enabled ( <b>ENA</b> ) or disabled ( <b>DIS</b> ).
ALMP	Alarm pattern = Alarm Indication Signal ( <b>AIS</b> ) or Loss of Signal (LOS).
BPVT	Bipolar Violation Transparency (BPVT) enabled (ENA) or disabled ( <b>DIS</b> ).
NLBP	H2TU-R transmits either <b>AIS</b> or LOS towards CI for any network loopback.
TLOS	Logic loopback at the H2TU-R is either enabled (ENA) or disabled ( <b>DIS</b> ) when an LOS occurs at its DS1 input.
PRM	Performance Report Messaging = OFF (no enhanced Performance Report Messaging), SPRM (Supplemental PRM), NPRM (Network PRM), <b>AUTO</b> (H2TU-R generates both SPRMs and NPRMs whenever possible).
NAIS	If ALMP is set to AIS, indicates which pattern is sent to the network when a remote LOS or AIS occurs. CI = AIS-CI sent to the network; <b>AIS</b> = AIS sent to the network.
ROVR	Conversion of an ESF DS1 payload from the network with an embedded RAI pattern to an SF-RAI pattern toward the CI at the H2TU-R is enabled (ENA) or disabled ( <b>DIS</b> ). CONV option must be set to FCON or ACON.
RACI	Conversion of a DS1 SF-RAI signal (yellow alarm) received by the H2TU-R to an SF-RAI-CI signal toward the network is enabled (ENA) or disabled ( <b>DIS</b> ).
PBON	Indicates the power output levels of the H2TU-C customer unit toward the customer. Default ( <b>DEF</b> ) or enhanced (ENH).
PBOC	Indicates the power output levels of the H2TU-R network unit toward the network. Default ( <b>DEF</b> ) or enhanced (ENH).

(a) Front-panel codes scroll in the order listed. The configured selections follow each code.

## FCC Class A Compliance

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

## Limited Warranty

Product warranty is determined by your service agreement. Contact your sales representative or Customer Service for details.

## Modifications

Any changes or modifications made to this device that are not expressly approved by ADC DSL Systems, Inc. voids the user's warranty.

All wiring external to the products should follow the provisions of the current edition of the National Electrical Code.

## Safety Standards Compliance

This equipment has been tested and verified to comply with the applicable sections of the following safety standards:

- GR 63-CORE - Network Equipment-Building System (NEBS) Requirements
- GR 1089-CORE - Electromagnetic Compatibility and Electrical Safety
- Binational standard, UL-1950/CSA-C22.2 No. 950-95: Safety of Information Technology Equipment

## Trademark Information

ADC is a registered trademark of ADC Telecommunications, Inc. HiGain is a registered trademark of ADC DSL Systems, Inc. Other product names mentioned in this installation guide are used for identification purposes only and may be trademarks or registered trademarks of their respective companies.

## Copyright Information

© 2002 ADC DSL Systems, Inc. All rights reserved. Information contained in this document is company private to ADC DSL Systems, Inc., and shall not be modified, used, copied, reproduced or disclosed in whole or in part without the written consent of ADC.

## ADC DSL Systems, Inc.

14402 Franklin Avenue  
Tustin, CA 92780-7013  
Tel: 714.832.9922  
Fax: 714.832.9924

Product Catalog: H2TU-C-388-L2F  
CLEI: VACHYW8G  
Document: LTPH-QI-1090-04

## Technical Assistance

800.638.0031  
714.730.3222



1248982  
October 25, 2002