



Technical Practice



HiGain Solitaire Line Unit

H2TU-C-319 List 1
Part Number: 150-2400-01
CLEI Code: VACHDN0C

H2TU-C-319 List 1C
Part Number: 150-2400-13
CLEI Code: VACHKNZC



Section 152-319-100-02

Revision History of This Practice

Revision	Release Date	Revisions Made
01	November 3, 1999	Initial release.
02	April 21, 2000	New firmware.

©Copyright 2000 PairGain Technologies, Inc.

PairGain and HiGain are registered trademarks and HiGain Solitaire, The Power Behind DSL Access, the HiGain Solitaire logo, and the PairGain logo design are trademarks of PairGain Technologies, Inc. No right, license, or interest to such trademarks is granted hereunder, and you agree that you shall assert no such right, license, or interest with respect to such trademarks. All other product names mentioned in this document are used for identification purposes only and may be trademarks or registered trademarks of their respective companies.

Information contained in this document is company private to PairGain Technologies, Inc., and shall not be modified, used, copied, reproduced or disclosed in whole or in part without the written consent of PairGain.

Information furnished by PairGain Technologies is believed to be accurate and reliable. However, no responsibility is assumed by PairGain Technologies for its use; nor for any infringement of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of PairGain Technologies. PairGain Technologies reserves the right to change specifications at any time without notice.

USING THIS TECHNICAL PRACTICE

The following conventions are used in this manual:

- Monospace type indicates screen text.
- Keys you press are indicated by small icons such as **Y** or **ENTER**. Key combinations to be pressed simultaneously are indicated with a plus sign as follows: **CTRL** + **ESC**.
- Items you select are boldface font.
- Three types of messages, identified by icons, appear in text.



Notes contain information about special circumstances.



Cautions indicate the possibility of equipment damage or personal injury.



The Electrostatic Discharge (ESD) susceptibility symbol indicates that a device or assembly is susceptible to damage from electrostatic discharge.

For a list of abbreviations used in this document, refer to [“Appendix E - Abbreviations”](#) on page 59.

DOCUMENTATION

If you have comments on this PairGain document, send an email to technical_publications@pairgain.com. Type the product name and the section number of the document in the subject area of the email message.

INSPECTING SHIPMENT

Upon receipt of the equipment:

- Unpack each container and inspect the contents for signs of damage. If the equipment has been damaged in transit, immediately report the extent of damage to the transportation company and to PairGain. Order replacement equipment, if necessary.
- Check the packing list to ensure complete and accurate shipment of each listed item. If the shipment is short or irregular, contact PairGain as described in the Warranty located inside the back cover. If you must store the equipment for a prolonged period, store the equipment in its original container.

TABLE OF CONTENTS

Overview	1
Features	1
Compatibility	2
Applications	2
HiGain Solitaire Regenerators	3
Front Panel	4
Installation	8
Verification	9
Verification without a Downstream Device	9
Verification with a Downstream Device	9
Provisioning Requirements	10
Provisioning	11
Using the MODE and SEL Buttons (List 1 Only)	11
Setting Options through MODE and SEL	11
Resetting to Factory Default Values.....	12
Displaying System Parameter Settings.....	12
Disabling an Alarm.....	12
Loopback Modes	12
Using a Maintenance Terminal	13
Connecting to a Maintenance Terminal.....	13
The Logon Screen.....	13
Provisioning Tasks	15
Setting Date and Time	15
Setting Circuit ID Numbers.....	16
Making Changes to the System Configuration.....	17
Clearing the History, Alarm and Event Log Screens	23
Monitoring System Activity and Performance	24
System Overview	24
Using the Monitor Screen to View System Activity.....	25
Using the Performance Screens to View Performance Data.....	26
Performance History at the DS1 Interface.....	27
Performance History at the HDSL2 Interface	29
Current Statistics Screens for the DS1 Interface	30
Current Statistics for HDSL2 Interface	31
Using the Performance Screens to View Alarm Data.....	32
Alarm History at the DS1 Interface.....	32

Alarm History at the HDSL2 Interface	34
Using the Event Log to Track System Events	35
Troubleshooting	37
Front-panel System Alarms	37
Alarm Option for DLC Feed	38
Retiring System Alarms	38
Remote LOS and AIS Response	39
OCT55 Test Pattern with AMI Line Code	39
Loopback Operation	40
Generic Loopback Commands	40
Special Loopback Commands	42
Manual Loopback Session	43
Loopback Test Procedures	44
General Troubleshooting Tips	44
GNLB Test Procedures	44
A1LB, A2LB, and A5LB Test Procedures	46
A3LB and A4LB Test Procedures	49
Appendix A - Specifications	50
Power Consumption	51
Maximum Power Dissipation	51
Maximum Current Drain	51
H2TU-C-319 Card Connector	52
Network Management Control Bus	52
Fuse Alarm	52
System Alarm Output Pin	53
Craft Port	53
Appendix B - Functional Operation	54
Timing	54
Ground Fault Detect	54
Appendix C - Compatibility	55
Appendix D - Product Support	56
Technical Support	56
World Wide Web	56
Returns	56
Appendix E - Abbreviations	59
Certification and Warranty	Inside Back Cover

LIST OF FIGURES

1. HDSL2 System Model	3
2. H2TU-C-319 List 1 Front Panel.....	4
3. Installing the H2TU-C-319 into a Shelf.....	8
4. Logon Screen.....	14
5. Configuration Menu - Date and Time	15
6. Inventory Screen.....	16
7. Configuration Menu	17
8. Configuration Menu - Standard Options (Defaults Shown).....	18
9. Configuration Menu - PairGain Options (Defaults Shown).....	18
10. Configuration Menu - Reset to Factory Defaults	22
11. Master Clear	23
12. System Spans.....	24
13. Monitor Screen - Active Loopback with Alarms	25
14. H2TU-R DS1 31-day Performance History	27
15. H2TU-C DS1 25-hour Performance History.....	27
16. H2TU-C HDSL2 31-day Performance History.....	29
17. H2TU-R DS1 Current Statistics	30
18. H2TU-C DS1 Current Statistics	30
19. H2TU-C HDSL2 Current Statistics.....	31
20. H2TU-C DS1 Alarm History Screen.....	32
21. H2TU-R DS1 Alarm History Screen.....	33
22. H2TU-C HDSL2 Alarm History Screen	34
23. System Event Log.....	35
24. H2TU-R LOS and AIS Response Priorities	39
25. Loopback Summary.....	40
26. Loopback Modes	45
27. H2TU-C-319 Card-edge Connector	52
28. RS-232 Craft Port Pinouts.....	53
29. H2TU-C-319 Block Diagram	54

LIST OF TABLES

- 1. Front-panel Description 5
- 2. Front-panel Display Messages (List 1 Only) 6
- 3. Navigational Keys for the HiGain Solitaire Maintenance Terminal Screens 13
- 4. Logon Screen Menus 14
- 5. H2TU-C-319 List 1 and List 1C Standard Config Screen Options 19
- 6. H2TU-C-319 List 1 and List 1C PairGain Config Screen Options 20
- 7. DS1/DSX-1 24-hour PM Threshold 22
- 8. Monitor Screen Descriptions 26
- 9. Acronyms Used on the DS1 Performance History Screens..... 28
- 10. Acronyms Used on the HDSL2 Performance History Screens 29
- 11. DS1 Alarm Descriptions 33
- 12. HDSL2 Alarm Descriptions..... 34
- 13. Event Log Entry Messages List 36
- 14. Front-panel System Alarms 37
- 15. Summary of HiGain Solitaire Loopback Codes and Activation Methods..... 41
- 16. Addressable Repeater Loopback Commands (A2LB)..... 46
- 17. Addressable Repeater Loopback Commands (A3LB and A4LB)..... 49
- 18. H2TU-C Power Parameters—No Regenerator 51

OVERVIEW

The HiGain Solitaire™ product family from PairGain® is the industry's first practical implementation of High bit-rate Digital Subscriber Line 2 (HDSL2). PairGain products are fully compliant with the HDSL2 standard. Providing full-rate T1 access using just a single copper pair, HDSL2 is a cost-effective solution that offers an open architecture. The open architecture inherent in HDSL2 guarantees interoperability, allowing simple, economic accommodation of network growth. HiGain Solitaire uses the industry's first HDSL2 chipset (ANSI T1/E1.4 compliant) developed by PairGain.

HiGain Solitaire HDSL2 products provide 1.552 Mbps transmission on one unconditioned copper pair over the full Carrier Service Area (CSA) range. The CSA includes loops up to 12,000 feet of 24 American Wire Gauge (AWG) wire or 9,000 feet of 26 AWG wire, including bridged taps.

FEATURES

The H2TU-C-319 line unit is the Central Office (CO) side of a T1 transmission system. List 1 and List 1C are identical, except that the List 1C does not provide the standard front-panel provisioning features (RS-232 connector, MOD and SEL buttons, and four-character display). List 1C provisioning is accomplished only through the HMU-319 management unit interface.

- HDSL2 transmission features
 - Three-span range with two regenerators (36 kft, 24 AWG)
 - Lightning and power cross-protection on HDSL2 interfaces
 - Full duplex HDSL2 transmission on one pair at 1.552 Mbps
 - Ultra-low wander (Stratum 1 compliant)
 - Grounded loop detection on High-bit-rate Digital Subscriber Line 2 (HDSL2)
- Front-panel provisioning features
 - Four-character status display (List 1 only)
 - DS1 splitting and bridging access
 - Status LED
 - RS-232 craft port for connection to a maintenance terminal (List 1 only)
- HiGain Solitaire HDSL2 maintenance screens for inventory, provisioning, and troubleshooting
 - High-performance, non-volatile DS1 and HDSL2 performance monitoring
 - Non-volatile alarm histories
- Configuration options
 - Selectable DS1 pre-equalizer
 - Bipolar Violation Transparency (BPVT)
 - Bit Error Rate (BER) alarm
 - Loss of Signal/Alarm Indication Signal (LOS/AIS) payload alarm
 - Remote provisioning
 - Selectable loopback activation codes
- Compatible with 3192 mechanics shelves
- Payload (PL) and HiGain (HG) loopback source identification

- Network Management and Administration (NMA) interface
- Margin threshold alarm

COMPATIBILITY

The H2TU-C-319 is designed to mount in 3192 mechanics shelves. For a list of compatible shelves see “Appendix C - Compatibility” on page 55.

APPLICATIONS

HiGain Solitaire systems provide a cost-effective, easy-to-deploy method for delivering T1 High Capacity Digital Service (HCDS) over a single copper pair. HiGain Solitaire systems support a multitude of network connections and system models (see [Figure 1 on page 3](#)).

- The service is deployed over one unconditioned, non-loaded copper pair.
- Conventional, inline, T1 repeaters are no longer required.
- Cable pair conditioning, pair separation, and bridged tap removal are not required.

Each loop has no more than 35 dB of loss at 196 kHz, with driving and terminating impedances of 135 Ω . In general, HiGain Solitaire systems:

- Operate effectively in the same cable binder group with other HDSL2 lines, HDSL, T1, ADSL, SDSL, POTS, DDS, and other transmission schemes.
- Can be used with customers requiring DS1 service on a temporary or permanent basis.
- Provide a means of quickly deploying service in advance of fiber optic transmission systems.



DS1 is used throughout this document to refer to either the remote unit’s DS1 interface or the line unit’s DSX-1 interface.

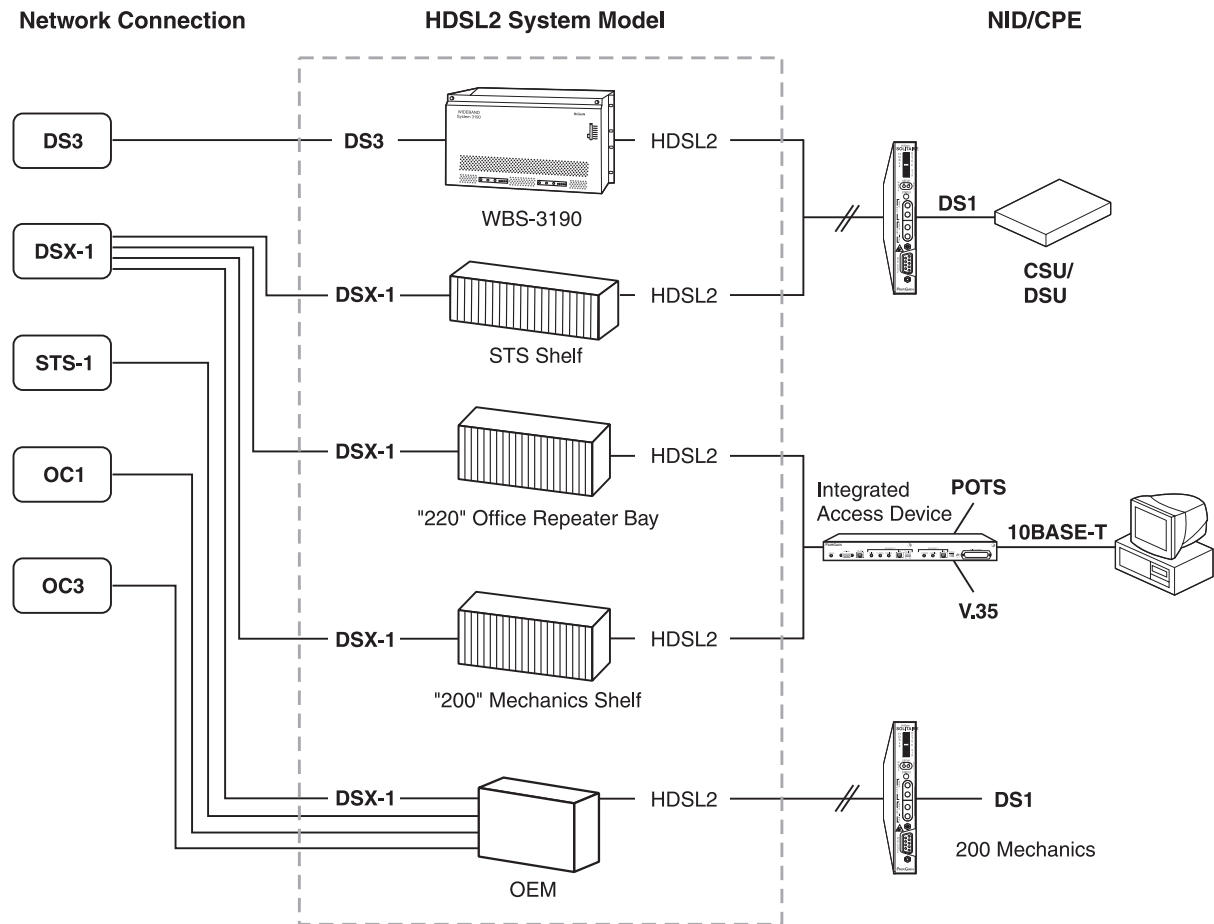


Figure 1. HDSL2 System Model

HIGAIN SOLITAIRE REGENERATORS

For applications without regenerators (doublers), the H2TU-C-319 is directly connected to an H2TU-R remote unit by one HDSL2 cable pair. The H2TU-C-319 List 1 and List 1C are compatible with all HiGain Solitaire H2TU-Rs.

For regenerator applications, one to two regenerators may be used in the HDSL2 loop between the H2TU-C and H2TU-R.

- The H2TU-C-319 List 1 and List 1C can power one regenerator (H2RU-407 or H2RU-409) and a remote unit (H2TU-R-402) for a total of two spans.
- If the H2TU-R is locally powered, the H2TU-C can power up to two regenerators for a total of three spans.



Future enhancements of the H2TU-C-319 List 1 and List 1C will support regenerators.

FRONT PANEL

Figure 2 shows the H2TU-C-319 List 1 front panel. Table 1 on page 5 describes the front-panel components. For a list of front-panel display messages, refer to Table 2 on page 6. For pinout diagrams of the H2TU-C card-edge connector and craft port, refer to “Appendix A - Specifications” on page 50.



The H2TU-C-319 List 1C does not feature a front-panel display, craft port or MODE and SEL buttons. To provision the List 1C, use the management unit interface.

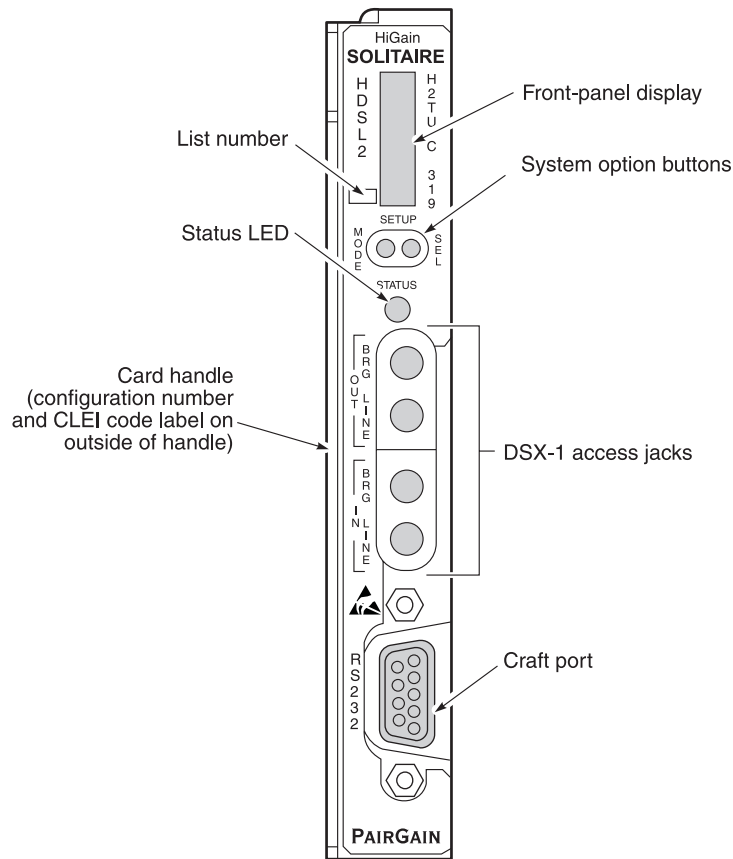


Figure 2. H2TU-C-319 List 1 Front Panel

Table 1. Front-panel Description

Front-panel Feature	Function
Front-panel display	Displays four-character status, provisioning, and alarm system messages. The front-panel display illuminates when power is initially applied. To conserve power the display only remains on for 5 minutes. Using the MODE or SEL buttons reactivates the display and restarts the 5-minute timer. Refer to Table 2 on page 6 for a listing of the four-character messages.
MODE and SEL system option buttons	Permits user options to be monitored and modified without the need of a maintenance terminal. Used to initiate all HiGain loopbacks and to display DSX-1 line parameters and line unit identity.
Status LED	The status LED can report the following conditions:
Off	Line power is off.
Green	Normal operation.
Red	Fuse alarm.
Flashing red	HDSL2 acquisition or system alarm.
Yellow	An H2TU-C-319 Customer Remote Loopback (CREM) or a Network Local Loopback (NLOC) is in effect.
Flashing yellow	H2TU-C-319 is in an Armed (ARM) state.
DSX-1 access jacks	
BRG	Provides non-intrusive bridging jack access to (IN) and from (OUT) the HDSL2 span at the DSX-1 interface. Allows the two DS1 payloads to be monitored.
LINE	Provides splitting jack access to (IN) and from (OUT) the HDSL2 span at the DSX-1 interface. Breaks the IN and OUT paths to permit test signal insertion and retrieval.
Craft port (RS-232)	Provides bidirectional communication between the unit and an external terminal to allow configuration and performance monitoring through the maintenance terminal screens.
List number	Identifies the list number of the H2TU-C-319.
CLEI and ECI bar code label	Provides the human-readable Common Language Equipment Identifier (CLEI) code number and the Equipment Catalog Item (ECI) bar code number.
Configuration Number	<p>For some products the configuration number may contain either a standalone two or three-digit configuration number or a five or six-digit warranty configuration number as follows:</p> <ul style="list-style-type: none"> Digit 1 - Last digit of shipment year Digits 2 and 3 - Shipment month Digits 4, 5, and 6 - Configuration number <p>The configuration number identifies the version of the product. New configuration numbers usually accompany changes in the last two characters of the CLEI code.</p> <p>The configuration number is found on a small label attached to the unit. It is the last two numbers (following the x) of a 13-character part number. For example: 150-1234-01-x01.</p>

Table 2 lists the front-panel display messages. The four-character display reports the code of an alarm, loopback, or diagnostic message and, in some cases, is followed by a second four-character message that modifies the first message with a value or current configuration setting.

Table 2. *Front-panel Display Messages (List 1 Only)*

Message	Full Name	Description
ALARM MESSAGES		
ACO	Alarm CutOff	A system alarm has occurred, and has been retired to an ACO condition by pressing the SEL button on the H2TU-C front panel.
ALRM	Alarm Condition Exists	A system alarm condition is in effect.
DBER	DS1 Bit Error Rate	A system DS1 BER alarm is in effect and remains in effect until cleared.
HBER	HDSL2 Block Error Rate	A system HDSL2 Block Error Rate alarm is in effect.
LA	Loop Attenuation	Indicates that the attenuation on the HDSL2 loop has exceeded the maximum threshold value.
LAIS	Local Alarm Indication Signal	Indicates an AIS (all ones) pattern is being transmitted from the local DS1 output port.
LLOS	Local Loss of Signal	Indicates that no signal is detected at the DSX-1 input to the H2TU-C. Causes a system alarm.
LOSW	Loss of Sync Word	Indicates that the HDSL2 loop has lost synchronization.
LRAI	Line RAI	Indicates an RAI alarm (yellow) from the CPE with an error-free signal from the line unit or network.
MAL	Margin Alarm	The margin on HDSL2 loop has dropped below the threshold (0 to 15 dB) as set by the operator.
PWR FEED GND	Ground	The HDSL2 loop is grounded.
PWR FEED OPEN	Open	Indicates a line power open condition.
PWR FEED SHRT	Short	Indicates a short between the Tip and Ring of the HDSL2 pair.
PRMF	Performance Report Messaging - Far End	H2TU-R PRM-FE BER threshold has been exceeded at far end.
PRMN	Performance Report Messaging - Near End	H2TU-R PRM-NE BER threshold has been exceeded at near end.
RAIS	Remote Alarm Indication Signal	Indicates an AIS (all ones) pattern is being received at the H2TU-R DS1 input port.
RLOS	Remote Loss of Signal	Indicates that no signal is detected at the DS1 input to the H2TU-R. Causes a system alarm.
RRAI	Remote RAI	Indicates an RAI alarm (yellow) from the CPE with errors from the line unit or network.
SPN(n)	Span Number	Accompanies the LOSW alarm and identifies the span where the LOSW alarm occurred.
TUC	Transmission Unit Central Office	Accompanies the HBER, MAL, and LA alarm and indicates that the alarm has occurred at the H2TU-C central office unit.
TUR	Transmission Unit Remote End	Accompanies the HBER, MAL, and LA alarm and indicates that the alarm has occurred at the H2TU-R remote unit.
LOOPBACK MESSAGES		
CRG n	Customer Regenerator n Loopback	Signal from customer is looped back to the customer at H2RU n , where n is the number of the regenerator.
CLOC	Customer Local Loopback	Signal from customer is looped back to the customer at the H2TU-R.
CREM	Customer Remote Loopback	Signal from customer is looped back to the customer at the H2TU-C.
NRG n	Network Regenerator n Loopback	DSX-1 signal is looped back to the network at H2RU n , where n is the number of the regenerator.
NLOC	Network Local Loopback	DSX-1 signal is looped back to the network at the H2TU-C.
NREM	Network Remote Loopback	DSX-1 signal is looped back to the network at the H2TU-R.

Table 2. Front-panel Display Messages (List 1 Only) (Cont.)

Message	Full Name	Description
LOOPBACK MESSAGES continued		
SMJK	Remote SmartJack Loopback	DSX-1 signal is looped back to the network at the H2TU-R SmartJack module.
DIAGNOSTIC MESSAGES		
A = xx	Maximum Loop Attenuation	The Attenuation (A) message appears followed by xx, where xx is the loop attenuation of the longest (maximum loss) span, measured in dB.
ACQ	Acquisition	The multiplexers of the H2TU-C and H2TU-R (or the H2TU-C and first regenerator) are trying to establish synchronization over the HDSL2 loop of Span 1.
A n L	Acquisition n Loop	The multiplexers of the two devices on Span n are trying to establish synchronization with each other, where n is the span number.
ARM	HiGain System Armed	Armed to respond to Intelligent Repeater Loop (ILR) codes.
BAD RT?	No Response from H2TU-R	The H2TU-C receives no response from the H2TU-R, and all HDSL2 loop conditions are normal. Therefore, the integrity of the H2TU-R or the HDSL2 loop is questionable.
FERR	Framing Bit Error Occurred	Framing bit error occurred at H2TU-C DSX-1 input.
FLDL	Flash Download	Flash download of firmware updates. Contact Customer Service for update procedures (see "Appendix D - Product Support" on page 56).
HES	HDSL2 CRC Error	H2TU-C HDSL2 Loop Cyclical Redundancy Check (CRC) error.
LBPV	Local Bipolar Violation	A bipolar violation has been received at the DSX-1 input to the H2TU-C-319.
M=xx	HDSL2 Loop Margin	Indicates the power of the received HDSL2 signal relative to noise (S/N with respect to 21.5 dB). Any value of 6 dB or greater is adequate for reliable system operation.
MNGD	Managed	The H2TU-C-319 is under control of the H2TU-319 Network management unit. In this state, the front-panel craft port and push buttons are disabled.
PWR FEED OFF	Power Feed Off	HDSL2 span power has been turned off by setting the PWRF option to off, or HDSL2 span power has been turned off by use of the A1LB, A2LB, and A5LB Intelligent Office Repeater (IOR) Power Down code.
PWR FEED ON	Power Feed On	Indicates that the HDSL2 loop is not grounded or shorted.
SIG	Signaling	The transceivers of the H2TU-C and H2TU-R (or the H2TU-C and first regenerator) are trying to establish contact with each other over the HDSL2 loop of Span 1.
S n L	Signal n Loop	The transceivers of the two devices on Span n are trying to establish contact with each other, where n is the span number.
SYSTEM INFORMATION MESSAGES ^(a)		
CODE xxxx	Line Code: AUTO, AMI or B8ZS	The line code that the H2TU-C is receiving at its DSX-1 interface, if the DS1 option is set to AUTO. Otherwise, it mimics either of the other two DS1 line code settings: Alternate Mark Inversion (AMI) or Bipolar with 8-Zero Substitution (B8ZS).
FRM xxxx	Frame: SF, ESF, UNFR	Defines the type of frame pattern being received from the DSX-1: SuperFrame (SF), Extended SuperFrame (ESF), Unframed (UNFR).
LATT xx	Loop Attenuation	The current loop attenuation threshold setting measured in dB.
LIST xx	H2TU-C-319 List Number	The list number of the H2TU-C-319.
MARG xx	Margin	The current margin threshold setting measured in dB.
VER x.xx	H2TU-C-319 Software Version Number	The software version number (x.xx).

(a) System information messages are displayed in scroll mode. To scroll through the messages, press the MODE button for 3 or more seconds.

INSTALLATION



Upon receipt of the equipment, inspect the contents for signs of damage. If the equipment has been damaged in transit, immediately report the extent of damage to the transportation company and to PairGain Technologies.

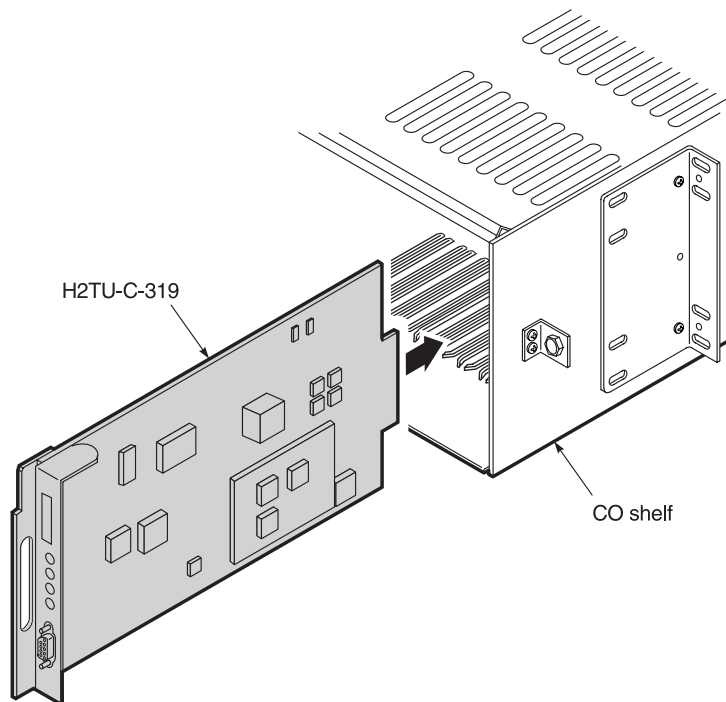


Figure 3. Installing the H2TU-C-319 into a Shelf



When installing an H2TU-C in a chassis, be sure to wear an antistatic wrist strap. Avoid touching components on the circuit board.



To comply with the intrabuilding wiring requirements of GR-1089 CORE, Section 4.5.9, the shields of the ABAM-type cables that connect the H2TU-C DSX-1 output ports to the cross-connect panel must be grounded at both ends.

- 1 Align the H2TU-C with the enclosure slot guides, then push the unit in until it touches the backplane card-edge connector.
- 2 Place your thumbs on the front panel and push the H2TU-C into the slot guides until properly seated.

VERIFICATION

Once the H2TU-C is installed, verify that it is operating properly. To do this, monitor the following:

- Status LED
- Status messages reported by the front-panel display (see [Table 2 on page 6](#))

Verification without a Downstream Device

If there is no downstream device installed:

- 1 Verify that the H2TU-C powers up. The front-panel display illuminates and reports status messages. (See [Table 2 on page 6](#) for a list of messages.)
- 2 Verify that the H2TU-C attempts to communicate with downstream devices (status LED flashes red). Even if a downstream device is not present, the following events should occur:
 - a The front-panel display reports various four-character status messages.
 - b The H2TU-C again attempts communication with downstream devices until a downstream device is detected.

Verification with a Downstream Device

If a downstream device has been installed:

- 1 Verify that the H2TU-C powers up. (The front-panel display illuminates and reports various status messages.)
- 2 Verify that the H2TU-C attempts to communicate with downstream devices (status LED flashes red). One of the following occurs:
 - If downstream devices are successfully identified and the HDSL2 loop synchronizes, the H2TU-C status LED will be a steady green. The H2TU-C reports normal margin messages on the front-panel display.
 - If downstream devices are not successfully identified, the H2TU-C reports four-character status messages. The H2TU-C attempts communication again and reports four-character status messages. The H2TU-C repeats this cycle until a downstream device is detected.
- 3 If there is more than one span, verify that each subsequent span synchronizes normally by monitoring the front-panel display messages.
- 4 If a remote unit is installed, verify that the last span synchronizes normally. The H2TU-C status LED should be a steady green, and the front-panel display should report normal margin messages.
- 5 Verify that a valid DS1 signal has been applied to the H2TU-C and the H2TU-R.
 - If no DS1 signal is being applied to either the H2TU-C or the H2TU-R inputs, then the appropriate DS1 alarms (LLOS or RLOS) are observed on the front-panel display, and the status LED flashes red.
 - If a valid DS1 signal is being supplied to the H2TU-C and H2TU-R, then DS1 alarm indications should be absent and the status LED should be a steady green.

PROVISIONING REQUIREMENTS

Refer to [“Provisioning” on page 11](#) for instructions on configuring and monitoring the H2TU-C-319.

- The H2TU-C-319 List 1 can be provisioned by using the MODE and SEL buttons on the front panel or by accessing the HiGain Solitaire HDSL2 maintenance screens. While the MODE and SEL buttons can be used to manually accomplish some provisioning tasks, such as setting system options, the HiGain Solitaire HDSL2 maintenance screens (available when you connect a PC to the craft port) can handle all provisioning tasks.
- The H2TU-C-319 List 1C can only be provisioned through a maintenance terminal connected to the craft port of a HiGain Management Unit (HMU), which can then access the HiGain Solitaire HDSL2 maintenance screens.

After a successful installation, complete the following tasks:

- 1 Set the date and time (see [“Setting Date and Time” on page 15](#)).
- 2 Set the circuit ID numbers (see [“Setting Circuit ID Numbers” on page 16](#)).
- 3 Make any desired changes to configuration (see [“Making Changes to the System Configuration” on page 17](#)).
- 4 Clear the Performance and Alarm history screens and the Event Log to ensure accurate data (see [“Clearing the History, Alarm and Event Log Screens” on page 23](#)).

PROVISIONING

There are two provisioning methods:

- Use the MODE and SEL buttons on the front panel of the H2TU-C-319 (List 1 only) to:
 - Set system options
 - Reset the H2TU-C to its factory default settings for system options
 - Display system option settings (scroll mode)
 - Select system loopbacks
- Use a maintenance terminal (VT100 terminal or a PC running terminal emulation software) connected to the H2TU-C craft port (or to an HMU craft port) to access the HiGain Solitaire HDSL2 maintenance screens (Figure 4 on page 14). This gives you full access to all H2TU-C status, history, inventory, and provisioning screens.



No dip switches or jumpers are required to provision the H2TU-C-319 as it contains a non-volatile RAM (NVRAM) which stores the system option settings. System option settings are retained if shelf power is lost or if the H2TU-C-319 is unplugged.

USING THE MODE AND SEL BUTTONS (LIST 1 ONLY)

Setting Options through MODE and SEL

To provision the H2TU-C-319 through the MODE and SEL buttons on the front panel:

- 1 Press the MODE button for 1 second and then release it. The front panel display alternately shows the first system parameter and its current setting.
- 2 Press the SEL button to step through all possible settings of the selected parameter.
- 3 After the desired setting has been selected, press the MODE button. This updates the current displayed parameter to the selected setting, then advances to the next configurable parameter. After the last parameter has been selected, a CONF NO message appears on the front-panel display.
- 4 Do one of the following:
 - To cancel the session without saving the requested parameter changes, press the MODE button or do nothing. (After 30 seconds, the display returns to its normal mode without saving the new changes.)
 - To accept the requested parameter changes, press the SEL button. (A CONF YES message appears, and the display returns to its normal mode after saving the new changes.)

Resetting to Factory Default Values

All user options for the H2TU-C-319 List 1 ([Table 5 on page 19](#)) can be set to the factory default values using the MODE and SEL buttons. To set the user options to their default values:

- 1 Press the SEL button for 6 seconds until the following message appears:

DFLT NO

- 2 Press the SEL button while the DFLT NO message is displayed.

The message changes to DFLT YES indicating the factory default values are now in effect and the display returns to the normal mode.

To terminate the DFLT mode without setting the factory default values, do one of the following:

- Press the MODE button to return to the normal display mode.
- Wait 30 seconds for the unit to return to the normal display mode.

Displaying System Parameter Settings

To scroll through the current settings of all system parameters, press the MODE button for 3 or more seconds. The H2TU-C-319 List 1 displays the following parameters:

- H2TU-C software version number
- H2TU-C list number
- Type of frame pattern received from the DSX-1
- Line code of the signal received from the DSX-1
- All user-configured parameter settings
- Loop attenuation threshold setting
- Margin alarm threshold setting

Disabling an Alarm

If the system is in a Minor alarm state, the alarm relay can be disengaged by pressing the SEL button. This activates the Alarm CutOff (ACO) indication. For more information about alarms, see [“Front-panel System Alarms” on page 37](#).

Loopback Modes

See [“Loopback Operation” on page 40](#) for instructions on using the MODE and SEL buttons to activate loopbacks.

USING A MAINTENANCE TERMINAL

Connecting to a Maintenance Terminal

The craft port on the front panel allows you to connect the H2TU-C-319 List 1 to a maintenance terminal (ASCII terminal or PC running a terminal emulation program). Once connected to a maintenance terminal, you can access the maintenance, provisioning, and performance screens.

To connect to a maintenance terminal:

- 1 Connect a standard 9-pin terminal cable to the RS-232 craft port (Figure 2 on page 4) on the H2TU-C-319 List 1 front panel. (For List 1C models, you must connect the maintenance terminal to the management unit craft port.)
- 2 Connect the other end of the cable to the serial port on the maintenance terminal.
- 3 Start a terminal emulation program such as ProComm (emulating a VT100 terminal).
- 4 Configure the maintenance terminal to the following communication settings:
 - 9600 baud
 - No parity
 - 8 data bits
 - 1 stop bit
 - Hardware flow control to OFF
- 5 If necessary, press **CTRL** + **R** to refresh the HiGain Solitaire HDSL2 logon screen.

The Logon Screen

The HiGain Solitaire maintenance terminal screens allow you to monitor, provision, and troubleshoot an H2TU-C-319 system.

To select a menu from the HiGain Solitaire HDSL2 logon screen (Figure 4 on page 14), do one of the following:

- Type the first letter of the menu.
- Use the **←** **→** arrow keys to select the menu and press **ENTER**.

Table 3 summarizes the navigational keys. They are also listed in the onscreen Help menu. Table 4 on page 14 describes the Logon screen menus.

Table 3. Navigational Keys for the HiGain Solitaire Maintenance Terminal Screens

Key ^(a)	Function
SPACEBAR	Cycle through selections.
ENTER	Activate the current setting or choice, or display a menu.
ESC or F11 (VT100)	Return to the parent menu.
↑ or CTRL + E	Select the submenu or item above the current one, or return to the previous menu.
↓ or CTRL + X	Select the submenu or item below the current one.
→ or CTRL + D	Select the menu or item to the right of the current one.
← or CTRL + S	Select the menu or item to the left of the current one, or return to the previous menu.
CTRL + R	Refresh the screen.

(a) Legacy management units require use of control keys instead of arrow keys.

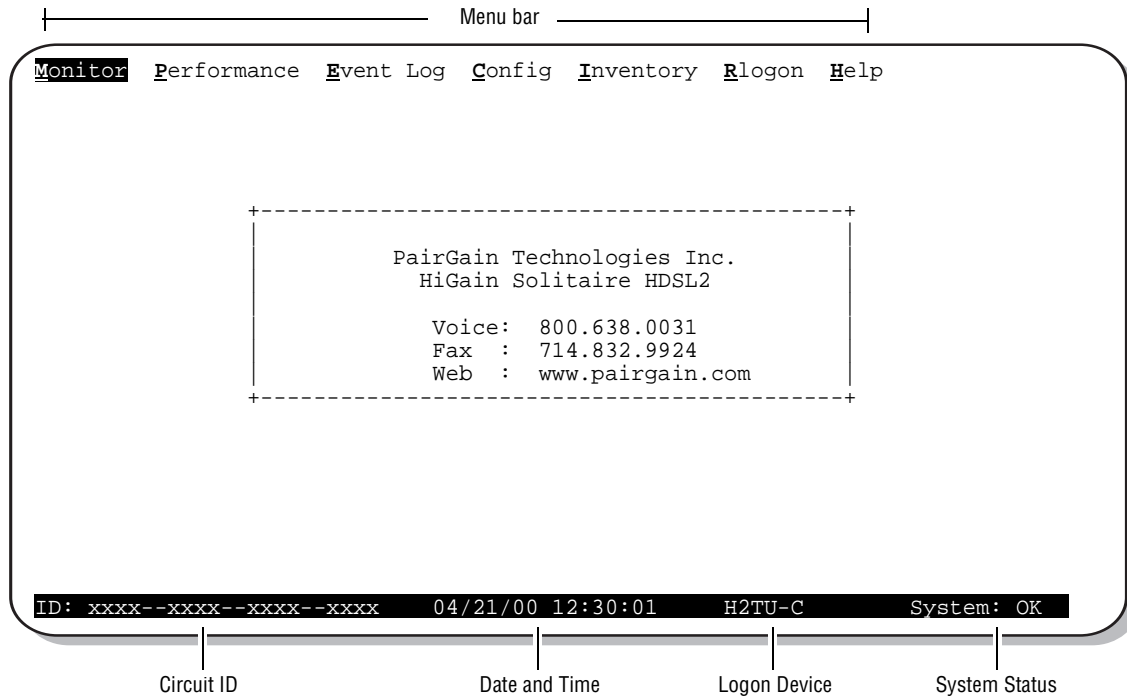


Figure 4. Logon Screen

Table 4. Logon Screen Menus

Press this key:	To access this menu:	Menu Functions
M	Monitor	Monitors loopbacks and alarms, and provides a graphical representation of circuit activity, including ES, UAS, SES, and line code.
P	Performance	Provides performance and alarm histories for current, 25-hour, 48-hour, or 31-day periods for either the DS1 or HDSL2 interface.
E	Event Log	Identifies the 100 most recent system events and reports the date and time of occurrence.
C	Config	Provides standard configuration options, PairGain options, date and time setting, and a reset option (factory settings).
I	Inventory	Provides product information about the various devices that are in the system and lists circuit and device identifications.
R	Rlogon / Rlogout	Remote logon can be performed from the H2TU-C or the H2TU-R. The screen displays " R logout" when the H2TU-C or H2TU-R is remotely logged on to the other unit at the end of the circuit. To logoff the remote unit, press R . " R logout" changes to " R logon." The unit is now locally logged on until R is pressed again to re-initiate a remote logon.
H	Help	Provides a glossary of terms used in the HiGain Solitaire HDSL2 maintenance screens, a list of navigational keys, and PairGain contact information.

PROVISIONING TASKS

After the H2TU-C-319 is successfully installed, perform these basic provisioning tasks:

- Set date and time
- Set circuit ID numbers
- Make any necessary configuration changes
- Clear history, alarm, and event log screens to ensure accurate data

Setting Date and Time

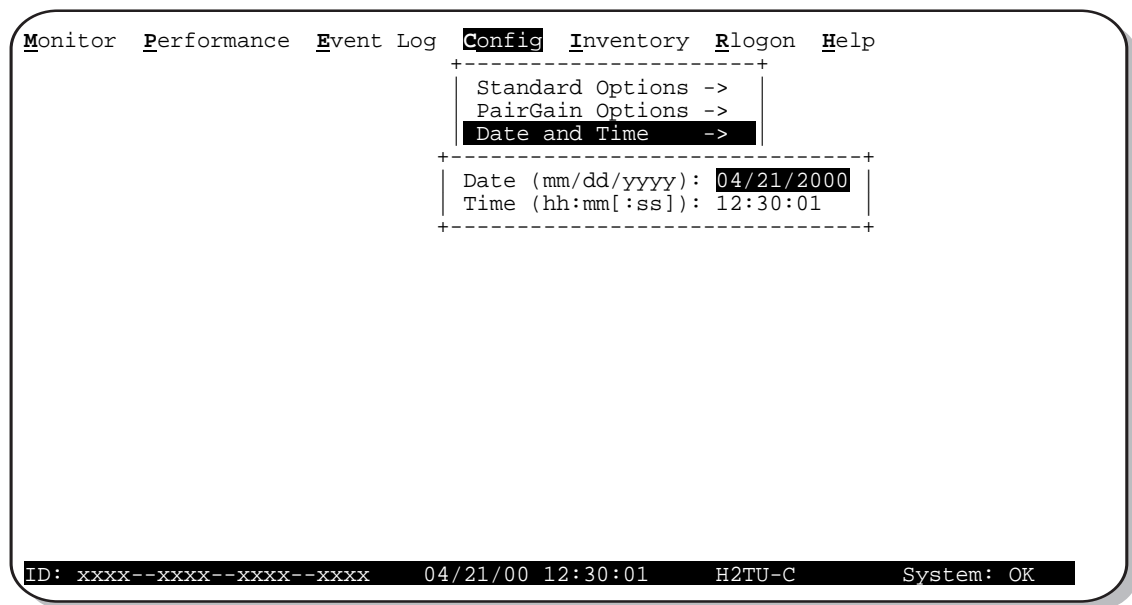


Figure 5. Configuration Menu - Date and Time

- 1 Type **C** to select the Config menu.
- 2 Select **Date and Time**, then press **ENTER**.
- 3 Enter the date in the format indicated, then press **ENTER**.
- 4 Enter the time in the format indicated, then press **ENTER**. Entering seconds is optional.

Setting Circuit ID Numbers

The Inventory menu provides product information on all units in the system and allows setting of the circuit and unit identification numbers.

```

Monitor Performance Event Log Config Inventory Rlogon Help
-----
Product Information -----
Unit      : H2TU-C          H2TU-R
Product   : H2TU-C-319     H2TU-R-402
List      : 1              2
Sw Ver.   : 2.10           2.10
Build #   : 02             02
Checksum  : 0x3FAE         0x3FAE
H2 Xcvr   : L1-RA2 1.31    L1-RA2 1.31
Serial #  : 01232456789    0123456789
CLEI     : VACHDN0CAA      VARHJUUCAA
Mfg. Date: 11/05/99       11/05/99
-----
Circuit and Unit Identifications -----
Circuit ID : xxxx--xxxx--xxxx--xxxx
H2TU-R ID  : yyyy--yyyy--yyyy--yyyy

Enter new ID and press <Enter> to set.
ID: xxxx--xxxx--xxxx--xxxx 04/21/00 12:30:01 H2TU-C System: OK

```

Figure 6. Inventory Screen

- 1 Press **I** to select the Inventory screen.
- 2 Type the Circuit ID number, then press **ENTER**.
- 3 Type the ID numbers of all other devices listed in the system, pressing **ENTER** after each entry.

Making Changes to the System Configuration

The Config menu (Figure 7) allows you to make the following types of system configuration changes:

- Standard options (Figure 8 on page 18)
- PairGain options (Figure 9 on page 18)
- Date and time (see “Setting Date and Time” on page 15)
- Master clear (see “Clearing the History, Alarm and Event Log Screens” on page 23)
- Reset to factory default configuration (Figure 10 on page 22)



Figure 7. Configuration Menu

Making Changes to Standard and PairGain Options

Figure 8 and Figure 9 on page 18 show the Standard and PairGain configuration options. Standard options are those that are supported by HiGain Solitaire units when connected to units from other vendors. PairGain options are an extended set of options that are only available when using HiGain units exclusively. For a description of each option and a list of possible option settings, refer to Table 5 on page 19 and Table 6 on page 20. To make changes to these options:

- 1 Press **C** to select the Config menu.
- 2 Use the **↑** and **↓** arrow keys to select **Standard Options** or **PairGain Options**, and press **ENTER**.
- 3 Use the arrow keys to select an option.
- 4 Press the **SPACEBAR** to cycle through the available settings for that option.
- 5 Press **ENTER** to activate your choice.

```

Monitor Performance Event Log Config Inventory Rlogon Help
+-----+
| Standard Options -> |
+-----+
| Loopback Timeout (LBTO) : 60 min |
| Loop Attenuation Threshold (LATT) [0-40]: 35 dB |
| Margin Threshold (MARG) [0-15]: 4 dB |
| DS1 Frame Formatting (FRMG) : AUTO |
| DS1 Line coding (DS1) : AUTO |
| H2TU-C Equalization (EQL) : 0 ft |
| H2TU-R Line Buildout (RLBO) : 0 dB |
| Alarm Pattern (ALMP) : AIS |
| H2TU-R TLOS Loopback (TLOS) : DIS |
| Network Loopback Pattern (NLBP) : AIS |
+-----+
Press <Space> to cycle through settings and <Enter> to activate.
ID: xxxx--xxxx--xxxx--xxxx 04/21/00 12:30:01 H2TU-C System: OK
    
```

Figure 8. Configuration Menu - Standard Options (Defaults Shown)

```

Monitor Performance Event Log Config Inventory Rlogon Help
+-----+
| Standard Options -> |
| PairGain Options -> |
+-----+
| Line Power Feed (PWRP) : ON |
| Remote Provisioning (RTPV) : ENA |
| Bipolar Violation Transparency (BPVT) : DIS |
| HDSL2 BER Threshold (HBER) : NONE |
| DS1 BER (DBER) : DIS |
| Special Loopback Mode (SPLB) : GNLB |
| SmartJack Loopback (LPBK) : ENA |
| Minor Alarm (ALM) : DIS |
| Remote Disconnect Alarm (RDA) : ENA |
+-----+
Press <Space> to cycle through settings and <Enter> to activate.
ID: xxxx--xxxx--xxxx--xxxx 04/21/00 12:30:01 H2TU-C System: OK
    
```

Figure 9. Configuration Menu - PairGain Options (Defaults Shown)

Table 5 describes the Standard Config screen options and lists their front-panel display codes. Table 6 on page 20 describes the PairGain Config screen options. Selections in bold typeface are the factory default settings.

Table 5. H2TU-C-319 List 1 and List 1C Standard Config Screen Options

System Settings Screen Options	Front-panel Display Code	Selection	Description
Loopback Timeout	LBTO	NONE	Disables automatic time-out cancellation of all loopbacks.
		20	Sets automatic cancellation of all loopbacks to 20 minutes after initiation.
		60	Sets automatic cancellation of all loopbacks to 60 minutes after initiation.
		120	Sets automatic cancellation of all loopbacks to 120 minutes after initiation.
Loop Attenuation Threshold	LATT	0 through 40 dB	Determines the maximum loop attenuation before an alarm is declared. The loop attenuation threshold can only be set through the HiGain Solitaire HDSL2 maintenance screens. Zero disables the alarm.
		35 dB	Default value.
Margin Threshold	MARG	0 to 15 dB	Determines the minimum allowable margin below which a system alarm can occur. The Margin Alarm Threshold can only be set through the HiGain Solitaire HDSL2 maintenance screens. Zero disables the alarm.
		4dB	Default value.
DS1 Frame Formatting	FRMG	AUTO	Configures the HiGain Solitaire system to operate in an auto-framing (AUTO) mode. It detects and locks to both SF or ESF DS1 frame patterns. Line and path performance parameters are maintained and displayed. Unframed payloads will cause the ES-P and SES-P counters to increment.
		SF	Configures the HiGain Solitaire system to search for the SF framing pattern at its DS1 input.
		ESF	Configures the HiGain Solitaire system to search for the ESF framing pattern at its DS1 input.
		UNFR	Configures the same as AUTO except unframed payloads do not cause the ES-P and SES-P counters to increment.
DS1 Line Coding (see “DS1 Line Code Option” on page 21)	DS1	AUTO	The H2TU-C and H2TU-R monitor the incoming DS1 bit streams for the B8ZS code. If the H2TU-R detects this code, the H2TU-C enters B8ZS output mode. The H2TU-C reverts back to AMI output mode if no B8ZS codes are received at the H2TU-R input for 5 seconds. Similarly, when the H2TU-C detects the B8ZS code, the H2TU-R enters the B8ZS mode and returns to AMI mode if no B8ZS code is received at the H2TU-C input for 5 seconds.
		B8ZS	Places both the H2TU-C and H2TU-R into their B8ZS modes.
		AMI	Places both the H2TU-C and H2TU-R into their AMI modes.
H2TU-C Equalization See “Equalization (EQL) Option.” on page 21.	EQL	0	Sets the Equalizer to DSX-1 for 0 to 133 feet.
		133	Sets the Equalizer to DSX-1 for 133 to 266 feet.
		266	Sets the Equalizer to DSX-1 for 266 to 399 feet.
		399	Sets the Equalizer to DSX-1 for 399 to 533 feet.
		533	Sets the Equalizer to DSX-1 for 533 to 655 feet.
H2TU-R Line Buildout	RLBO	0 dB	Sets the DS1 receive level output toward the Customer Interface (CI). Line buildout can only be set through the HiGain Solitaire HDSL2 maintenance screens.
		-7.5 dB	
		-15 dB	
Alarm Pattern	ALMP	AIS	Enables the HiGain Solitaire system to output an AIS payload at its DS1 ports for LOSW and T1 LOS. See Figure 24 on page 39 for LOS/AIS response priorities.
		LOS	Enables the HiGain Solitaire system to output an LOS condition at its DS1 ports for LOSW and T1 LOS.
H2TU-R TLOS Loopback	TLOS	ENA	Enables a logic loopback at the H2TU-R when an LOS occurs at its DS1 input. See Figure 24 on page 39 for LOS/AIS response priorities.
		DIS	Disables TLOS logic loopback.

Table 5. H2TU-C-319 List 1 and List 1C Standard Config Screen Options (Cont.)

System Settings Screen Options	Front-panel Display Code	Selection	Description
Network Loopback Pattern	NLBP	AIS	Enables the H2TU-R to transmit AIS towards the CI for any network loopback. See Figure 24 on page 39 for LOS/AIS response priorities.
		LOS	Enables the H2TU-R to transmit LOS towards the CI for any network loopback.

Table 6. H2TU-C-319 List 1 and List 1C PairGain Config Screen Options

System Settings Screen Options	Front-panel Display Code	Selection	Description
Line Power Feed	PWRF	OFF	Disables powering to the HDSL2 pair.
		ON	Keeps the HDSL2 line voltage at nominal -185 Vdc.
Remote Provisioning	RTPV	ENA	Enables remote provisioning.
		DIS	Disables remote provisioning.
Bipolar Violation Transparency See “Bipolar Violation Transparency (BPVT) Option” on page 21 .	BPVT	ENA	Enables BPVs and HDSL2 CRC errors at the DS1 input to be converted into DS1 BPVs at the DS1 output at the distant end. This makes HiGain Solitaire transparent to BPVs.
		DIS	Disables BPV Transparency.
HDSL2 BER Threshold See “HDSL2 BER (HBER) Option” on page 21 and “System Alarm Output Pin” on page 53 .	HBER	1E-6	System alarm relay contact closes and the Status LED flashes red when the Block Error Rate (BER) exceeds 10 ⁻⁶ .
		1E-7	System alarm relay contact closes and the Status LED flashes red when BER exceeds 10 ⁻⁷ .
		NONE	Prevents generation of a system alarm due to BER.
DS1 BER Threshold	DBER	ENA	Enables the fixed 24-hour DS1 BER threshold.
		DIS	Prevents the generation of a system alarm due to DS1 BER.
Special Loopback Mode	SPLB	GNLB	Configures the HiGain Solitaire system to respond to the generic inband loopback codes.
		A1LB and A2LB	Configures the HiGain Solitaire system to respond to the inband loopback codes of the Teltrend addressable repeater.
		A3LB	Configures the HiGain Solitaire system to respond to the inband loopback codes of the Wescom addressable repeater.
		A4LB	Configures the HiGain Solitaire system to respond to the inband loopback codes of the Wescom Mod 1 addressable repeater.
		A5LB	Configures the HiGain system to respond to the inband loopback codes of the Teltrend Mod 1 addressable repeater.
SmartJack Loopback	LPBK	ENA	Enables the HiGain Solitaire system to recognize all inband SmartJack loopback commands.
		DIS	Configures the HiGain Solitaire system to ignore all inband SmartJack loopback commands.
Minor Alarm	ALM	ENA	Enables the generation of the output alarm on pin H when a system alarm condition occurs.
		DIS	Disables the generation of the output alarm on pin H when a system alarm condition occurs.

Table 6. H2TU-C-319 List 1 and List 1C PairGain Config Screen Options (Cont.)

System Settings Screen Options	Front-panel Display Code	Selection	Description
Remote Disconnect Alarm	RDA	ENA	Enables a remote DS1 LOS condition at the input to the H2TU-R to generate an LOS alarm. AIS or LOS (depending on ALMP) is sent towards the network.
		DIS	Prevents a remote DS1 LOS condition at the input to the H2TU-R from causing an LOS alarm. The front-panel Status LED still flashes red and the ALRM RLOS message appears, but the alarm relay contacts do not close and LOS is sent towards the network from the H2TU-C instead of AIS.

HDSL2 BER (HBER) Option. The HBER option permits monitoring of loop integrity and reporting of alarms when excessive errors are detected. The PM primitive used for this purpose is the CRC checksum performed on the HDSL2 frame for both directions of transmission. It is, therefore, called a block error rate rather than the bit error rate associated with the DS1 interface. The Monitor screen displays the CRC errors and counts for both the H2TU-C and H2TU-R. The HBER option allows an alarm to be generated if the total number of CRCs at either the H2TU-C or H2TU-R exceeds the selected BER threshold during the last 1-minute interval.

- HBER option = 1E-6. Alarm is generated if CRC > 92
- HBER option = 1E-7. Alarm is generated if CRC > 9

Once initiated, the HBER count clears when the CRC count drops below the selected threshold. Selecting NONE inhibits this alarm.

DS1 Line Code Option. The DS1 line code option should always be set to conform to the type of DS1 service (AMI or B8ZS) being provided by the HiGain system. The Auto mode, which can adapt to either AMI or B8ZS, should only be used in applications that require it (such as when HiGain acts as a standby circuit to DS1 circuits whose line codes are not known or may be both AMI and B8ZS). This is because the Auto mode induces one BPV in the DS1 bit stream whenever it switches from AMI to B8ZS. The Auto mode allows both the H2TU-C and the H2TU-R to set its DS1 output code to that which is being received at the distant end DS1 input. This forces the input and the output codes in each direction of transmission to be identical.

Equalization (EQL) Option. Equalization is the configuration of system transmission characteristics within specified limits. An adaptive equalizer inserts a frequency-shaped loss that corresponds to an equivalent addition of an appropriate cable length. By simulating the additional cable loss necessary for correct operation, the equalizer compensates for a range of variation in transmission path characteristics.

Bipolar Violation Transparency (BPVT) Option. The H2TU-C-319 improves compatibility with Digital Loop Carrier (DLC) feeder applications because of its ability to transmit DS1 BPV occurrences between its DS1 interfaces. This feature is required to support protection switching in DLC applications. Each DLC terminal must be able to monitor the integrity of its Receive DS1 payload and then switch to the protect line when the integrity of the path drops below specific user selected limits. An essential requirement of this feature is the need for each DLC terminal to detect BPVs in its DS1 input. Standard HDSL systems correct DS1 BPVs at the input and, therefore, prevent them from being detected by the DLC terminals to which they are connected. The H2TU-C-319 and its associated remote units remove this limitation and become BPV transparent by detecting and counting input BPVs at each end and then by replicating them at the DS1 output port of the distant end.

The BPV count is converted into BPVs at the distant end during the following second at a rate of 1 BPV every 128 DS1 bits up to a maximum of 12000 (BER=7.7 x 10⁻³). This maximum rate is more than adequate since it exceeds the maximum 10⁻³ BER required by most DLC systems.

DS1 BER (DBER) Option. The DS1 BER alarm occurs when any of the DS1 or DSX-1 performance monitoring parameters listed in Table 7 exceed the counts shown for the 24-hour period between 12:00:00 AM through 11:59:59 PM. These thresholds correspond to a 10⁻⁶ BER. All PM counters clear to zero at 12:00:00 AM or when Master Clear is selected.

Table 7. DS1/DSX-1 24-hour PM Threshold

Parameter	Threshold Count
CV-L (BPV)	133,400
ES-L, ES-P, PRM-NE, PRM-FE	648
SES-L, SES-P	100
UAS-P, UAS-L	10

Resetting the H2TU-C



Resetting the H2TU-C to its original factory settings may cause interruption of service.

To reset the H2TU-C-319 to its original factory defaults:

- 1 Press **C** to select the Config menu.
- 2 Use the **↑** and **↓** arrow keys to select **Set Factory Defaults**, then press **ENTER**.
- 3 Press **Y** if you are certain you want to reset the H2TU-C, or press **N** to cancel this action.

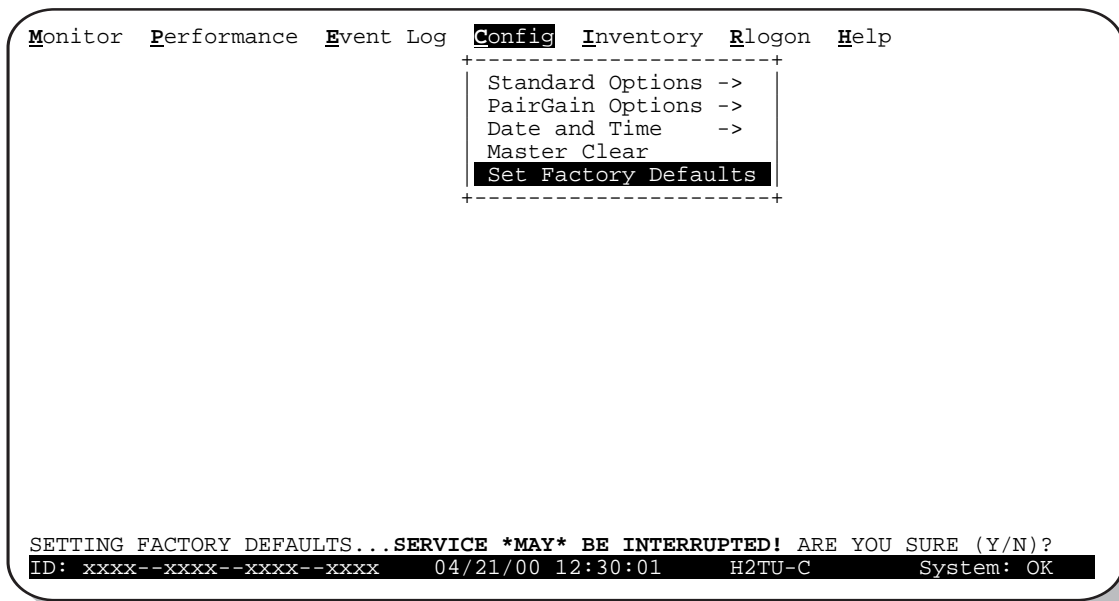


Figure 10. Configuration Menu - Reset to Factory Defaults

Clearing the History, Alarm and Event Log Screens

Clear the History, Alarm and Event Log screens after the system has been installed and is functioning properly. This removes miscellaneous data acquired during the startup session and ensures that you have meaningful data thereafter.

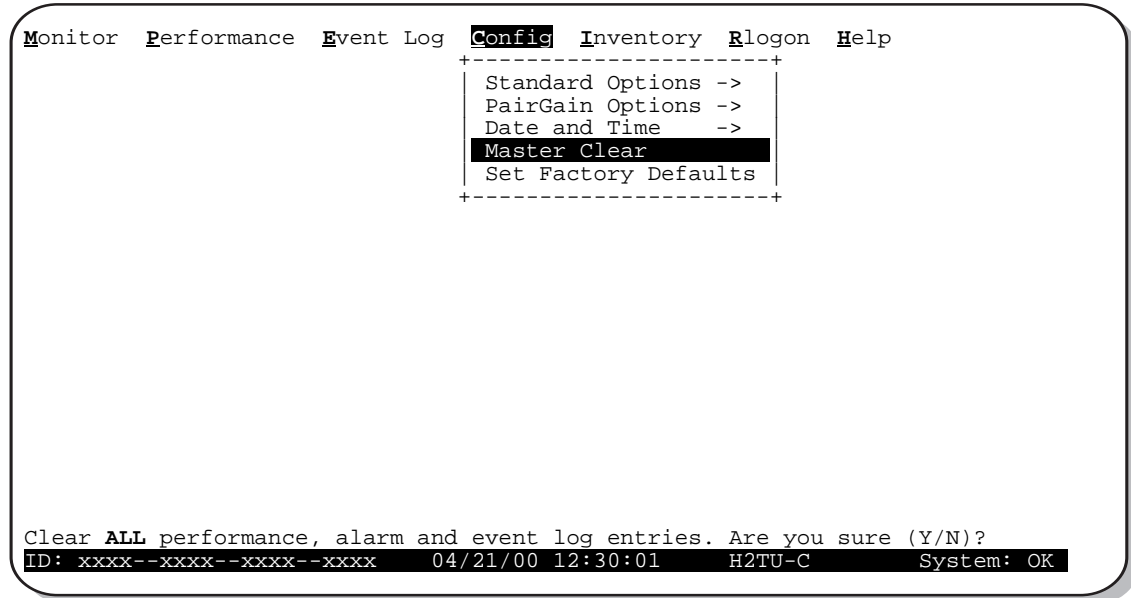


Figure 11. Master Clear

To clear the Event Log, type **E** to select the Event Log screen, then type **L** to clear the screen.

To clear an individual history or alarm screen, do the following:

- 1 Press **P** to select the Performance screen.
- 2 Press the **SPACEBAR** to select either interface (**H2TU-C DS1**, **H2TU-R DS1**, **H2TU-C HDSL2**, or **H2TU-R HDSL2**), then press **ENTER**.
- 3 Press the **SPACEBAR** to select the type of statistics (**Current**, **Alarm History**, **25 Hour History**, **48 Hour History**, or **31 Day History**) and press **ENTER** after your selection.
 - Selecting **31 Day History** allows you to clear the Current, 25 Hour, 48 Hour, and 31 Day performance history screens for the selected interface.
 - Selecting **Alarm History** allows you to clear the alarm history screen for the selected interface. For information about the DS1 and HDSL2 Alarm screens, see [Table 11 on page 33](#).
- 4 Press **L** to clear the screen.

To clear ALL history, alarm, and event log screens by this method:

- 1 Press **C** to select the Config screen.
- 2 Select **Master Clear**.
- 3 Press **Y** to clear all screens.

MONITORING SYSTEM ACTIVITY AND PERFORMANCE

The H2TU-C-319 provides two sets of maintenance screens for monitoring system activity and assessing performance.

- The Monitor screens provide a graphical representation of circuit activity and allow initiation of loopbacks.
- The Performance screens provide current, 25-hour, 48-hour, and 31-day performance histories and a continuous alarm history.
- The Event Log provides a description of the 100 most recent events.

SYSTEM OVERVIEW

Future product enhancements will support up to two regenerators with three HDSL2 spans as shown in [Figure 12](#).

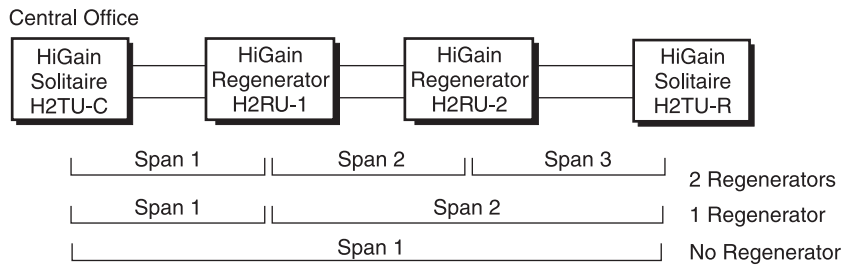


Figure 12. System Spans

The Monitor and Performance screens provide important activity and performance information about the HDSL2 spans and span devices.

USING THE MONITOR SCREEN TO VIEW SYSTEM ACTIVITY

- 1 Press **M** to view the system diagram.

Figure 13 shows an armed circuit with an active loopback and alarms. Terms used on the system diagram are defined in the onscreen Help menu glossary. Abnormal situations are highlighted on the diagram. See Table 8 on page 26 for screen field descriptions.

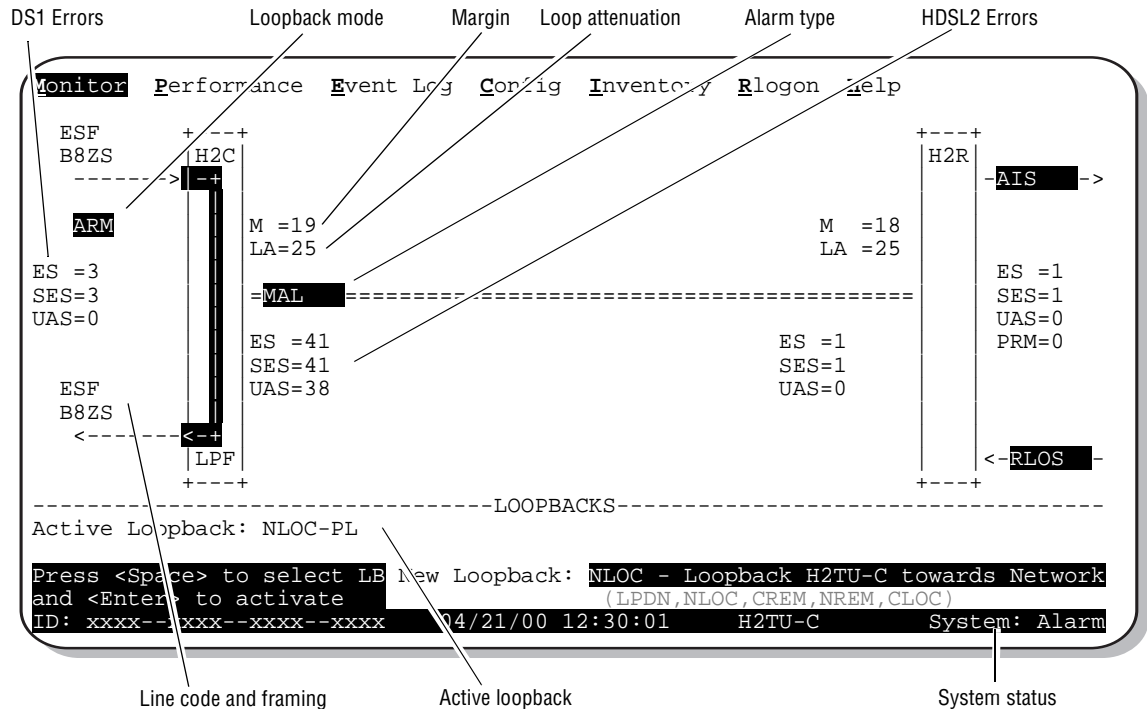


Figure 13. Monitor Screen - Active Loopback with Alarms

- 2 To initiate a loopback, press the **SPACEBAR** to cycle through the loopback choices. Press **ENTER** to make your choice, and type **Y** or **N** when prompted with the message: Are you sure (Y/N)? For more information about loopbacks and troubleshooting, see “Troubleshooting” on page 37.
- 3 To initiate a loopdown, press the **SPACEBAR** to select **LPDN**, then press **ENTER**. Type **Y** or **N** when prompted with the message: Are you sure (Y/N)?

Table 8. Monitor Screen Descriptions

Field	Description
Active Loopback	An active loopback is indicated on the lower third of the Monitor screen. Available loopbacks are indicated by gray text. See Table 15 on page 41 for a summary of the HiGain Solitaire loopback codes and activation methods.
Code type	Type of DS1 line coding used (B8ZS, or AMI).
DS1 ES Count	Errored Seconds—The sum of the ES-L and ES-P counts detected on the DS1 input over a 24-hour period. Errors included are: DS1 Frame errors, BPV, and ESF CRC errors.
DS1 SES Count	Severely Errored Seconds—The sum of the DS1 SES-L and SES-P counts over the last 24 hours.
DS1 UAS Count	Unavailable Errored Seconds—The number of seconds during which the DS1 input signal was absent over a 24-hour period.
Frame type	Type of DS1 framing used on the input stream (SF, ESF, or UNFR).
HDSL2 ES Count	Errored Seconds—The number of 1-second intervals that contained at least one CRC or LOSW error. This value is a running total of the last 24 Hours.
HDSL2 SES Count	Severely Errored Seconds—The number of 1-second intervals that contain at least 50 CRC errors or one or more LOSW defects. (An LOSW defect occurs when at least three consecutive HDSL frames contain one or more frame bit errors.) This value is a running total of the last 24 hours.
HDSL2 UAS Count	Unavailable Errored Seconds—The number of seconds the HDSL2 loop is unavailable. This occurs after 10 contiguous HDSL SES and is retired after 10 contiguous non-SES seconds. This value is a running total of the last 24 hours.
HG	The loopback was initiated from a HiGain (HG) front panel or by a HiGain maintenance terminal loopback command.
ID	Circuit identification (ID) number.
LA	Loop Attenuation—indicates the attenuation of the Overlapped Pulse Amplitude Modulation (PAM) Transmission with Interlocking Spectra (OPTIS) pulse from the distant end. The value is related to the 196 kHz loss of the cable pair. The loop attenuation is a more direct indication of the loop attenuation to the OPTIS signal than is the 196 kHz loss. The normal HiGain Solitaire LA operation range should be kept under 35 dB.
LPF	Line Power Feed—indicates the HDSL2 line power is on.
M	Margin— the signal-to-noise ratio at all HDSL2 ports, relative to a 10 ⁻⁷ Bit Error Rate.
PL	The loopback was initiated by a command embedded in the DS1 data path payload (PL).
PRM	The sum of the PRM-NE and PRM-FE counts.
System Status	The presence or absence of alarms (BER, MARG, LOS, AIS, RAI, LA) is indicated on the lower right corner of all screens. See Table 14 on page 37 for a list of the front-panel system alarms.

USING THE PERFORMANCE SCREENS TO VIEW PERFORMANCE DATA

The Performance screens display:

- CRC statistics for the HDSL2 or DS1 interface in 31-day, 48-hour, 25-hour, and current history reports.
- Alarm statistics for the HDSL2 ([Figure 20 on page 32](#)) or DS1 interfaces ([Figure 21 on page 33](#)) on a continuous basis.

To access the Performance history screens:

- 1 Press **P** to select the Performance screen.
- 2 Press the **SPACEBAR** to select either interface (**H2TU-C DS1**, **H2TU-R DS1**, **H2TU-C HDSL2**, or **H2TU-R HDSL2**), then press **ENTER**.
- 3 Press the **SPACEBAR** to select the type of statistics (**Current**, **Alarm History**, **25 Hour History**, **48 Hour History**, or **31 Day History**), then press **ENTER**.

Performance History at the DS1 Interface

Figure 14 and Figure 15 are examples of an H2TU-R DS1 31-day history and H2TU-C DS1 25-hour history performance screens, respectively, as viewed from the line unit. In addition, there are 48-hour and current history statistic screens for the DS1 interfaces for the H2TU-R and H2TU-C. Table 9 on page 28 describes the acronyms used in the performance history screens.

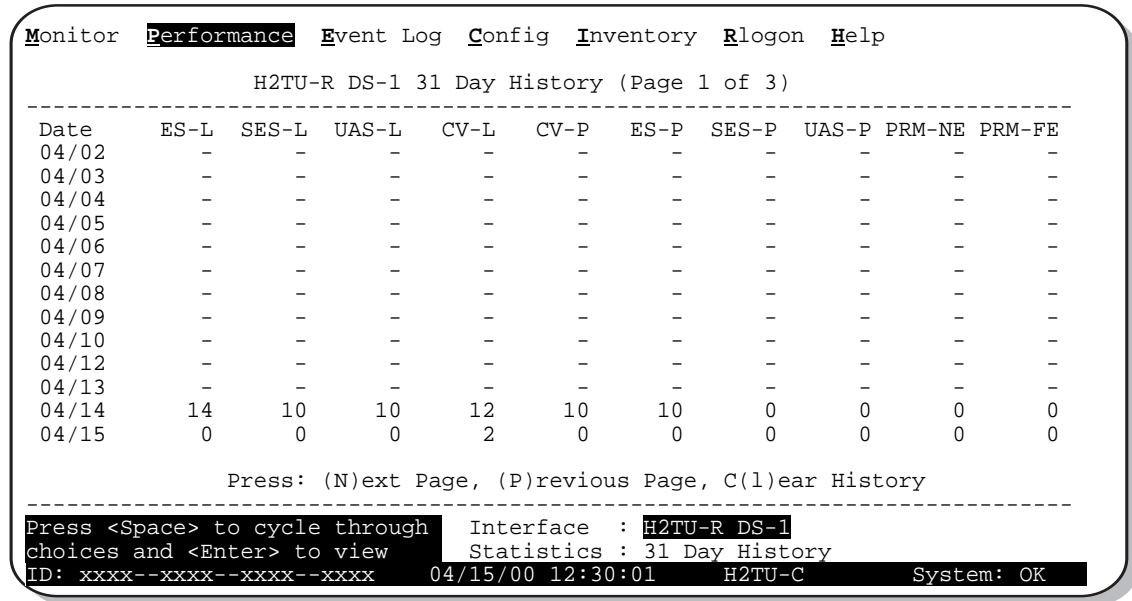


Figure 14. H2TU-R DS1 31-day Performance History

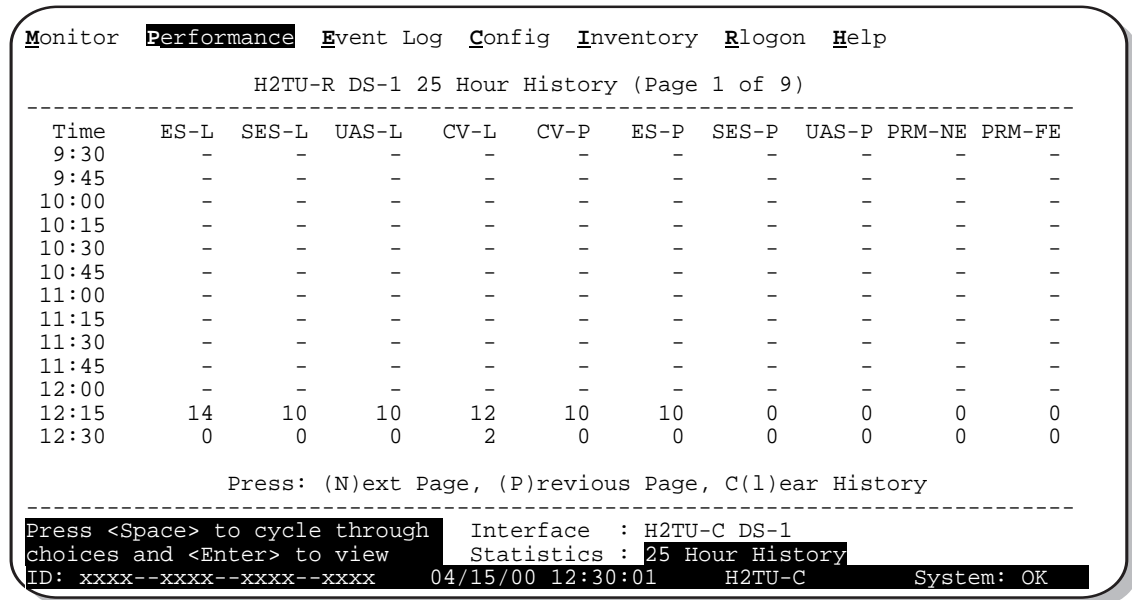


Figure 15. H2TU-C DS1 25-hour Performance History

Table 9. Acronyms Used on the DS1 Performance History Screens

Acronym	Description	Acronym	Description
ES-L ^(a)	Errored Seconds - Line Seconds with BPV ≥ 1 .	SES-P	Severely errored seconds - Path Seconds with SES or CRC(ESF) ≥ 320 or FE ^(b) (SF) $\geq 8 (F_T + F_S)$.
SES-L	Severely errored seconds - Line Seconds with BPV plus EXZ ≥ 1544 or LOS ≥ 1 .	UAS-P	Unavailable seconds - Path A second of unavailability based on SES-P or AIS ≥ 1 .
UAS-L	Unavailable seconds - Line Seconds with LOS ≥ 1 .	PRM-NE ^(c)	Performance Report Messaging - Near End The PRM from CPE indicates errors, and the signal received from the network at the remote is error-free.
CV-L	Code Violation - Line Total BPV count.	PRM-FE ^(c)	Performance Report Messaging - Far End The PRM from the network indicates errors, and the signal received from the CPE is error-free.
CV-P	Code Violation - Path Total count of SF frame bit (FB) errors or ESF, CRC errors.	B8ZSS ^(d)	B8ZS Monitored Seconds Seconds with B8ZS detection when AMI option is active.
ES-P ^(e)	Errored Seconds - Path Seconds with SEF ^(f) , CRC (ESF) or FE ^(b) (SF) ≥ 1 .	MSEC ^(d)	Monitored Seconds of the current (15 minute/1 hour/1 day) screen.

(a) Line (L) refers to the AMI DS1 line used to transport the payload.

(b) FE is a frame bit error.

(c) Only appears on H2TU-R Performance History screens.

(d) Appears on the DS1 Current Statistics screens.

(e) Path (P) refers to the total framed payload being transported between two points.

(f) Severely Errored Frame—Two or more frame bit errors occurring in a 0.75 ms interval for SF or a 3 ms interval for ESF.

Performance History at the HDSL2 Interface

Figure 16 is an example of a 31-day HDSL2 performance screen as viewed from the H2TU-C. The HDSL2 interface has 31-day, 48-hour, 25-hour, and current statistic screens for the H2TU-C. Table 10 describes the acronyms used in the performance history screens.

```

Monitor Performance Event Log Config Inventory Rlogon Help
                H2TU-C HDSL2 31 Day History (Page 1 of 3)
-----
Date      ES      SES      CV      UAS      LOSWS
04/03     -      -      -      -      -
04/04     -      -      -      -      -
04/05     -      -      -      -      -
04/06     -      -      -      -      -
04/07     -      -      -      -      -
04/08     -      -      -      -      -
04/09     -      -      -      -      -
04/10     -      -      -      -      -
04/11     -      -      -      -      -
04/12     -      -      -      -      -
04/13     -      -      -      -      -
04/14     -      -      -      -      -
04/15     14     10     10     14     10

                Press: (N)ext Page, (P)revious Page, C(l)ear History
-----
Press <Space> to cycle through Interface : H2TU-C HDSL2
choices and <Enter> to view Statistics : 31 Day History
ID: xxxx--xxxx--xxxx--xxxx 04/15/00 12:30:01 H2TU-C System: OK

```

Figure 16. H2TU-C HDSL2 31-day Performance History

Table 10. Acronyms Used on the HDSL2 Performance History Screens

Acronym	Description
ES	Errored seconds Seconds with HDSL2 CRC ≥ 1 or LOSW ≥ 1
SES	Severely errored seconds Seconds with HDSL2 CRC ≥ 50 or LOSW ≥ 1
CV	Code Violation Total count of HDSL2 CRC errors
UAS	Unavailable seconds Based on 10 contiguous SES occurrences
LOSWS	Loss of Sync Word Second Seconds with LOSW ≥ 1

Current Statistics Screens for the DS1 Interface

Examples of current statistics screens are shown below. [Figure 17](#) and [Figure 18](#) show statistics for the DS1 interface at the remote unit and line unit, respectively. These screens report 1-day, 1-hour, and 15-minute statistics. Refer to [Table 9](#) on page 28 for descriptions of the kinds of errors reported on these screens.

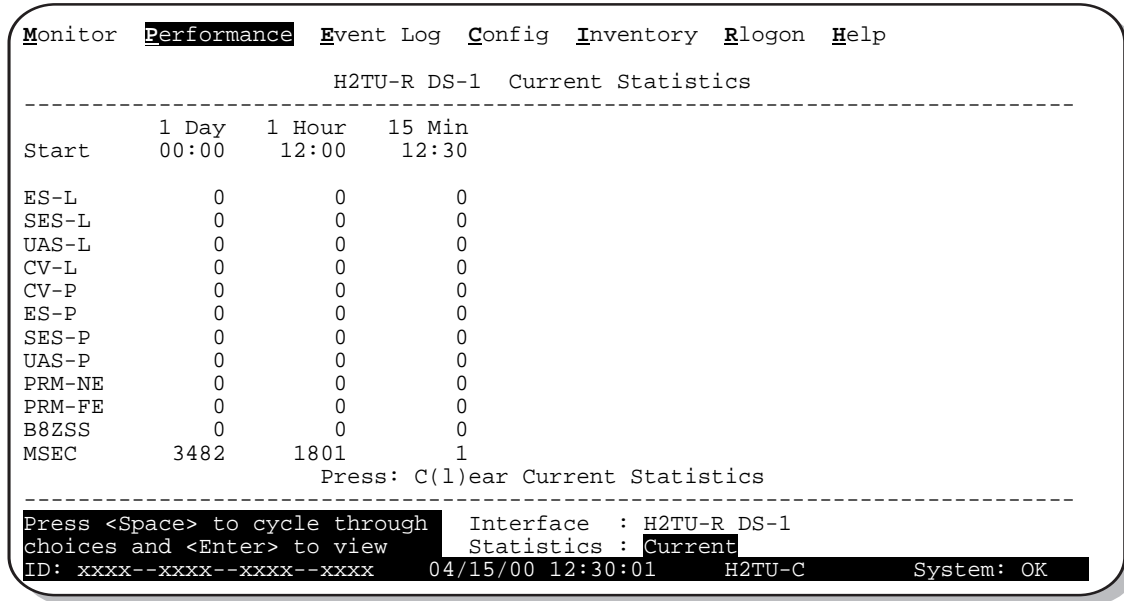


Figure 17. H2TU-R DS1 Current Statistics

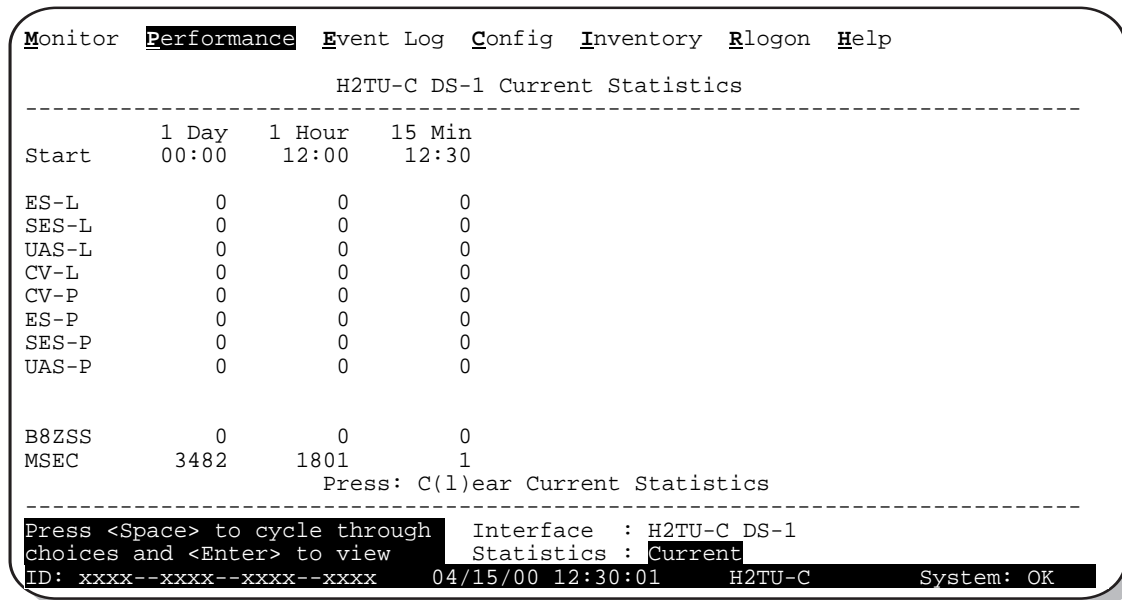


Figure 18. H2TU-C DS1 Current Statistics

Current Statistics for HDSL2 Interface

Figure 19 shows statistics for the HDSL2 interface at the H2TU-C. This screen reports 1-day, 1-hour, and 15-minute statistics. Refer to Table 10 on page 29 for descriptions of the kinds of errors reported on this screen.

```

Monitor Performance Event Log Config Inventory Rlogon Help
-----
H2TU-C HDSL2 Current Statistics
-----
Start      1 Day    1 Hour   15 Min
          00:00   12:00   12:30
ES         0         0         0
CV         0         0         0
SES        0         0         0
UAS        0         0         0
LOSWS     3482     1801     1

          Margin(dB)  LA (dB)
Hi         16
Cur       15         25
Low        12

          Press: C(1)ear Current Statistics
-----
Press <Space> to cycle through Interface : H2TU-C HDSL2
choices and <Enter> to view   Statistics : Current
ID: xxxx--xxxx--xxxx--xxxx  04/15/00 12:30:01   H2TU-C   System: OK

```

Figure 19. H2TU-C HDSL2 Current Statistics

USING THE PERFORMANCE SCREENS TO VIEW ALARM DATA

To access the alarm history screens:

- 1 Press **P** to select the Performance screen.
- 2 Press the **SPACEBAR** to select an interface (**H2TU-C DS1**, **H2TU-R DS1**, **H2TU-C HDSL2**, or **H2TU-R HDSL2**), then press **ENTER**.
- 3 Press the **SPACEBAR** until **Alarm History** is selected, then press **ENTER**.
 - Press **N** or **P** to page through the alarm history screens.
 - Press **L** to clear the selected alarm history screen.

Alarm History at the DS1 Interface

The Alarm History screen reports DS1 statistics for the H2TU-C (Figure 20) and the H2TU-R (Figure 21 on page 33) on a continuous basis. The types of alarms reported are described in Table 11 on page 33. Current alarms are shown in reverse video.

```

Monitor Performance Event Log Config Inventory Rlogon Help
                H2TU-C DS-1 Alarm History
-----
Alarm           First           Last           Status         Count
LLOS            04/03/00 00:00       04/03/00 00:45   ALARM         12
LAIS            04/03/00 00:37       04/03/00 00:45   OK             0
DBER            04/03/00 00:37       04/03/00 00:45   OK             7
LOF             04/03/00 00:37       04/03/00 00:45   OK             0
-----
                Press: C(l)ear Alarm History
-----
Press <Space> to cycle through choices and <Enter> to view
Interface : H2TU-C DS-1
Statistics : Alarm History
ID: xxxx--xxxx--xxxx--xxxx 04/15/00 12:30:01 H2TU-C System: Alarm
  
```

Figure 20. H2TU-C DS1 Alarm History Screen


```

Monitor Performance Event Log Config Inventory Rlogon Help
-----
H2TU-R DS-1 Alarm History
-----
Alarm          First              Last              Status           Count
-----
RLOS           04/03/00 00:00    04/03/00 00:45    ALARM            12
RAIS
RAI
LRAI
PRM-NE
PRM-FE
DBER           04/03/00 00:37    04/03/00 00:45    OK                7
LOF
LOF           04/03/00 00:37    04/03/00 00:45    OK                0

Press: C(1)ear Alarm History
-----
Press <Space> to cycle through choices and <Enter> to view
ID: xxxx--xxxx--xxxx--xxxx 04/15/00 12:30:01 H2TU-C System: Alarm
Interface : H2TU-R DS-1
Statistics : Alarm History

```

Figure 21. H2TU-R DS1 Alarm History Screen

Table 11. DS1 Alarm Descriptions

Screen Alarm	Front-panel Alarm	Description
H2TU-C DS1 ALARMS (Figure 20 on page 32)		
LLOS ^(a)	LLOS	Local Loss of Signal—Loss of the H2TU-C DSX-1 input signal.
LAIS ^(a)	LAIS	Local Alarm Indication Signal—Indicates an AIS (all ones) pattern is transmitted from the local DS1 output port. The ALMP option determines whether AIS (default) or LOS is sent towards the CPE.
DBER	DBER	Bit Error Rate—The DS1 BER has exceeded the built-in 24-hour threshold limits of approximately 10^{-6} .
LOF	LOF	Loss of Frame—Indicates the incoming DS1 frame pattern is other than the one selected, ESF or SF, by the FRMG option. Only occurs if the FRMG option is set to SF or ESF.
H2TU-R DS1 ALARMS (Figure 21)		
RLOS ^(b)	RLOS	Remote Loss of Signal—Loss of the H2TU-R DS1 input signal.
RAIS	RAIS	Remote AIS Signal—Indicates an AIS (all ones) pattern is being transmitted from the remote DS1 output port. By default (see Figure 24 on page 39) AIS-CI ^(b) is sent towards the network.
RAI	RRAI	Remote Alarm Indication—An RAI (yellow alarm) pattern is transmitted toward the network when an RAI pattern is detected at the H2TU-R input, and the signal from the network has defects.
LRAI	LRAI	Line (Unit) Remote Alarm Indication—An RAI condition is detected at the remote and the signal from the line unit is error-free.
PRM-NE	PRMN	Performance Report Messaging - Near End—The count of the PRM-NE register at the H2TU-R exceeds the 10^{-6} BER threshold at 648 events since 12:00:00 AM.
PRM-FE	PRMF	Performance Report Messaging - Far End—The count of the PRM-FE register at the H2TU-R exceeds the 10^{-6} BER threshold at 648 events since 12:00:00 AM.
DBER	DBER	Bit Error Rate—The DS1 BER has exceeded the built-in 24-hour threshold limits of approximately 10^{-6} .
LOF	LOF	Loss of Frame—Indicates the incoming DS1 payload does not contain the specific frame pattern, ESF or SF, selected by the FRMG option. Only occurs if the FRMG option is set to SF or ESF.

(a) Issues a minor alarm (sent to the management unit or the backplane), if enabled.

(b) AIS-CI is a modified AIS alarm pattern. Equipment not suited to detect AIS-CI still detects this signal as an AIS. AIS-CI is sent toward the network indicating that an LOS (RLOS) or AIS (RAIS) has been received from the CPE.

Alarm History at the HDSL2 Interface

Figure 22 shows the H2TU-C HDSL2 alarm history, and Table 12 describes the alarms.

```

Monitor Performance Event Log Config Inventory Rlogon Help
-----
H2TU-C HDSL2 Alarm History
-----
Alarm      First           Last           Status        Count
-----
LOSW       04/03/00 00:00   04/03/00 00:45   ALARM        12
MAL
LA
HBER       04/03/00 00:37   04/03/00 00:45   OK           7
SHORT
GND
OPEN
-----
Press: C(1)ear Alarm History
-----
Press <Space> to cycle through Interface : H2TU-C HDSL2
choices and <Enter> to view Statistics : Alarm History
ID: xxxx--xxxx--xxxx--xxxx 04/15/00 12:30:01 H2TU-C System: Alarm

```

Figure 22. H2TU-C HDSL2 Alarm History Screen

Table 12. HDSL2 Alarm Descriptions

Screen Alarm	Front-panel Alarm	Description
LOSW	LOSW	Loss of Sync Word—The HDSL2 loop has lost synchronization.
MAL	MAL	Margin—The margin on the HDSL2 loop has dropped below the minimum threshold value set for the system.
LA	LA	Loop Attenuation—The attenuation on the HDSL2 loop has exceeded the maximum value set for the HDSL2 loop attenuation threshold.
HBER	HBER	Block Error Rate—The HDSL2 BER has exceeded the set threshold limits of 10^{-6} or 10^{-7} .
SHORT ^(a)	SHRT	Indicates a short between the Tip and Ring of the HDSL2 pair.
GND ^(a)	GND	The HDSL2 loop is grounded.
OPEN ^(a)	OPEN	Indicates a line power open condition.

(a) Appears only on the H2TU-C line unit.

USING THE EVENT LOG TO TRACK SYSTEM EVENTS

To view a running log of system events, press **E** to select the Event Log. The Event Log displays the date and time of the 100 most recent events (most recent displayed first) and provides a description of each event. See [Table 13 on page 36](#) for an alphabetical listing of all possible event log messages.

- Press **N** or **P** to page through the event log.
- Press **T** to return to the top of the log.
- Press **L** to clear the event log.

```

Monitor Performance Event Log Config Inventory Rlogon Help
-----
System Event Log (Page 1 of 7)
-----
# Location Date and Time Entry
1 System 04/15/00 12:25:00 DS1 Alarm Register reset
2 System 04/15/00 12:25:00 HDLSL2 Alarm Register Reset
3 System 04/15/00 12:25:00 DS1 Performance Register Reset
4 System 04/15/00 12:25:00 HDLSL2 Performance Register Reset
5 System 04/15/00 00:13:32 Time set 12:25:00
6 System 04/15/00 00:13:27 Date set 04/15/00
7 H2TU-C 04/03/00 00:13:27 NLOC: Loop-down
8 H2TU-C 04/03/00 00:11:16 NLOC: Loop-up
9 H2TU-R 04/03/00 00:10:43 DS1 LOS Alarm: End
10 H2TU-R 04/03/00 00:10:30 DS1 LOS Alarm: Begin
11 System 04/03/00 00:04:11 DS1C: AUTO to AMI
12 H2TU-C 04/03/00 00:00:40 HDLSL2 LOSW Alarm: End
13 H2TU-C 04/03/00 00:00:02 HDLSL2 LOSW Alarm: Begin
14 - Empty -
15 - Empty -

Press: (N)ext Page, (P)revious Page, (T)op of Log, C(l)ear Log
ID: xxxx--xxxx--xxxx--xxxx 04/15/00 12:30:01 H2TU-C System: OK

```

Figure 23. System Event Log

Table 13. Event Log Entry Messages List

Event Log Messages
Any DS1 Alarm History reset
Any DS1 PM register reset
Any HDSL2 Alarm History reset
Any HDSL2 PM register reset
Any Loop Down (any segment)
Any Loop Up (any segment)
Any provisioning option change: <provisioning mnemonic>: changed from <old> to <new>
CPE DBER alarm (1 day threshold crossed of any PM data except PRM-NE or PRM-FE)
CPE DS1 AIS begins / ends
CPE DS1 LOS begins / ends
CPE PRM-NE BER alarm (<i>at the remote only</i> : 1 day threshold crossed of PRM-NE: trouble on CPE receive)
Current statistics reset
Event Log reset
H2TU-R Power up / down
HDSL2 DC pair open begins/ends on any segment
HDSL2 Ground fault begins/ends on any segment
HDSL2 HBER alarm (threshold crossed) on any segment.
HDSL2 loop attenuation (threshold crossed) on any HDSL2 I/F
HDSL2 margin alarm (threshold crossed) on any HDSL2 I/F
HDSL2 unavailability begins / ends on any segment
Master zero reset
NTWK DBER alarm (1day threshold crossed of any PM data)
NTWK DS1 LOS begins / ends
NTWK PRM-FE BER alarm (<i>at the remote only</i> : 1 day threshold crossed of PRM-FE: trouble on NTWK far end)
NTWN DS1 AIS begins / ends
Power Feed Open begins / ends
Power Feed Short begins / ends
RAI begins / ends
TX RAI-CI begins / ends (RAI-CI sent from the remote towards the network)

TROUBLESHOOTING

This section provides information about front-panel system alarms, LOS/AIS response, the OCT55 test procedure, and loopback testing.

FRONT-PANEL SYSTEM ALARMS

Table 14 lists possible H2TU-C-319 List 1 alarm states in order of priority as they appear on the front panel. These alarms correlate with the alarms displayed on the alarm history screens (see “Using the Performance Screens to View Performance Data” on page 26), however, the screens provide a more detailed analysis. More than one alarm condition can exist at any given time, but only one message can be displayed on the front panel. For multiple alarms, only the highest priority alarm displays.

Table 14. *Front-panel System Alarms*

Front-Panel Message ^(a)	Alarm	Description	To Inhibit:
SHRT ^(c)	Short	A short exists between the Tip and Ring of the HDSL2 pair.	Cannot be inhibited.
GND ^(c)	Ground	The HDSL2 loop is grounded.	Cannot be inhibited.
OPEN ^(c)	Open	A line power open condition exists.	Cannot be inhibited.
LOSW	Loss of Sync Word ^(b)	The HDSL2 loop has lost synchronization.	Cannot be inhibited.
LLOS	Local Loss of Signal	Loss of the DSX-1 input signal.	Cannot be inhibited.
RLOS	Remote Loss of Signal	Loss of the H2TU-R DS1 input signal.	Disable the RDA (Remote Disconnect Alarm) option. This prevents an LOS condition at the DS1 input to a H2TU-R from activating pin H. The front-panel Status LED still flashes red and the ALRM RLOS message displays to alert you of the LOS state. LOS is sent towards the network from the H2TU-C. This option prevents the common occurrences of a CPE LOS condition from generating recurring alarms and AIS payloads.
LAIS	Local Alarm Indication Signal	Indicates an AIS (all ones) pattern is being transmitted from the local DS1 output port.	Cannot be inhibited.
RAIS	Remote Alarm Indication Signal	Indicates an AIS (all ones) pattern is being received at the H2TU-R DS1 input port.	Cannot be inhibited.
LRAI	Line RAI—Remote Alarm Indication at the H2TU-R	Indicates an RAI alarm (yellow) from the CPE with an error-free signal from the line unit or network.	Cannot be inhibited.
RRAI	Remote RAI—Remote Alarm Indication at the H2TU-R	Indicates an RAI alarm (yellow) from the CPE with errors from the line unit or network.	Cannot be inhibited.
DBER	DS1 Bit Error Rate	The DS1 BER has exceeded the set 24-hour threshold limit of approximately 10^{-6} .	Select DIS for the DBER system option.
LOF	Loss of Frame	The DS1 input does not contain the ESF or SF frame pattern setting of the FRMG option.	Change FRMG option to AUTO or UNFR.

Table 14. Front-panel System Alarms (Cont.)

Front-Panel Message ^(a)	Alarm	Description	To Inhibit:
PRMN	Performance Report Messaging - Near End	H2TU-R PRM-NE BER threshold has been exceeded.	Set DBER threshold to DIS.
PRMF	Performance Report Messaging - Far End	H2TU-R PRM-FE BER threshold has been exceeded.	Set DBER threshold to DIS.
HBer ^(c)	HDSL2 Block Error Rate	The HDSL2 BER has exceeded the set threshold limits of 10 ⁻⁶ or 10 ⁻⁷ .	Select NONE for the HBER system option.
MAL ^(c)	Margin Alarm	The margin on the HDSL2 loop has dropped below the minimum threshold value set for the system.	Set the Margin Alarm Threshold option to zero.
LA ^(c)	Loop Attenuation	The attenuation on the HDSL2 loop has exceeded the maximum value set for the HDSL2 loop attenuation threshold.	Set the HDSL2 Loop Attenuation Threshold option to zero.

(a) The message, ALRM, displays prior to any alarm message.

(b) When the HDSL2 loop loses sync word (LOSW), a system alarm condition exists. The H2TU-C-319 enters the acquiring mode, the front panel status LED flashes red, and the ACQ or SIG message displays instead of the ALRM message.

(c) Only these alarms assert the System Alarm bus on pin H of the card-edge connector if the ALM option is set to enabled.

Alarm Option for DLC Feed

To improve HiGain Solitaire compatibility with the switch-to-protect features used in DLC feeder applications, the H2TU-C-319 has an Alarm Pattern (ALMP) option that allows you to select either an AIS or LOS DS1 output payload for the following alarms:

- LOSW on any loop
- LOS DS1

Retiring System Alarms

To retire a system alarm, press the SEL button to execute an Alarm Cut Off (ACO). An ACO turns the alarm off and replaces the ALRM message with an ACO message. The second part of the ALRM message, which defines the cause of the alarm, remains. Both parts of the message remain until the alarm condition clears or another higher priority alarm occurs.

Remote LOS and AIS Response

Figure 24 shows the different ways the H2TU-R can respond to the network, depending on the configuration of the TLOS, NLBP, FT1, ALMP, and NAIS configuration options described in Table 5 on page 19 and Table 6 on page 20.

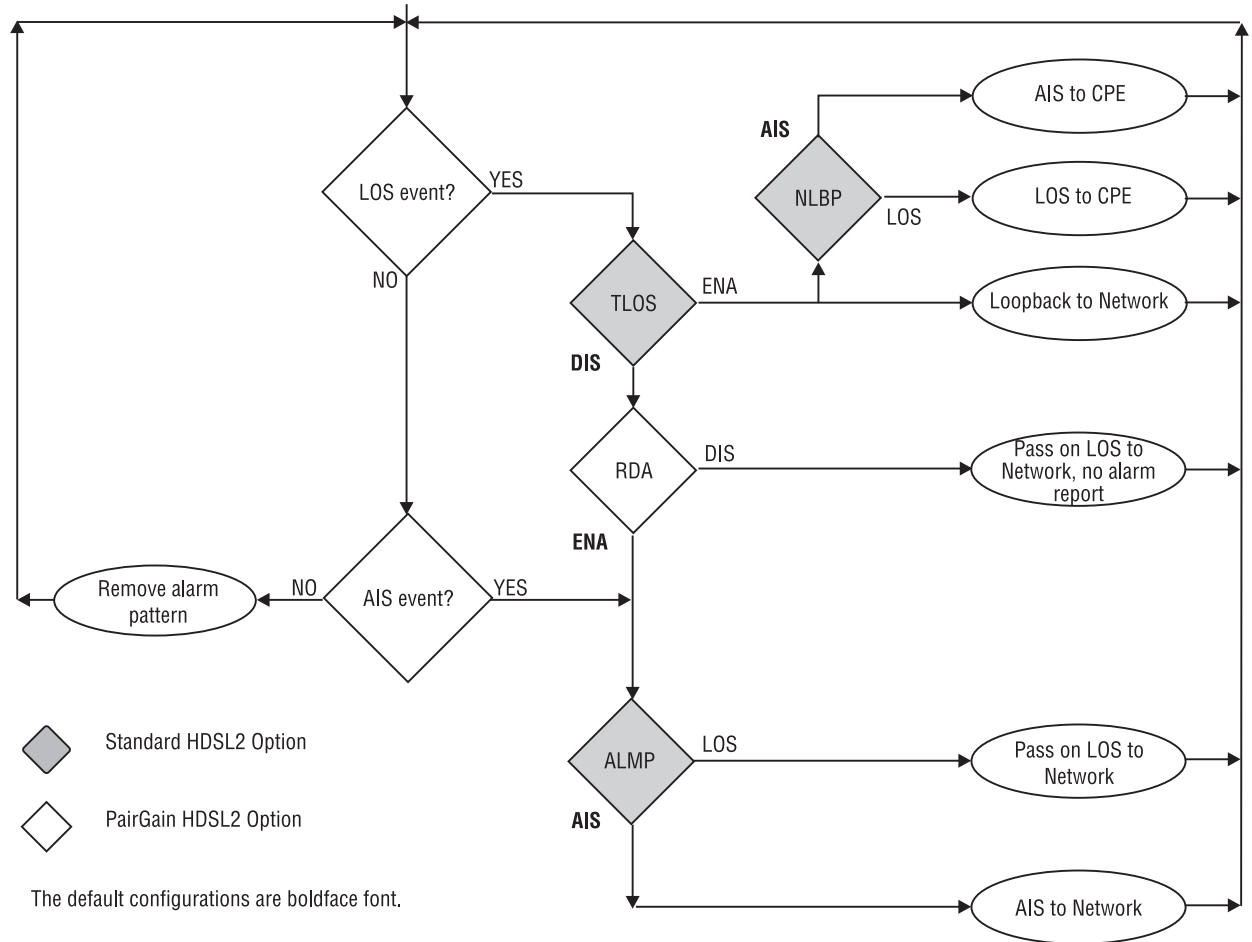


Figure 24. H2TU-R LOS and AIS Response Priorities

OCT55 TEST PATTERN WITH AMI LINE CODE

The OCT 55 test pattern can be used in unframed mode to stress the system and verify data integrity. In an SF or ESF framing mode, excessive zero anomalies may occur, which causes the H2TU-C to report ES, SES, and UAS errors according to ANSI T1.231-1997.

LOOPBACK OPERATION

HiGain Solitaire has a family of loopback options for analyzing circuit functionality. The loopback signal is transmitted and returned to the sending device for comparison. This allows you to verify the integrity of the HDSL2 channels to the H2TU-C, the H2TU-C DSX-1 interface, and the DS1 channels to the customer. Loopback options include:

- Generic Loopback (GNLB) options, including the SmartJack (SMJK) option (see [Table 15 on page 41](#))
- Special Loopback (SPLB) options (see [“Special Loopback Commands” on page 42](#) and the following command tables:
 - Addressable Repeater Loopback commands: A1LB, A2LB, A5LB (see [Table 16 on page 46](#))
 - Addressable Repeater Loopback commands: A3LB, A4LB ([Table 17 on page 49](#))

Loopback commands can be initiated by:

- Selecting the loopback type using the MODE and SEL buttons on the H2TU-C front panel (or the Manual Loopback button on the H2TU-R)
- Selecting the loopback type from the Monitor menu when connected to the craft port of the H2TU-C or H2TU-R
- Entering the loopback code into the test equipment connected to the H2TU-C or H2TU-R



HiGain Solitaire only supports one active loopback, however, SmartJack loopback can be present along with one other network loopback.

Generic Loopback Commands

The HiGain Solitaire Generic Loopback (GNLB) commands allow you to use inband codes to loop up either NLOC (4-in-7) or NREM (3-in-7) towards the network. In addition, these inband codes loop up CREM (6-in-7) or CLOC (5-in-7) towards the customer. Either loopup condition can be terminated (looped down) with the 3-in-5, SMJK loopdown code. All inband codes must be present for at least 5 seconds before the HiGain Solitaire system responds. HiGain Solitaire also supports NRGx regenerator loopbacks to the network and CRGx regenerator loopbacks towards the customer. TLOS is a logic loopback caused by loss of the DS1 input from the CI.

[Figure 25](#) summarizes the available loopbacks in the system, and [Table 15 on page 41](#) summarizes the HiGain Solitaire generic loopback commands. See [“GNLB Test Procedures” on page 44](#) for the test procedures that apply when using the GNLB mode.

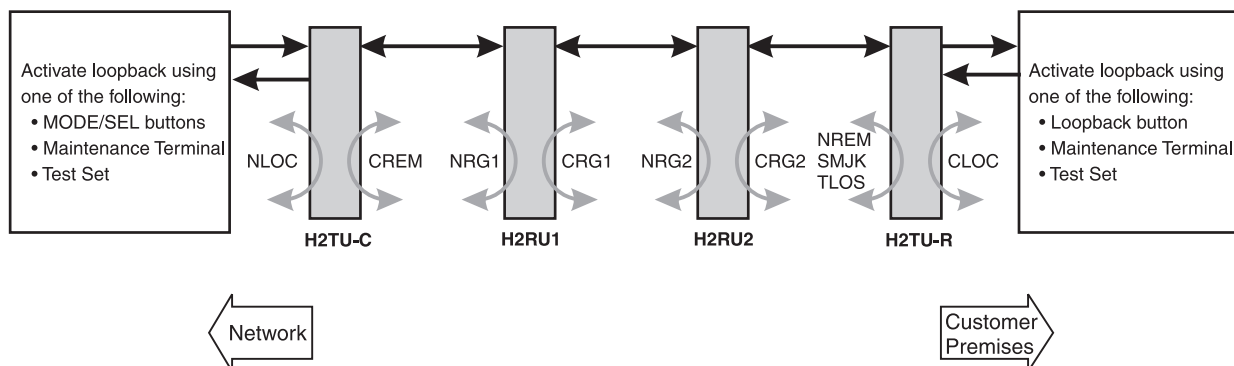


Figure 25. Loopback Summary

Table 15. Summary of HiGain Solitaire Loopback Codes and Activation Methods

Loopback	Code	Description	Method of Activation		
			Test Set	Craft Port	MODE/SEL
NLOC	1111000 4-in-7	DSX-1 signal is looped back to the network at the H2TU-C.	X	X	X
NRG1	110000 2-in-6	DSX-1 signal is looped back to the network at the regenerator 1.	X	X	X
NRG2	111000 3-in-6	DSX-1 signal is looped back to the network at the regenerator 2.	X	X	X
NREM	1110000 3-in-7	DSX-1 signal is looped back to the network at the H2TU-R.	X	X	X
CLOC	1111100 5-in-7	Signal from the customer is looped back to the customer at the H2TU-R.	X	X	X
CRG1	111100 4-in-6	Signal from the customer is looped back to the customer at regenerator 1.	X	X	X
CRG2	111110 5-in-6	Signal from the customer is looped back to the customer at regenerator 2.	X	X	X
CREM	1111110 6-in-7	Signal from the customer is looped back to the customer at the H2TU-C.	X	X	X
SMJK LpUp (PL)	11000 2-in-5	SmartJack Loopup or NID payload (PL) code. Invokes H2TU-R loopback towards network.	X		
SMJK LpUp (ESF-DL)	1111-1111- 0100-1000	SmartJack Loopup or NID (ESF-DL) code. Invokes H2TU-R loopback towards network.	X		
SMJK LpDn (PL)	11100 3-in-5	SmartJack Loopdown or NID payload (PL) code. Removes SMJK, NLOC, NREM, CLOC, CREM, CRGx, and NRGx.	X		
SMJK LpDn (ESF-DL)	1111-1111- 0010-0100	SmartJack Loopdown or NID (ESF-DL) code. Removes SMJK, NLOC, NREM, CLOC, CREM, CRGx, and NRGx.	X		



HiGain Solitaire systems feature the SmartJack option, which can emulate a Network Interface Device (NID) for the purpose of loopback testing of the HiGain Solitaire circuit. SMJK and NREM loopbacks perform the same functions but their initiation differs. SMJK indicates that the loopback was initiated by the 2-in-5 inband command. NREM, on the other hand, is initiated by the 3-in-7 inband command or by a command issued from the maintenance terminal or the MODE and SEL buttons.

Use the inband commands to enable or disable the SMJK loopback options. The H2TU-C-319 system setting is normally enabled to recognize all inband SmartJack loopback commands.

Special Loopback Commands

In addition to the GNLB loopback command mode, a HiGain Solitaire system can be configured for one of three special loopback command modes. These are selected from the maintenance terminal System Settings screen (see [Table 5 on page 19](#)) or by using the MODE and SEL buttons (see [Figure 26 on page 45](#)). Once a loopback mode is activated, other loopback commands can be sent by a test set connected to the craft port of the H2TU-C or H2TU-R (see [Table 16 on page 46](#) and [Table 17 on page 49](#) for list of SPLB commands).

A1LB through A5LB are five special, addressable, repeater loopback modes which are supported by the H2TU-C. These loopback modes provide the HiGain Solitaire system with sophisticated maintenance and troubleshooting tools. A1LB, A2LB, and A5LB are patterned after the Teltrend addressable T1 repeater loopbacks. A3LB and A4LB are patterned after the Wescom addressable T1 repeater loopbacks. All five SPLBs have been enhanced to handle the specific requirements of the following HiGain Solitaire customers:

- A1LB (Teltrend) = Southwestern Bell
- A2LB (Teltrend) = Southwestern Bell
- A3LB (Wescom) = New England Telephone, Bell Atlantic
- A4LB (Wescom Mod 1) = New York Telephone
- A5LB (Teltrend Mod 1) = Southern New England Telephone (SNET), Southwestern Bell, Pacific Bell

The A1LB loopback selection complies with that proposed for HDSL2 systems in the T1E1.4/92 recommendation with the following additions:

- Query loopback
- IOR (Intelligent Office Repeater) power-down
- Four loopback time-out choices
- Initiation from either end
- Repeating bit error signatures
- Alternate query loopback

These additions make A1LB identical to A2LB. A1LB is given a separate identity to allow future T1/E1 enhancements to be added without affecting A2LB.

A5LB differs from A2LB in that A5LB does not block the arming code from exiting the H2TU-C-319 into the network. A1LB and A2LB can be configured to do one of the following:

- Block the arming code (after 2 seconds) from exiting the H2TU-C into the network, and replace it with the AIS code.
- Unblock the AIS code by executing the Far-End Activate code. (Since A5LB never blocks the arming code from exiting the H2TU-C, the Far-End Activate code is not available in A5LB.)

A3LB differs from A4LB in that A3LB supports the additional (1-in-6) SMJK loopback command.

Manual Loopback Session

A manual loopback session allows you to select any one of the HiGain Solitaire loopbacks listed in [Table 15 on page 41](#) with the exception of SmartJack loopbacks, which can only be issued by inband commands.

Setting the Loopback Time-out Option

Before initiating a loopback session, verify that the Loopback Time-out parameter is set to the desired setting.

- 1 Use the MODE and SEL buttons as described in “[Setting Options through MODE and SEL](#)” on page 11.
(The Loopback Time-out parameter is also user-selectable from the System Settings screen when using a maintenance terminal.)
- 2 Select the desired setting:
 - NONE (time-out disabled)
 - 20 minutes
 - 60 minutes
 - 120 minutes (default setting)

Activating Manual Loopback Mode



With the exception of SmartJack, any of the HiGain Solitaire loopbacks can be executed using the MODE and SEL buttons.

When executing a manual loopback session using the MODE and SEL buttons:

- **The next loopback option can be displayed by pressing the MODE button, however, the previously activated loopback remains active until the SEL button is pressed, which activates the new loopback.**
- **If neither button is pressed for a period of 30 seconds and no loopback is in effect, the manual loopback session terminates, and the display returns to normal mode.**
- **If any loopback is in effect, the 30-second time-out is inhibited. The active loopback and the manual loopback session continue until the loopback times out in accordance with the LBTO setting.**
- **Only the SMJK loopback can exist with other network loopbacks at any given time.**
- **If there is an active loopback, pressing the MODE and SEL buttons for 3 or more seconds terminates any active loopback, ends the manual loopback session, and returns the display to normal mode.**

To initiate a manual loopback session:

- 1 Press both the MODE and SEL buttons on the front panel for at least 3 seconds. The following message appears on the front-panel display:
MAN LPBK NLO?
- 2 Press SEL to activate NLOC. The display changes to MAN LPBK NLOC.
- 3 Press MODE to advance to the next available loopback (CRE?, NRE?, CLO?, NR1?, CR1?, NR2?, CR2?).
- 4 Press SEL to activate the selected loopback. The previous loopback is terminated.

Once a loopback is selected and activated, the loopback stays active until it times out (based on the LBTO setting). When a loopback times out, the display then returns to the normal display mode.

You can terminate loopbacks manually and exit the MAN LPBK mode by simultaneously pressing the MODE and SEL buttons for 3 or more seconds. If no loopback is active, the MAN LPBK mode automatically terminates after 30 seconds.

All loopbacks can be initiated by inband commands in the T1 payload or by a command from the HiGain Solitaire system (front-panel buttons or maintenance screen selections). Therefore, whenever a loopback is active, the method by which it was activated is indicated in the Loopback and Status screens by the annotation HG (HiGain Solitaire) or PL (Payload) adjacent to the identified loopback. For example, NREM-HG indicates that the loopback was initiated by the HiGain Solitaire system.



SMJK loopback commands are only activated by inband commands.

LOOPBACK TEST PROCEDURES

The following sections provide step-by-step test procedures for verifying the integrity of the HDSL2 channels at every module location as well as the DS1 channels to the customer and the local DSX-1 interface.

General Troubleshooting Tips

If trouble is encountered on the DSX-1 interface of the H2TU-C, verify that the:

- H2TU-C is making a positive connection with its shelf connector.
- H2TU-C internal equalizer is set to the correct distance range per [Table 5 on page 19](#). All equalizers should be set to the distance from the DSX-1 to the shelf.


The transmit and receive DS1 ports have splitting access jacks and miniature, 210-series, bridging jacks as shown in [Figure 2 on page 4](#). Connecting one cable between the two bridging jacks and another between the two LINE jacks splits the IN and OUT and creates metallic loopbacks towards both the DSX-1 and the H2TU-C-319. If separate plugs are inserted into both LINE jacks with the other end disconnected, the BRG jacks can be used to send and receive test patterns towards the DSX-1.

GNLB Test Procedures

[Figure 26 on page 45](#) is a graphical representation of the various loopback configurations with the associated GNLB commands shown. Also, refer to [Table 15 on page 41](#) for a description of these commands.

To perform the GNLB loopback test procedure:

- 1 Have the CO tester send the NREM (3-in-7) inband loopup code for 5 seconds. You should observe the NREM message on the front-panel display. (The Status LED on the front panel should be green, and the loopback mode should also be identified on the Span Status screen.)
- 2 Have the CO tester transmit a DS1 test signal towards the H2TU-C and verify that the returned (looped) signal to the test set is error-free.
- 3 If step 2 fails, have the CO tester transmit the (3-in-5) inband loopdown code.
- 4 Have the CO tester send the NLOC (4-in-7) inband loopup for 5 seconds. You should observe the NLOC message on the front-panel display. (The Status LED on the front panel should be yellow, and the loopback mode should also be identified on the Span Status screen.)
- 5 Repeat Step 2. If the test passes, the problem is in the downstream direction. If it fails, the problem is in the upstream direction.

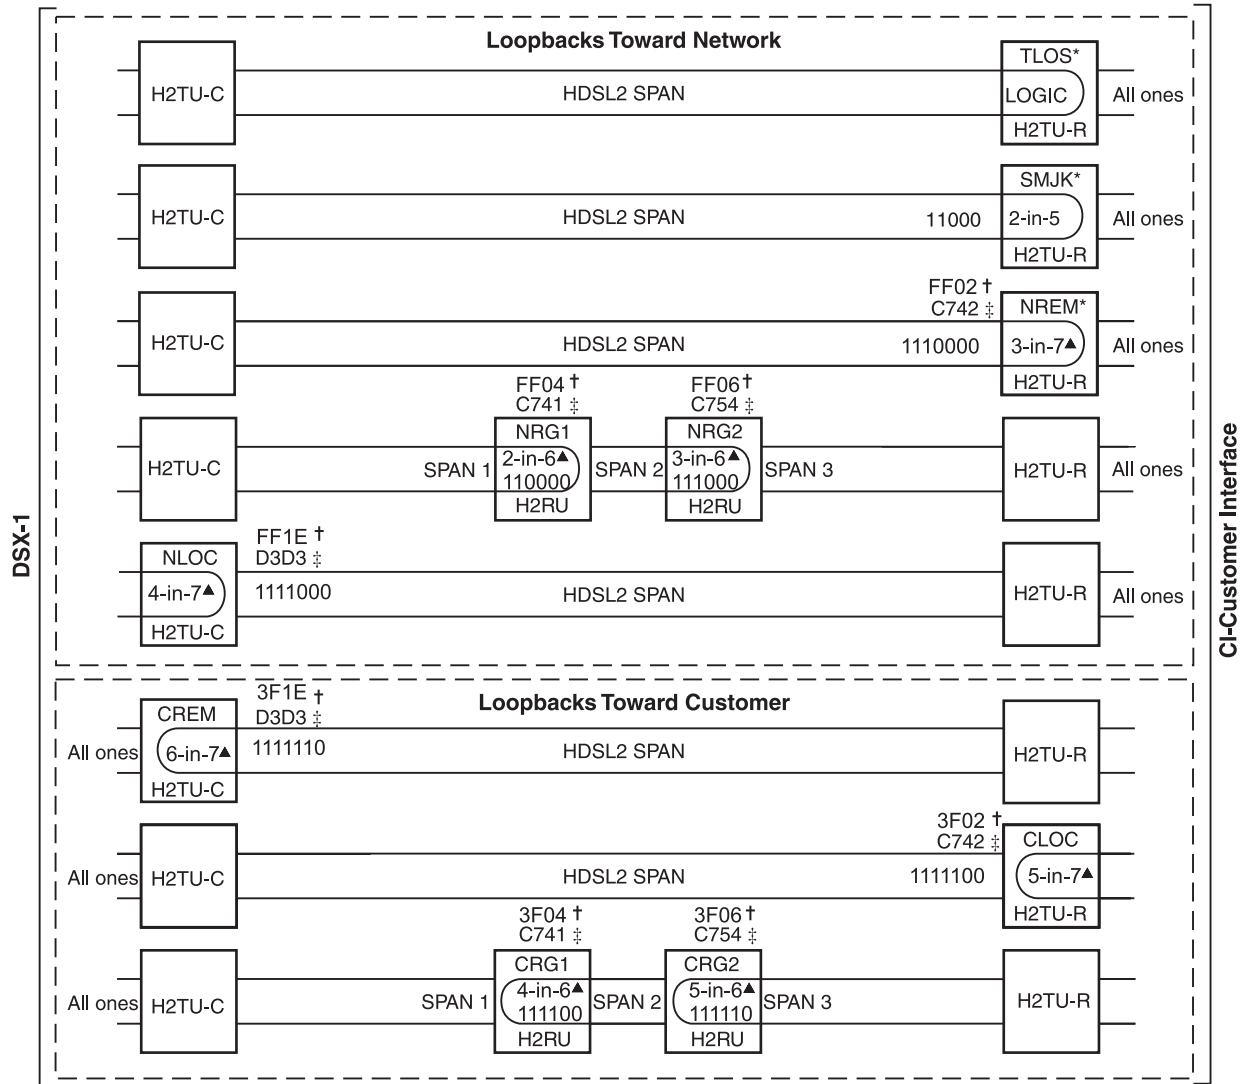

* Set the NLBP option to AIS to send AIS (indicated by an all ones pattern) for any network loopback.
 † A3LB and A4LB loopback codes.
 ‡ A1LB, A2LB, and A5LB loopback codes.
 ▲ GNLB loopback codes.

Figure 26. Loopback Modes

A1LB, A2LB, and A5LB Test Procedures

Using the codes listed in [Table 16](#), a network tester can activate NLOC, NRG or NREM loopbacks (or SMJK, if enabled). A tester at the customer premises can activate CLOC, CRG or CREM loopbacks. All loopbacks shown in [Table 16](#) can also be initiated from the H2TU-C front-panel MODE and SEL buttons (see “[Setting Options through MODE and SEL](#)” on page 11). Information specific to HiGain Solitaire regenerators is shown in bold type.

Table 16. Addressable Repeater Loopback Commands (A2LB)

Name	Description	Binary Code ^(a) (Hexadecimal Equivalent)
ARMING or NI LPBK (inband)	Arming code	11000-11000 ...
ARMING or NI LPBK (ESF Data Link)	Arming code	1111-1111-0100-1000 (FF48)
IR LPDN or DISARM (inband)	Disarming code	11100-11100 ...
IR LPDN or DISARM (ESF Data Link)	Disarming code	1111-1111-0010-0100 (FF24)
IOR LPBK (NLOC and CREM) 230-232 bit errors 229-231 bit errors ^(b)	H2TU-C loopup	1101-0011-1101-0011 (D3D3)
ILR-1 LPBK (NRG1 and CRG1 10 bit errors)^(b)	Regenerator-1 loopup	1100-0111-0100-0001 (C741)
ILR-20 LPBK (NRG2 and CRG2 200 bit errors)	Regenerator-2 loopup	1100-0111-0101-0100 (C754)
ILR-2 LPBK (NREM and CLOC 20 bit errors)	H2TU-R loopup	1100-0111-0100-0010 (C742)
IR LPDN	Loopdown (H2TU-C, H2RU, or H2TU-R)	1001-0011-1001-0011 (9393)
IR QUERY LPBK	Query loopback	1101-0101-1101-0101 (D5D5)
IR ALTERNATE QUERY LPBK	Alternate query loopback	1101-0101-1110-1010 (D5EA)
TIME-OUT OVERRIDE	Loopback time-out override	1101-0101-1101-0110 (D5D6)
FAR END NI ACTIVATE ^(c)	Unblock AIS	1100-0101-0101-0100 (C554)
IOR POWER DOWN (H2TU-C) ^(d)	Removes HDSL2 line power	0110-0111-0110-0111 (6767)

- (a) The left-most bit arrives first in all sequences. The detection algorithm functions reliably with a random 10⁻³ BER on the facility. The entire arming and loopback sequence can also be initiated at the remote H2TU-R location.
- (b) The H2TU-R identifies CREM (and the H2TU-C identifies NLOC) with 231 bit errors, including the frame bits. When framed data is being sent in the Auto framing mode, the number of the 231 bit errors detected by the test set varies from 229 to 231, depending on whether or not the test set counts frame errors as bit errors, and on the number of frame bits contained in the block of 231 error bits. The H2TU-R and H2TU-C generate this bit pattern in a series of discontinuous bursts containing 20-bit errors each, including frame bits. Those test sets that do not count frame error bits as data bit errors will indicate fewer bits than the H2TU-R and H2TU-C transmit for a CI and NI loopback.
- (c) Sending the Far-End NI Activate code is not required in A5LB because it is always activated.
- (d) The IOR Power Down code must remain present for the duration of the power down mode. When this code is removed, the HiGain Solitaire system returns to its normal unlooped and unarmed state.

To perform the A1LB, A2LB, and A5LB test procedures:

- 1 Send the inband Arming and NI LPBK code 11000 to the H2TU-C for at least 5 seconds.
- 2 Monitor the output of the H2TU-C for the return of the pattern. Return of the pattern indicates one of the following:
 - The H2TU-R has looped up (if the SMJK Loopback option is enabled).
 - An external NID has looped up (if the SMJK Loopback option is disabled), and the H2TU-C and H2TU-R have been armed.
- 3 Verify, if possible, that the H2TU-R Loopback LED is either flashing yellow at 4-second intervals (indicating that the system is armed), or is a steady yellow (indicating that it is both armed and in SMJK loopback). The H2TU-C Status LED also flashes yellow when the system is armed.



If the Arming code is not returned after 5 seconds, the system may be armed but there is no active loopback.

- 4 Once armed, the H2TU-C can be looped back by sending Intelligent Office Repeater (IOR) LPBK activation code 1101-0011-1101-0011 (D3D3) for at least 5 seconds. You should observe the following activation response pattern in the order presented:
 - a 2 seconds of AIS (all ones pattern)
 - b 2 seconds of returning data pattern
 - c 231 logic errors (including the frame bit) occurring in the returned pattern comprising:
 - 10 errors, if ILR-1 (Regenerator 1) was sent
 - 200 errors, if ILR-20 (Regenerator 2) was sent
 - 20 errors, if ILR-2 (H2TU-R) was sent
 - d Normal looped data

This error pattern repeats every 20 seconds as long as the IOR loopback pattern is being sent. This also applies to ILR, Time-out Override, and Query commands.

The H2TU-C is now in logic loopback if the IOR NLOC loopback command was sent. The Time-out Override command or a Loopdown command can override the selection made for the loopback time-out (see [“Setting the Loopback Time-out Option” on page 43](#)). If the Time-out Override code 1101-0101-1101-0110 (D5D6) is received after activating a loopback, then the automatic timed expiration of the loopback is inhibited. If this Time-out Override is sent, then the only way to loop the H2TU-C down is to do one of the following:

- Issue the IR (Intelligent Repeater) LPDN (loopdown) code 1001-0011-1001-0011 (9393).
- Issue the NI LPDN and Disarm inband code 11100 or the ESF-DL code (FF24).



The Time-out Override function is only valid for the current active loopback. The automatic time-out timer is restored during subsequent loopback sessions.

- 5 Once the test is complete, do one of the following:
 - If the system is to loopdown but remain Armed, send the IR (Intelligent Repeater) LPDN code (universal loopdown).

- If all the equipment is to be looped down, disarmed and returned to normal operation, send the disarm inband code 11100 or the ESF-DL code (FF24).



The Armed mode has an automatic time-out of 120 minutes but this timer is reset to 120 for any of the following events:

- **Loopback terminates (manually or time-out)**
- **Query**
- **Alternate query**
- **Far-End activate**
- **Another ARM command**

This timer is inhibited while any of the valid command codes are being sent. Once the codes are removed, the timer restarts at 120.

A3LB and A4LB Test Procedures

The H2TU-C-319 can be looped back by sending the Addressable Office Repeater (AOR) LPBK activation code 1111-1111-0001-1110 (FF1E) for at least 5 seconds. This causes the H2TU-C to enter the NLOC state. The Loopback Time-out setting (see “[Setting the Loopback Time-out Option](#)” on page 43) determines the duration of this loopback unless it is overridden by the reception of a second identical 16-bit loopup command before the timer expires. When this time-out override state exists, the only way to loop the H2TU-C down is to issue one of the three loopdown commands listed in [Table 17](#). The automatic time-out mode is restored during subsequent loopback sessions.

[Table 17](#) summarizes the codes required to execute Addressable 3 and 4 (A3LB and A4LB) repeater loopback commands. All code sequences must be present for at least 5 seconds. Information specific to HiGain Solitaire regenerators is shown in bold.

Table 17. Addressable Repeater Loopback Commands (A3LB and A4LB)

Name	Description	Binary Code ^(a) (Hexadecimal Equivalent)
NLOC	H2TU-C loopup from NI	1111-1111-0001-1110 (FF1E)
CREM	H2TU-C loopup from CI	0011-1111-0001-1110 (3F1E)
NRG1	H2RU regenerator 1 loopup from NI	1111-1111-0000-0100 (FF04)
CRG1	H2RU regenerator 1 loopup from CI	0011-1111-0000-0100 (3F04)
NRG2	H2RU regenerator 2 loopup from NI	1111-1111-0000-0110 (FF06)
CRG2	H2RU regenerator 2 loopup from CI	0011-1111-0000-0110 (3F06)
NREM	H2TU-R loopup from NI	1111-1111-0000-0010 (FF02)
CLOC	H2TU-R loopup from CI	0011-1111-0000-0010 (3F02)
SMJK	H2TU-R loopup from NI	11000-11000-11000 ...
SMJK	H2TU-R loopup from NI ^(b)	100000 100000 100000 ...
SMJK	H2TU-R loopup from NI (ESF-DL)	1111-1111-0100-1000 (FF48)
Loopdown	H2TU-C and H2TU-R loopdown from NI OR CI	11100-11100-11100 ...
Loopdown	H2TU-C and H2TU-R loopdown from NI OR CI	100-100-100 ...
Loopdown	H2TU-C and H2TU-R loopdown from NI OR CI (ESF-DL)	1111-1111-0010-0100 (FF24)

(a) The left-most bit arrives first in all sequences. The detection algorithm functions reliably with a random 10^{-3} Bit Error Ratio (BER) on the facility. The entire arming and loopback sequence can also be initiated at the remote H2TU-R location.

(b) Not supported by A4LB.

APPENDIX A - SPECIFICATIONS

Power

Line Voltage	0, -185 Vdc
CO Supply	-48 Vdc nominal (-42.5 Vdc to -56.5 Vdc) See “Power Consumption” and “Maximum Power Dissipation” and “Maximum Current Drain” on page 51.
Electrical Protection	Secondary surge and power cross-protection on HDSL2 ports. Requires external primary protection.
Fusing	Internal; connected to “FUSE ALARM” output on pin 10

Environmental

Operating Temperature	-40 °F to +149 °F (-40 °C to +65 °C)
Operating Humidity	5% to 95% (non-condensing)

Physical

Height	4.750 in. (12.10 cm)
Width	0.625 in. (1.59 cm)
Depth	10 in. (25.4 cm)
Weight	0.5 lb. (.23 kg)
Mounting	3192 high-density mechanics shelf

HDSL2

Line Code	1.552 Mbps OPTIS
Transmission	Full duplex
Media	One non-loaded, copper, two-wire cable pair
Output	+16.8 dBm \pm 0.5 dB at 135 Ω (0-450 kHz) at CO side; +16.5 dBm \pm 0.5 dB at 135 Ω (0-350 kHz) at remote side
Line Impedance	135 Ω
Maximum Provisioning Loss	35 dB at 196 kHz
Start-up Time	30 sec. (typical), 1 min. (maximum) per span

DSX-1

DSX-1 Line Impedance	100 Ω
DSX-1 Line Rate	1.544 Mbps \pm 200 bps
DSX-1 Line Format	Alternate Mark Inversion (AMI) or Bipolar with 8-Zero Substitution (B8ZS)
DSX-1 Frame Format	Extended SuperFrame (ESF), SuperFrame (SF), or Unframed (UNFR)
DSX-1 Pulse Output	6 V ^{pk-pk} pre-equalized for 0 to 655 feet of ABAM cable
DSX-1 Input Level	+1.5 to -7.5 dB DSX

System

One-way DS1 Delay	<400 μ s per span without regenerators
Wander (Looped)	Meets MTIE T1.101 requirements
Wideband Jitter (Looped)	0.2 UI maximum
Narrowband Jitter (Looped)	0.1 UI maximum

POWER CONSUMPTION

The maximum power consumption and heat dissipation depends upon the type of remote and regenerator units in the system and the CPE power setting.

The three most important power parameters of an H2TU-C are its maximum power consumption, its maximum power dissipation and its maximum current drain.

Table 18 describes line-powered circuits on 9 kft, 26 AWG loops without a regenerator.

Table 18. H2TU-C Power Parameters—No Regenerator

H2TU-R Model No.	H2TU-R CPE Power	-42.5 Vdc Power Consumption (Watts)		Heat Dissipation (Watts)		-42.5 Vdc Current (mA)	
		Typical	Maximum	Typical	Maximum	Typical	Maximum
H2TU-R-402		11.5	12.5	6.0	7.0	270	294

MAXIMUM POWER DISSIPATION

The maximum power dissipation measures the power converted into heat which builds up within the unit. It contributes to the total heat generated in the space around the unit. It is used to determine the maximum number of fully loaded shelves per bay that does not exceed the maximum allowable power dissipation density in watts per square foot to comply with GR-63.

In COs, the maximum power dissipation for open-faced, natural convection-cooled mountings is limited to 134.7 watts per square foot per GR-63-CORE. The footprint of a standard 28-slot, 23-inch HMS-317 shelf is 7.024 square feet. Therefore, the maximum bay dissipation is limited to 946 watts. Use this limit and the parameters in Table 18 to determine the maximum number of H2TU-C circuits that can occupy one CO bay.



This is a worst case situation since it assumes the entire CO is subjected to the maximum power density. More favorable conditions would permit increasing the number of shelves per bay without jeopardizing the CO thermal integrity.

The thermal loading limitations imposed when using the H2TU-C in a Controlled Environmental Vault (CEV) or other enclosures are determined by applying its power parameters to the manufacturer's requirements for each specific housing.


The -42.5 Vdc power consumption is the maximum total power that the H2TU-C consumes or draws from the shelf power source. This parameter is needed when the H2TU-C is in a location remote to the CO it is serving. It determines the battery capacity required to maintain an 8-hour, standby battery reserve for emergency situations. Battery capacity, therefore, limits the maximum number of line units which can be installed in a remote enclosure. Use the data in Table 18 to perform this analysis.

MAXIMUM CURRENT DRAIN

The maximum current drain is the maximum current drawn from the shelf power supply when it is at its minimum voltage (-42.5 Vdc). This determines the shelf fusing requirements. Use the -42.5 Vdc current data in Table 18 to determine the shelf fusing requirements for your particular H2TU-C applications.

H2TU-C-319 CARD CONNECTOR

Figure 27 shows the card-edge connectors on the H2TU-C-319. Active pins are highlighted in black.

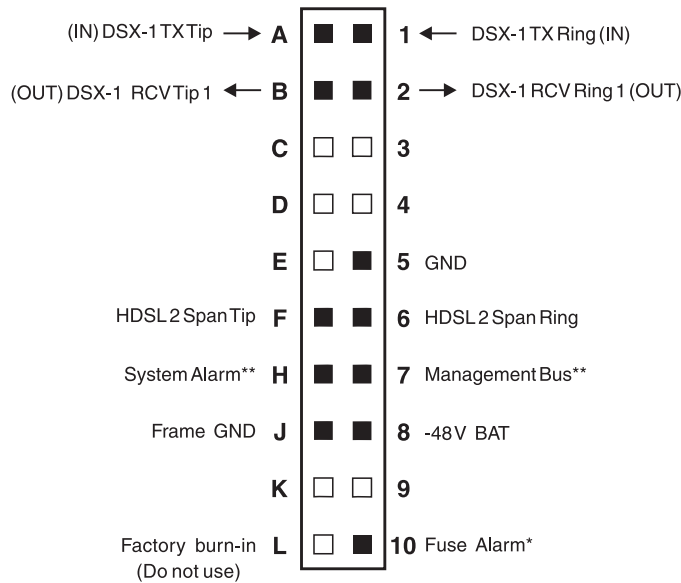

* Fuse Alarm
 Normal = Floating (0 to -60 Vdc Maximum)
 Activated = -48 Vdc, 10mA Maximum

** System Alarm and
 Management Bus (reserved)

Figure 27. H2TU-C-319 Card-edge Connector

Network Management Control Bus

The H2TU-C provides a Network Management Control Bus on pin 7 of the card-edge connector. This allows the various PairGain Management System protocols to manage the H2TU-C through the HMU-319 HiGain Management Unit. Whenever the H2TU-C is under management, the MNGD message displays periodically on the front-panel display.



Some H2TU-C-319 features are affected when it is under management. Consult the management unit practice for further information.

Fuse Alarm

Pin 10 on the card-edge connector is a Fuse Alarm that is driven to -48 Vdc whenever its onboard fuse opens. It emulates the function of the Fuse Alarm output from pin 10 on normal, high-density (HD) repeaters. Pin 10 is connected to pin 5 of the 1184 Alarm Card (slot 1 in the HD shelf) and causes the 1184 Fuse ALM LED to light when the pin 10 signal is activated. Its normally floating output must never be driven above ground or below -80 Vdc. It can sink a current of 10 mA. The H2TU-C does not support the BPV function (Pin E) of normal HD repeaters.

System Alarm Output Pin

Pin H on the card-edge connector (see [Figure 27 on page 52](#)) is the H2TU-C-319 System Alarm output pin. The following notes apply to Pin H:

- Pin H replaces the Local Loss of Signal (LLOS) on normal high-density (3192) repeaters.
- The normally floating output of Pin H can connect to pin 1 of the 1184 or 3192-9F Alarm Card in position 29 of the High Density (HD) shelf.
- The H2TU-C forces pin H to +5 Vdc (maximum of 10 mA) for a system alarm condition. Pin H then remains at +5 Vdc for the duration of the alarm condition.
- If the Wescom 1184 Alarm Card is installed in the shelf, its LOS LED lights for every MNRALM.
- The H2TU-C Status LED flashes red for the duration of a system alarm condition.
- Setting the ALM option to DIS only prevents the system alarm bus on Pin H from being activated for a system alarm event. The Status LED still flashes red and the ALRM message still displays.



Pin H must never be taken above +5 Vdc or below -60 Vdc.

CRAFT PORT

[Figure 28](#) shows the pinout for the craft port connector and its connection to a DB-9 or DB-25 connector on a maintenance terminal.

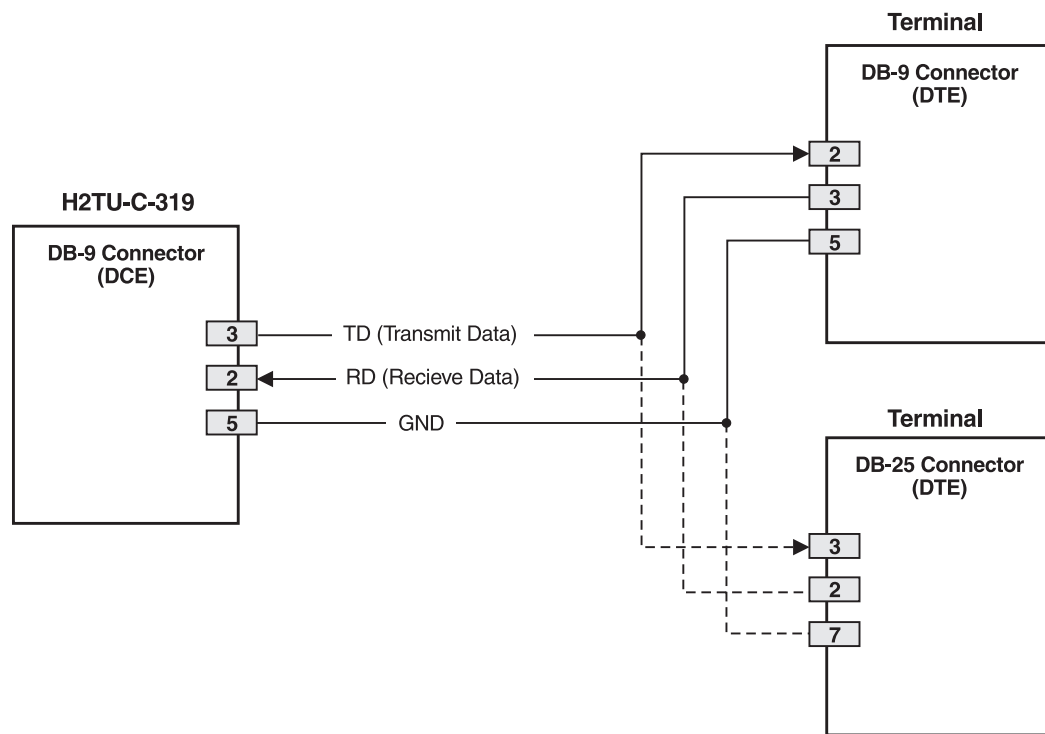


Figure 28. RS-232 Craft Port Pinouts

APPENDIX B - FUNCTIONAL OPERATION

PairGain HDSL2 technology provides full-duplex services at standard T1 rates over copper wires between an H2TU-C and an H2TU-R, which comprise one HiGain Solitaire system. HiGain Solitaire systems use PairGain Overlapped Pulse Amplitude Modulation (PAM) Transmission with Interlocking Spectra (OPTIS) transceiver systems to establish full-duplex, 1.552 kbps data channels between the H2TU-C-319 and a remotely located H2TU-R.

Figure 29 shows a block diagram of the H2TU-C-319. The H2TU-C-319 receives a 1.544 Mbps DSX-1 data stream from the DSX-1 digital cross-connect interface. The H2TU-C contains a DS1 frame synchronizer controlled by an 8-bit microprocessor that determines the type of framing on the DS1 stream and synchronizes with it. The H2TU-C recognizes Superframe (SF), including D4, or Extended Superframe (ESF) framing.

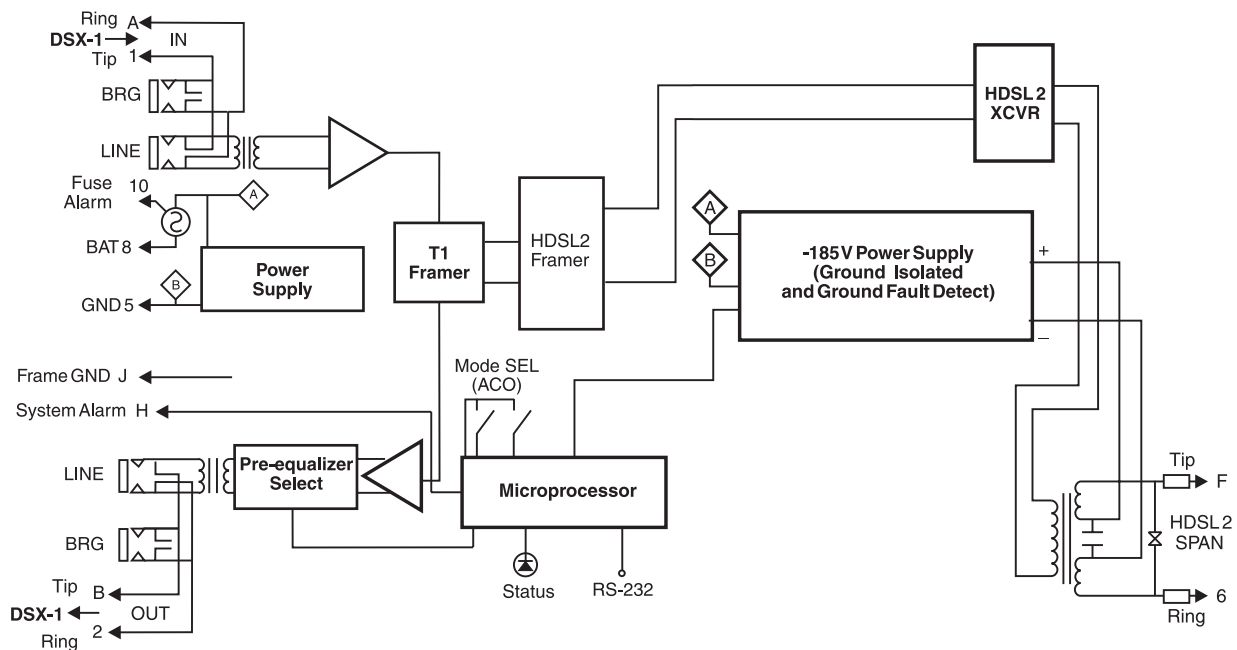


Figure 29. H2TU-C-319 Block Diagram

TIMING

The low loop wander (0.3 UI max) of an H2TU-C, when used with compatible regenerators and remote units, allows the circuit to be used in all critical timing applications, including those that are used to transport Stratum 1 timing.

GROUND FAULT DETECT

The H2TU-C has a Ground Fault Detect (GFD) circuit which detects a ground or a resistive path to ground on any wire of the HDSL2 loop. This makes the product compliant with the Class A2 requirements of GR-1089.

APPENDIX C - COMPATIBILITY

The HiGain Solitaire system uses HDSL2 transmission technology as recommended by ANSI committee in compliance with the August, 1999 T1-E1.4/99-006R5 HDSL2 standards.

The H2TU-C List 1 and List 1C are designed to mount in the following shelves with 3192 mechanics:

- PairGain HMS-317 (28-slot, 23-inch shelf)
- PairGain HMS-318 (22-slot, 19-inch shelf)
- PairGain HMS-357 (28-slot, 23-inch shelf)
- PairGain HMS-358 (28-slot, 23-inch shelf)
- PairGain HHS-319 (3-slot, 19-inch horizontal shelf)
- PairGain HMS-308 (8-slot remote enclosure)
- Charles Ind. #3192 (28-slot connectorized)
- Charles Ind. #3192-WR (28-slot wire wrap)
- Charles Ind. #343-00 (12- to 14-slot wire wrap)
- Charles Ind. #319-02 (22-slot connectorized)
- Charles Ind. #319-04 (22-slot wire wrap)
- Charles Ind. #340-00 (9-slot to 11-slot wire wrap)
- Larus #1185 (28-slot connectorized)



Charles Ind. 343-00 and 340-00 shelves do not support the H2TU-C-319 System Alarm output on pin H. Also, if slots 1 and 2 of these shelves were wired for the 3408 Fault Locate unit, they must be rewired to accept the H2TU-C-319.

APPENDIX D - PRODUCT SUPPORT

PairGain Customer Service Group provides expert pre-sales and post-sales support and training for all its products.

TECHNICAL SUPPORT

Technical assistance is available 24 hours a day, 7 days a week by contacting PairGain Customer Service Group at:

Telephone:	800.638.0031 or 714.730.3222 The 800 telephone support line is toll-free in the U.S. and Canada.
Fax:	714.832.9924
Email:	support@pairgain.com

During normal business hours (7:30 AM to 5:30 PM, Pacific Time, Monday through Friday, excluding holidays), technical assistance calls are normally answered directly by a Customer Service Engineer. At other times, a request for technical assistance is handled by an on-duty Customer Service Engineer through a callback process. This process normally results in a callback within 30 minutes of initiating the request.

WORLD WIDE WEB

PairGain product and company information can be found at <http://www.pairgain.com> using any Web browser. To download PairGain product manuals from the Customer Site portion of the PairGain Web page, you need to provide a customer password. If you do not have a password, contact your PairGain sales representative.

RETURNS

To return equipment to PairGain:

- 1 Locate the number of the purchase order under which the equipment was purchased. To obtain a return authorization number, you need to provide the original purchase order number to PairGain's Return Material Authorization (RMA) Department.
- 2 Call or write PairGain's RMA Department to ask for an RMA number and any additional instructions. Use the telephone number, fax number or email address listed below:
 - Telephone: 800.370.9670
 - Fax: 714.832.9923
 - Email Address: rma@pairgain.com
- 3 Include the following information, in writing, along with the equipment you are returning:
 - Company name and address.
 - Contact name and telephone number.
 - The shipping address to which PairGain should return the repaired equipment.

- The original purchase order number.
- A description of the equipment that includes the model and part number of each unit being returned, as well as the number of units that you are returning.
- The reason for the return. For example:
 - The equipment needs an ECO/ECN upgrade.
 - The equipment is defective.



If the equipment is defective, please tell us what you observed just before the equipment malfunctioned. Be as detailed in your description as possible.

- If there is another reason for returning the equipment, please let us know so we can determine how best to help you.

- 4 Pack the equipment in a shipping carton.
- 5 Write PairGain's address and the RMA Number you received from the RMA Department clearly on the outside of the carton and return to:

PairGain Technologies, Inc.
14352 Franklin Ave.
Tustin, CA 92780-7013

Attention: **RMA (Number)**



All shipments are to be returned prepaid. PairGain will not accept any collect shipments.

APPENDIX E - ABBREVIATIONS

A

ACO: Alarm CutOff
ADSL: Asymmetryic Digital Subscriber Line
AIS: Alarm Indication Signal
ALM: Alarm
ALMP: Alarm Pattern
AMI: Alternate Mark Inversion
AOR: Addressable Office Repeater
ARM: Armed
ASCII: American Standard Code for Information Interchange
AWG: American Wire Gauge

B

B8ZS: Bipolar with 8-Zero Substitution
BER: Bit Error Rate
BPVT: Bipolar Violation Transparency
BRG: Bridge

C

CEV: Controlled Environmental Vault
CI: Customer Installation
CLEI: Common Language Equipment Identifier
CLOC: Customer Local Loopback
CO: Central Office
CPE: Customer Premises Equipment
CREM: Customer Remote Loopback
CRG: Customer Regenerator
CSA: Carrier Service Area
CV: Code Violation
CV-L: Code Violation - Line

D

DBER: DS1Bit Error Rate Threshold
DDS: Digital Data Service
DLC: Digital Loop Carrier
DS1: Digital Signal, level 1
DSX-1: Digital Signal Cross-Connect, level 1

E

ECI: Equipment Catalog Item
ESF: Extended SuperFrame
ES-L: Errored Seconds - Line
ES-P: Errored Seconds - Path

F

FE: Far End

G

GFD: Ground Fault Detect
GNLB: Generic Loopback

H

H2RU: HiGain Solitaire Regenerator Unit
H2TU-C: HiGain Solitaire Line Unit
H2TU-R: HiGain Solitaire Remote Unit
HBER: HDSL2 Block Error Rate
HDSL2: High-bit-rate Digital Subscriber Line 2
HG: HiGain
HMU: HiGain Management Unit

I

IN: Transmit
IOR: Intelligent Office Repeater

L

LA: Loop Attenuation
LAIS: Local Alarm Indication Signal
LATT: Loop Attenuation
LBTO: Loopback Timeout
LLOS: Local Loss of Signal
LOSW: Loss of Sync Word
LPDN: Loopdown
LRAI: Line RAI

M

MAL: Margin Alarm
MARG: Margin
MNGD: Managed

N

NE: Near End
NI: Network Interface
NID: Network Interface Device
NLBP: Network Loopback Pattern
NLOC: Network Local Loopback
NREM: Network Remote Loopback
NRG: Network Regenerator

O

OPTIS: Overlapped Pulse Amplitude Modulation Transmission with Interlocking Spectra
OUT: Receive

P

PL: Payload
POTS: Plain Old Telephone Service
PRM: Performance Report Messaging
PWRF: Line Power Feed

R

RAI: Remote Alarm Indication
RAIS: Remote Alarm Indication Signal
RLOS: Remote Loss of Signal
RRAI: Remote RAI
RTPV: Remote Provisioning

S

S/N: Signal to noise ratio
SDSL: Symmetrical Digital Subscriber Line
SES: Severely Errored Seconds
SF: SuperFrame
SMJK: SmartJack
SPLB: Special Loopback

T

TLOS: Transmit Loss of Signal

U

UAS: Unavailable Seconds
UNFR: Unframed

CERTIFICATION AND WARRANTY

FCC CLASS A COMPLIANCE

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

LIMITED WARRANTY

PairGain Technologies, Inc. ("PairGain") warrants that, for a period of sixty (60) months from the date of shipment, the hardware portion of its products will be free of material defects and faulty workmanship, under normal use. PairGain's obligation, under this warranty, is limited to replacing or repairing, at PairGain's option, any such hardware product which is returned during the 12-month warranty period per PairGain's instructions and which product is confirmed by PairGain not to comply with the foregoing warranty.

PairGain warrants that, for a period of 90 days from the date of purchase, the software furnished with its products will operate substantially in accordance with the PairGain published specifications and documentation for such software. PairGain's entire liability for software that does not comply with the foregoing warranty and is reported to PairGain during the 90-day warranty period is, at PairGain's option, either (a) return of the price paid or (b) repair or replace of the software. PairGain also warrants that, for a period of thirty (30) days from the date of purchase, the media on which software is stored will be free from material defects under normal use. PairGain will replace defective media at no charge if it is returned to PairGain during the 30-day warranty period along with proof of the date of shipment.

The transportation charges for shipment of returned products to PairGain will be prepaid by the Buyer. PairGain will pay transportation charges for shipment of replacement products to Buyer, unless no trouble is found (NTF), in which case the Buyer will pay transportation charges.

PairGain may use reconditioned parts for such repair or replacement. This warranty *does not* apply to any product which has been repaired, worked upon, or altered by persons not authorized by PairGain or in PairGain's sole judgment has subjected to misuse, accident, fire or other casualty, or operation beyond its design range.

Repaired products have a 90-day warranty, or until the end of the original warranty period—whichever period is greater.

PAIRGAIN DISCLAIMS ALL OTHER WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WITH RESPECT TO ITS PRODUCTS AND ANY ACCOMPANYING WRITTEN MATERIALS. FURTHER, PAIRGAIN DOES NOT WARRANT THAT SOFTWARE WILL BE FREE FROM BUGS OR THAT ITS USE WILL BE UNINTERRUPTED OR REGARDING THE USE, OR THE RESULTS OF THE USE, OF THE SOFTWARE IN TERMS OF CORRECTNESS, ACCURACY, RELIABILITY OR OTHERWISE.

MODIFICATIONS

Any changes or modifications made to this device that are not expressly approved by PairGain Technologies, Inc. voids the user's warranty. All wiring external to the products should follow the provisions of the current edition of the National Electrical Code.

STANDARDS COMPLIANCE

The H2TUC-319 List 1 and List 1C have been tested and verified to comply with the applicable sections of the following standards.

- GR 63-CORE - Network Equipment-Building System (NEBS) Requirements
- GR 1089-CORE - Electromagnetic Compatibility and Electrical Safety
- Binational standard, UL-1950/CSA-C22.2 No. 950-95: Safety of Information Technology Equipment

For technical assistance, refer to "[Appendix D - Product Support](#)" on page 56.

Corporate Office

14402 Franklin Avenue
Tustin, CA 92780-7013

Tel: 714.832.9922

Fax: 714.832.9924

For Technical Assistance:

800.638.0031

714.730.3222

